

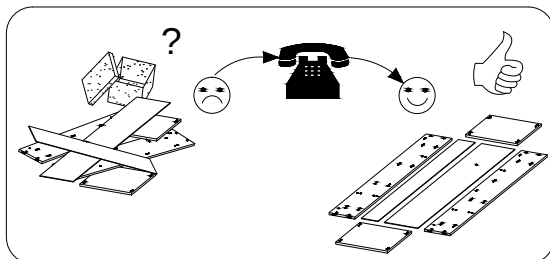
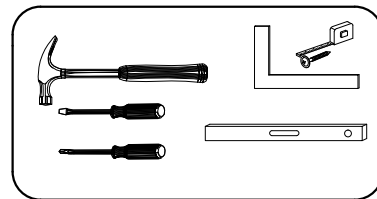
 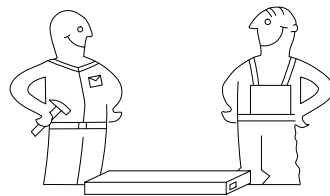


LIDO RTV

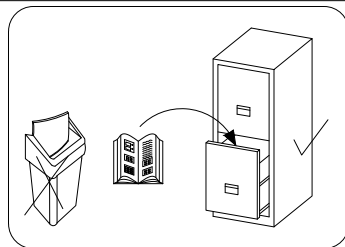

WSKAZÓWKA DOTYCZĄCA PIELĘGNACJI !PROSZE CZYSZCZYĆ TYLKO SUCHĄ LUB LEKKO WILGOTNĄ SZMATKĄ DO KURZENIA UŻYWAĆ ŻADNYCH ŚRODKÓW SZORSTKICH !



8.0x35 D	4.0x25 G	 X	 A	 B	3.5x16 H	 S1	 F	 I
32	4	28	28	28	16	15	2	8
 S	L-350 R	 U	 X1					
1	2	1	1					

No.	Stc.	L	W	T
1	1	600	200	16
2	1	600	200	16
3	1	400	400	16
4	1	400	400	16
5	1	324	380	16
6	2	324	380	16
7	1	572	380	16
8	1	1348	60	3
9	1	1380	400	16
10	2	1362	347	3
11	2	360	90	16
12	2	360	90	16
13	2	514	72	16
14	2	529	367	3
15	1	768	380	16

