 
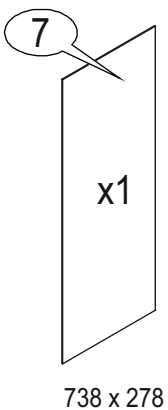 
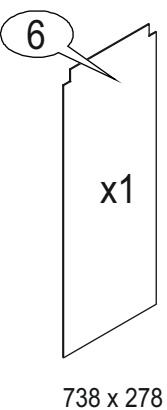 
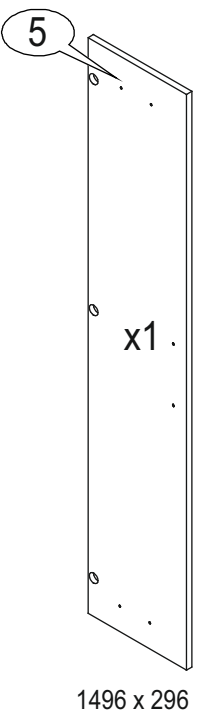 
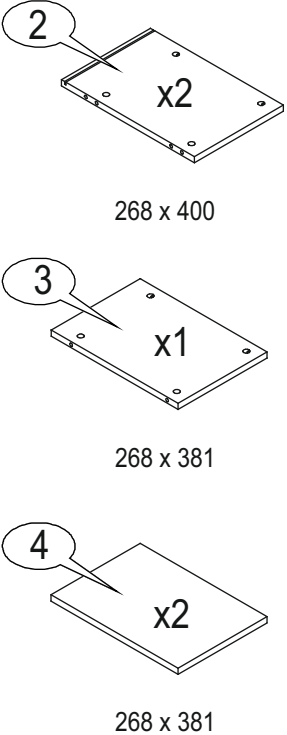 
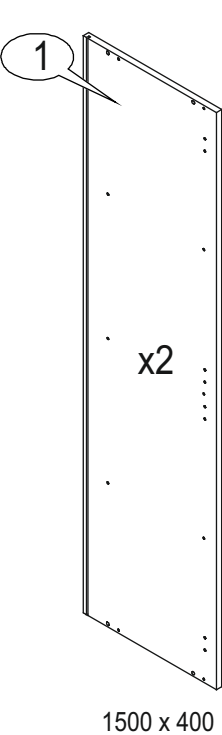 
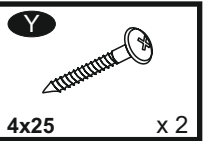 
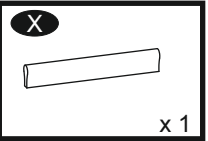 
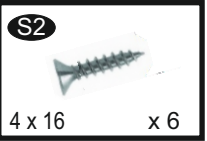 
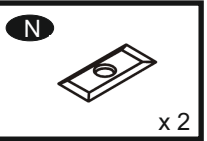 
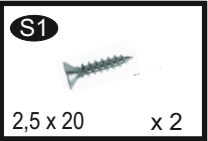 
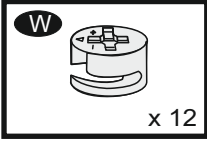 
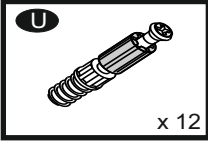 
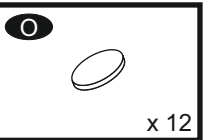 
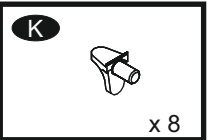 
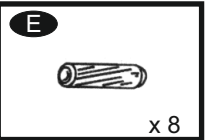 
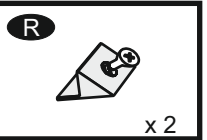 
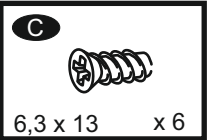 
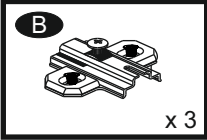 
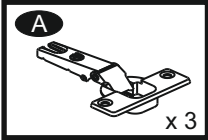 
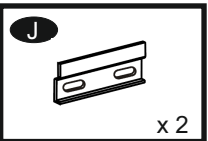 
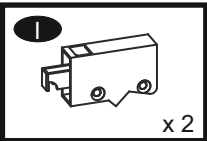 
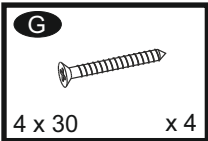 
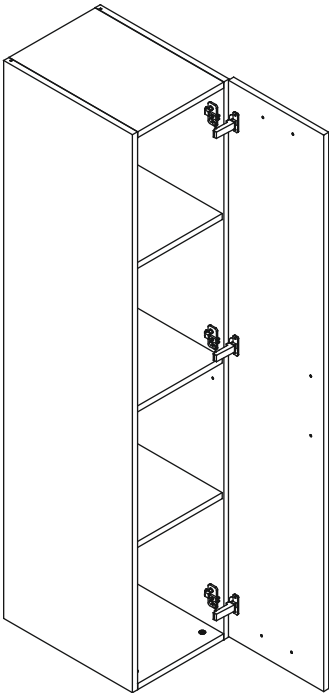 


Montana RTV SŁ 150

v.2

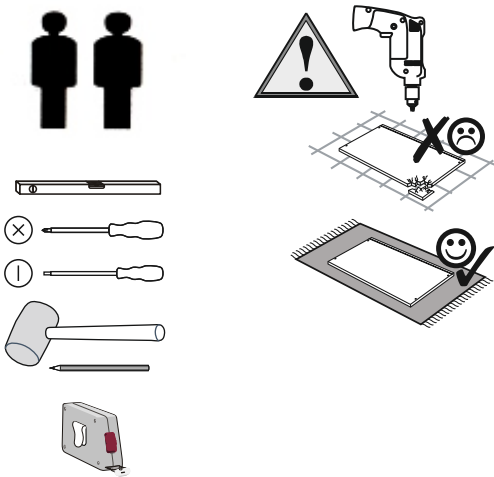

1

Warning symbol: exclamation mark in a triangle.

Assembly steps:

- Pre-drill holes (5) in the base plate (1) using a drill bit (Ø 5).
- Attach the side panels (2) to the base plate (1) using screws (E) and brackets (W).
- Attach the back panel (3) to the side panels (2) using screws (U) and brackets (K).

Labels and components:

- 1: Base plate
- 2: Side panel
- 3: Back panel
- 5: Pre-drilled hole
- E: Screw
- W: Bracket
- U: Screw
- K: Bracket
- S2: Screw
- Ø 5: Drill bit diameter
- 90°: Angle