

MIRJAN











24





KOJAN

ASSEMBLING INSTRUCTIONS









MONTAGEANLEITUNG
INSTRUKCJA MONTAŻU

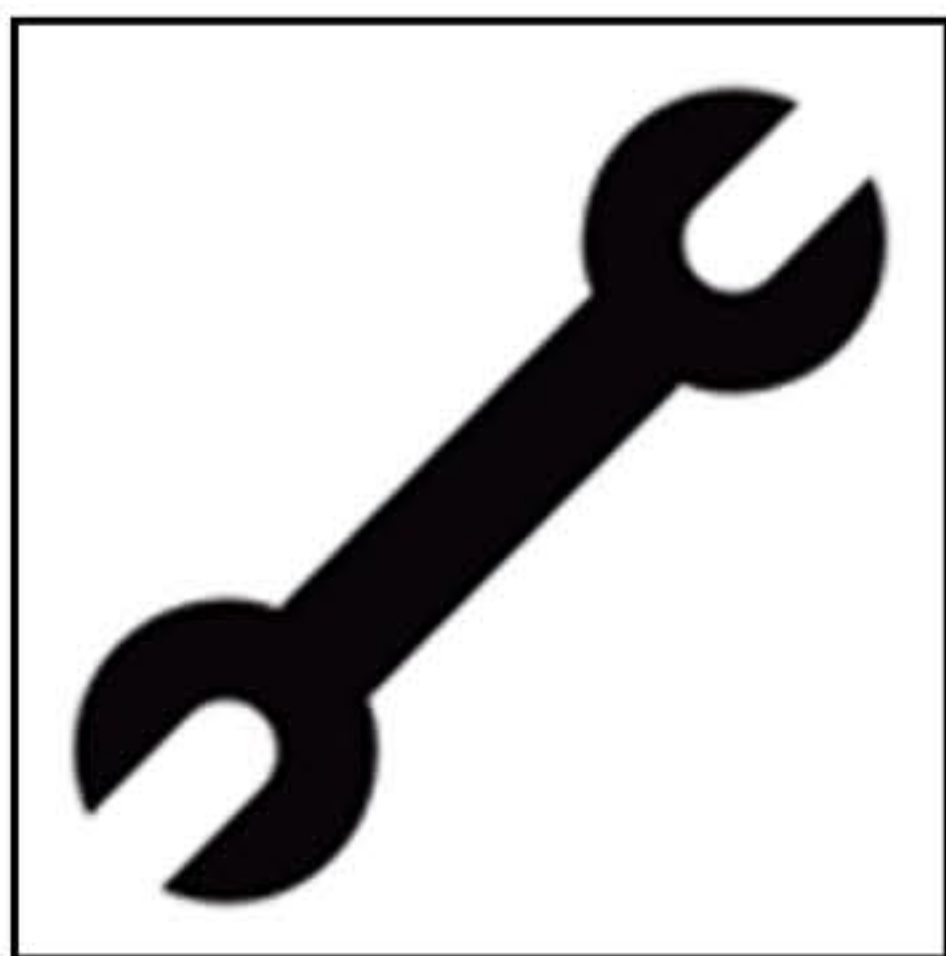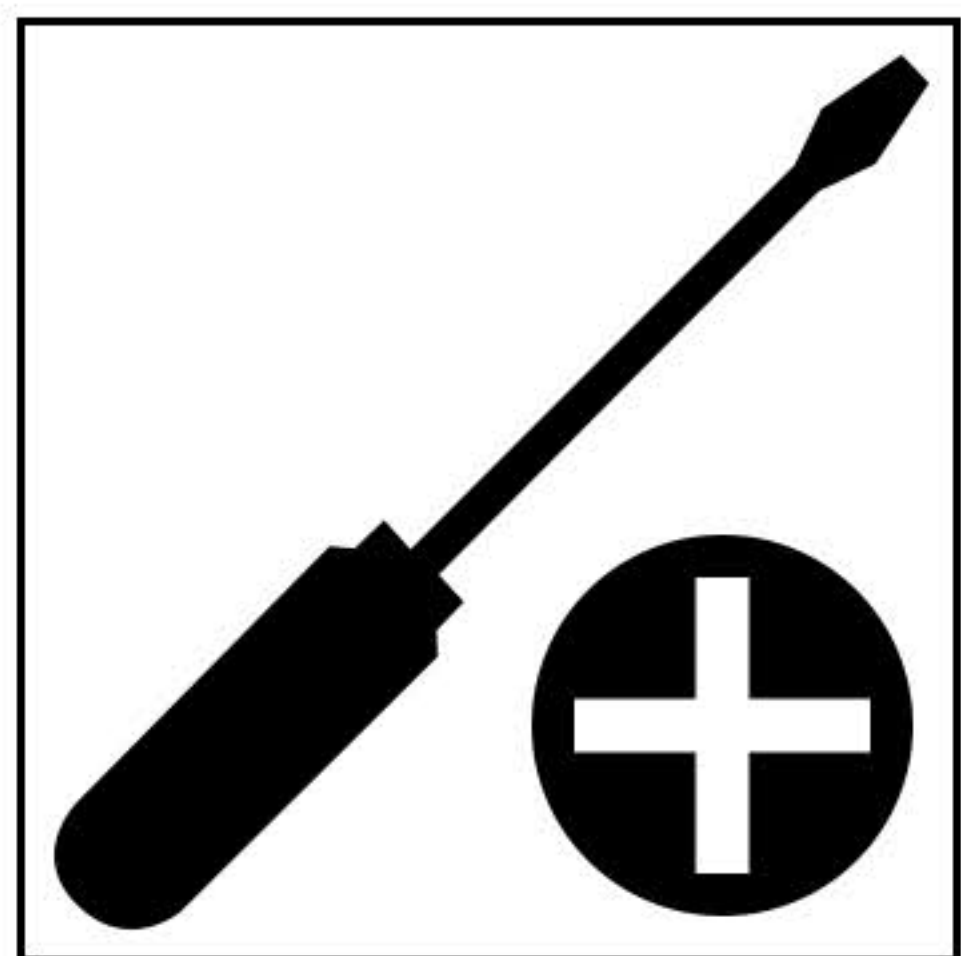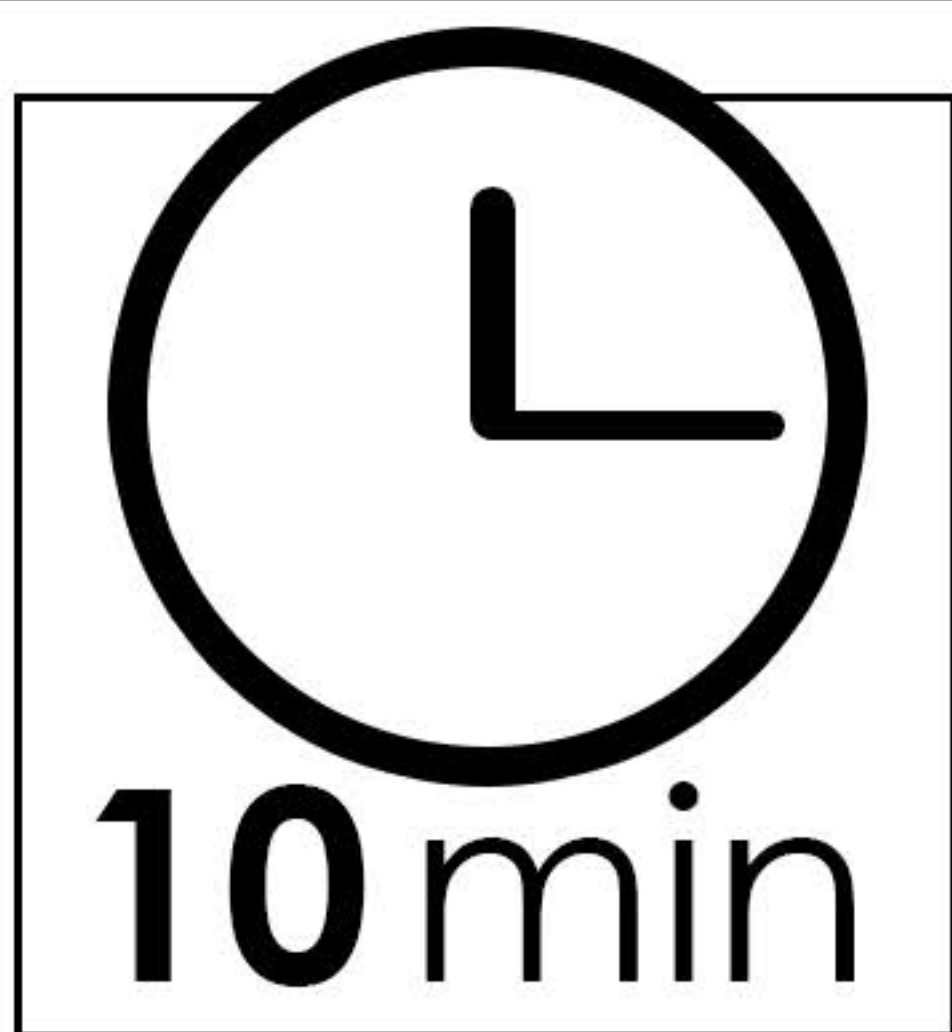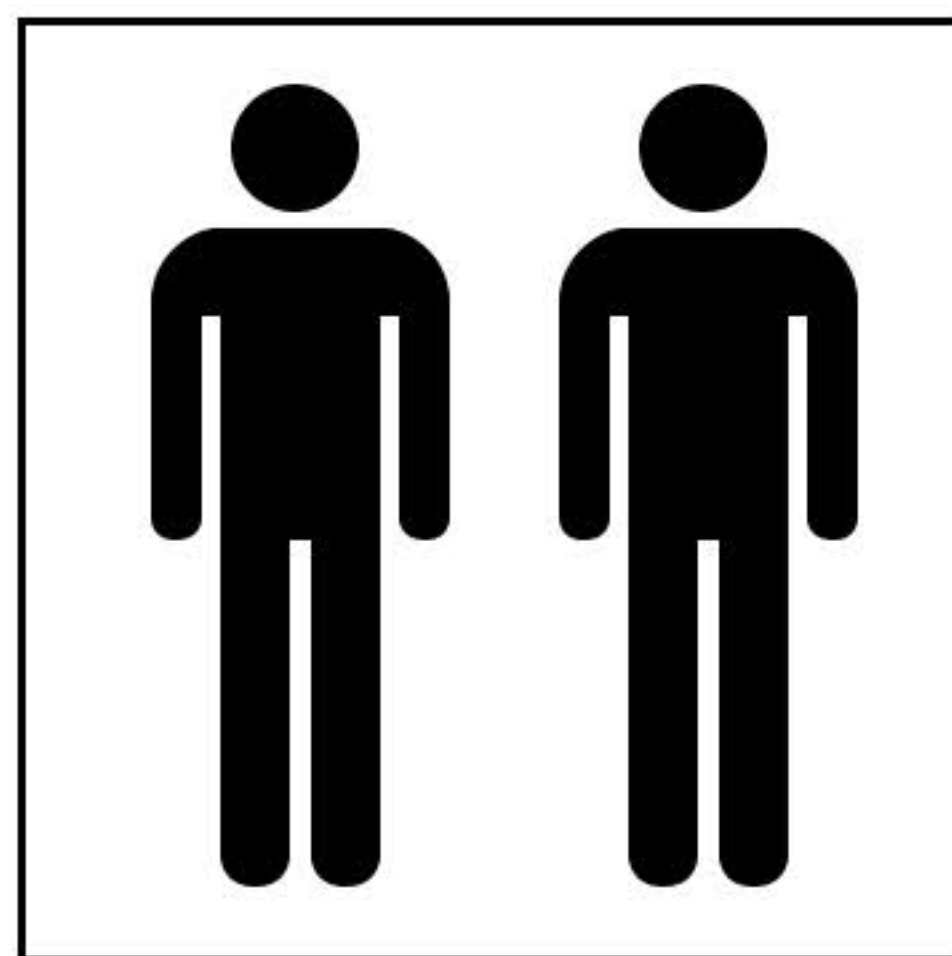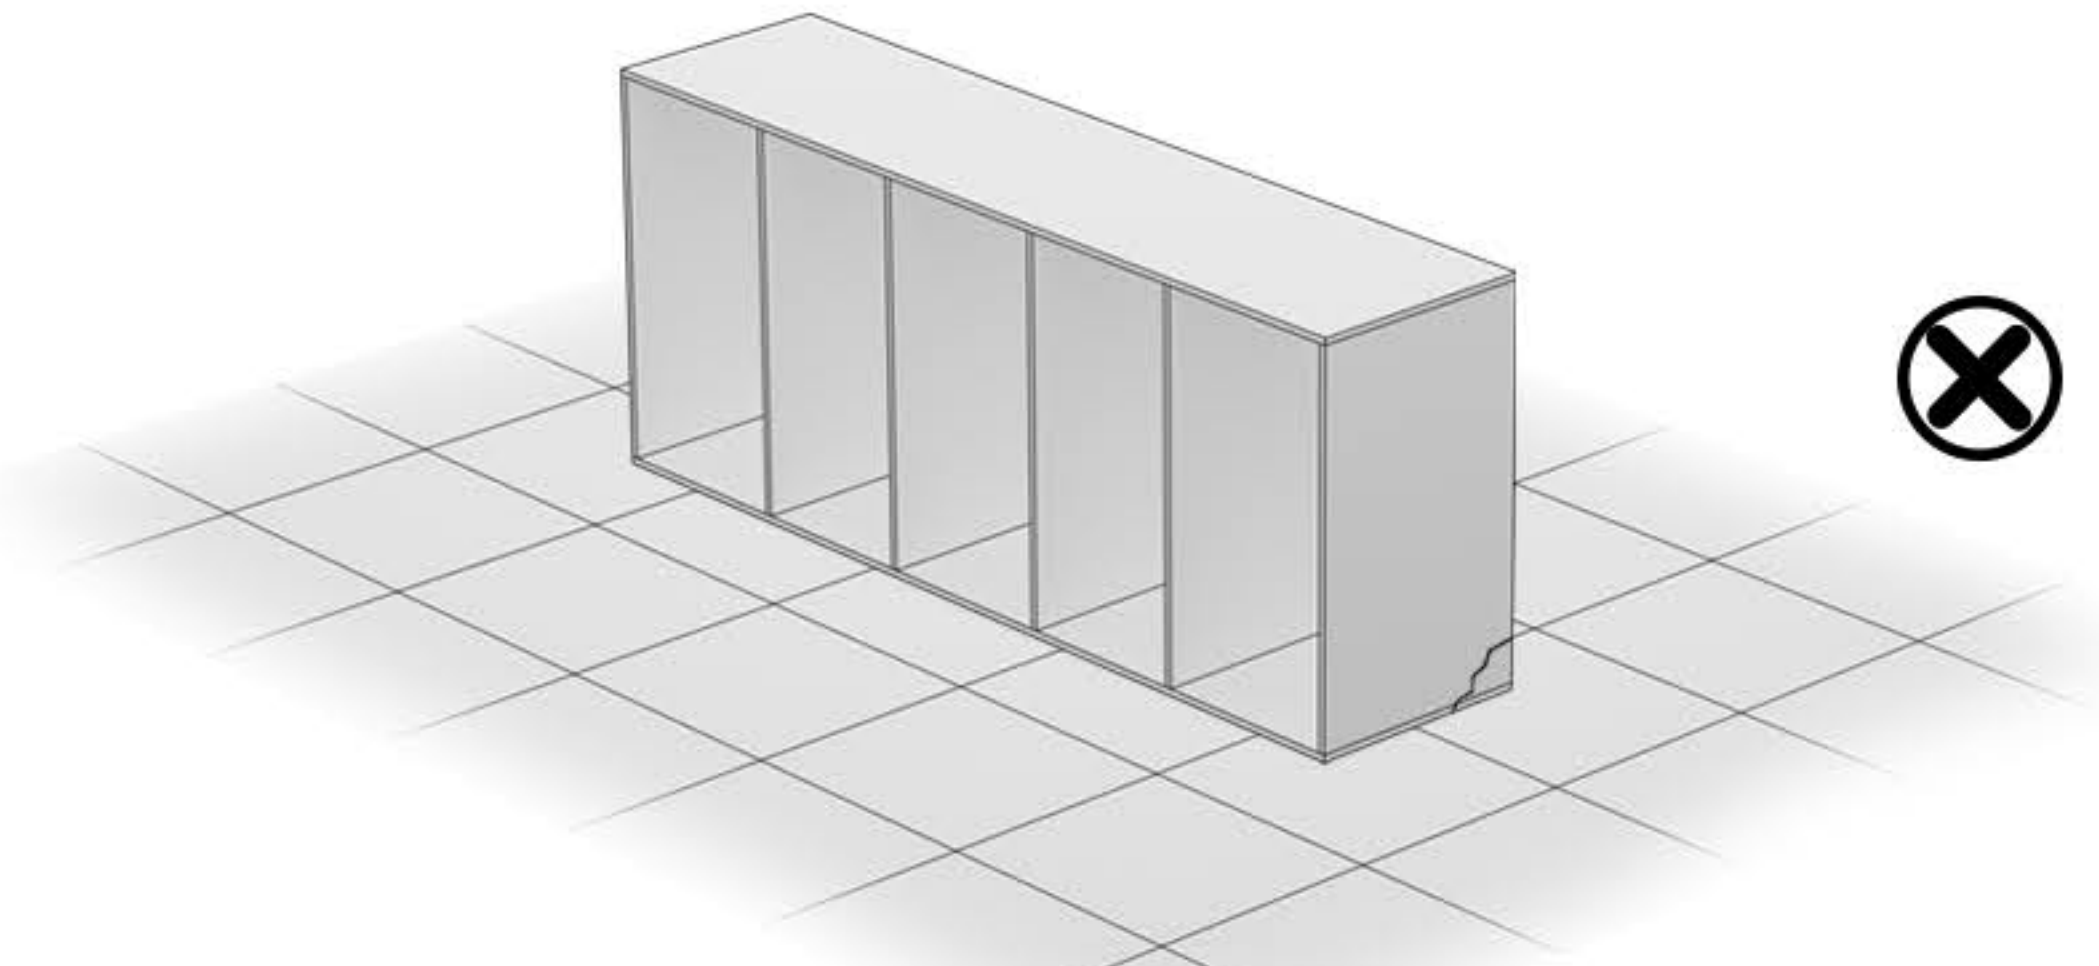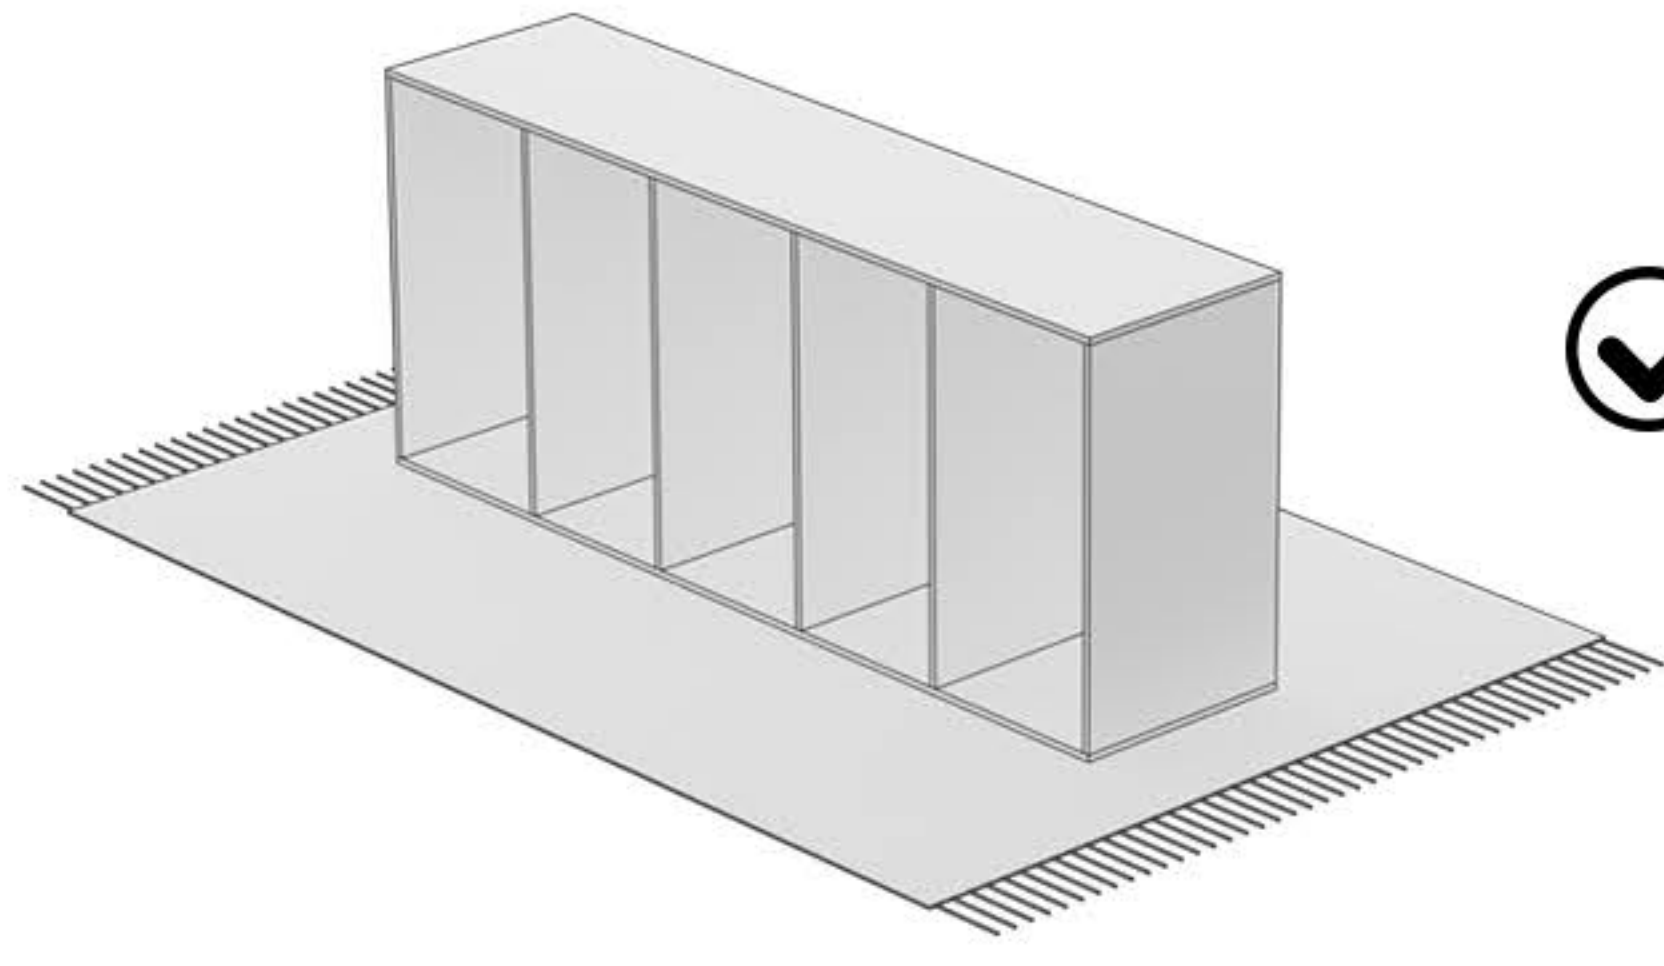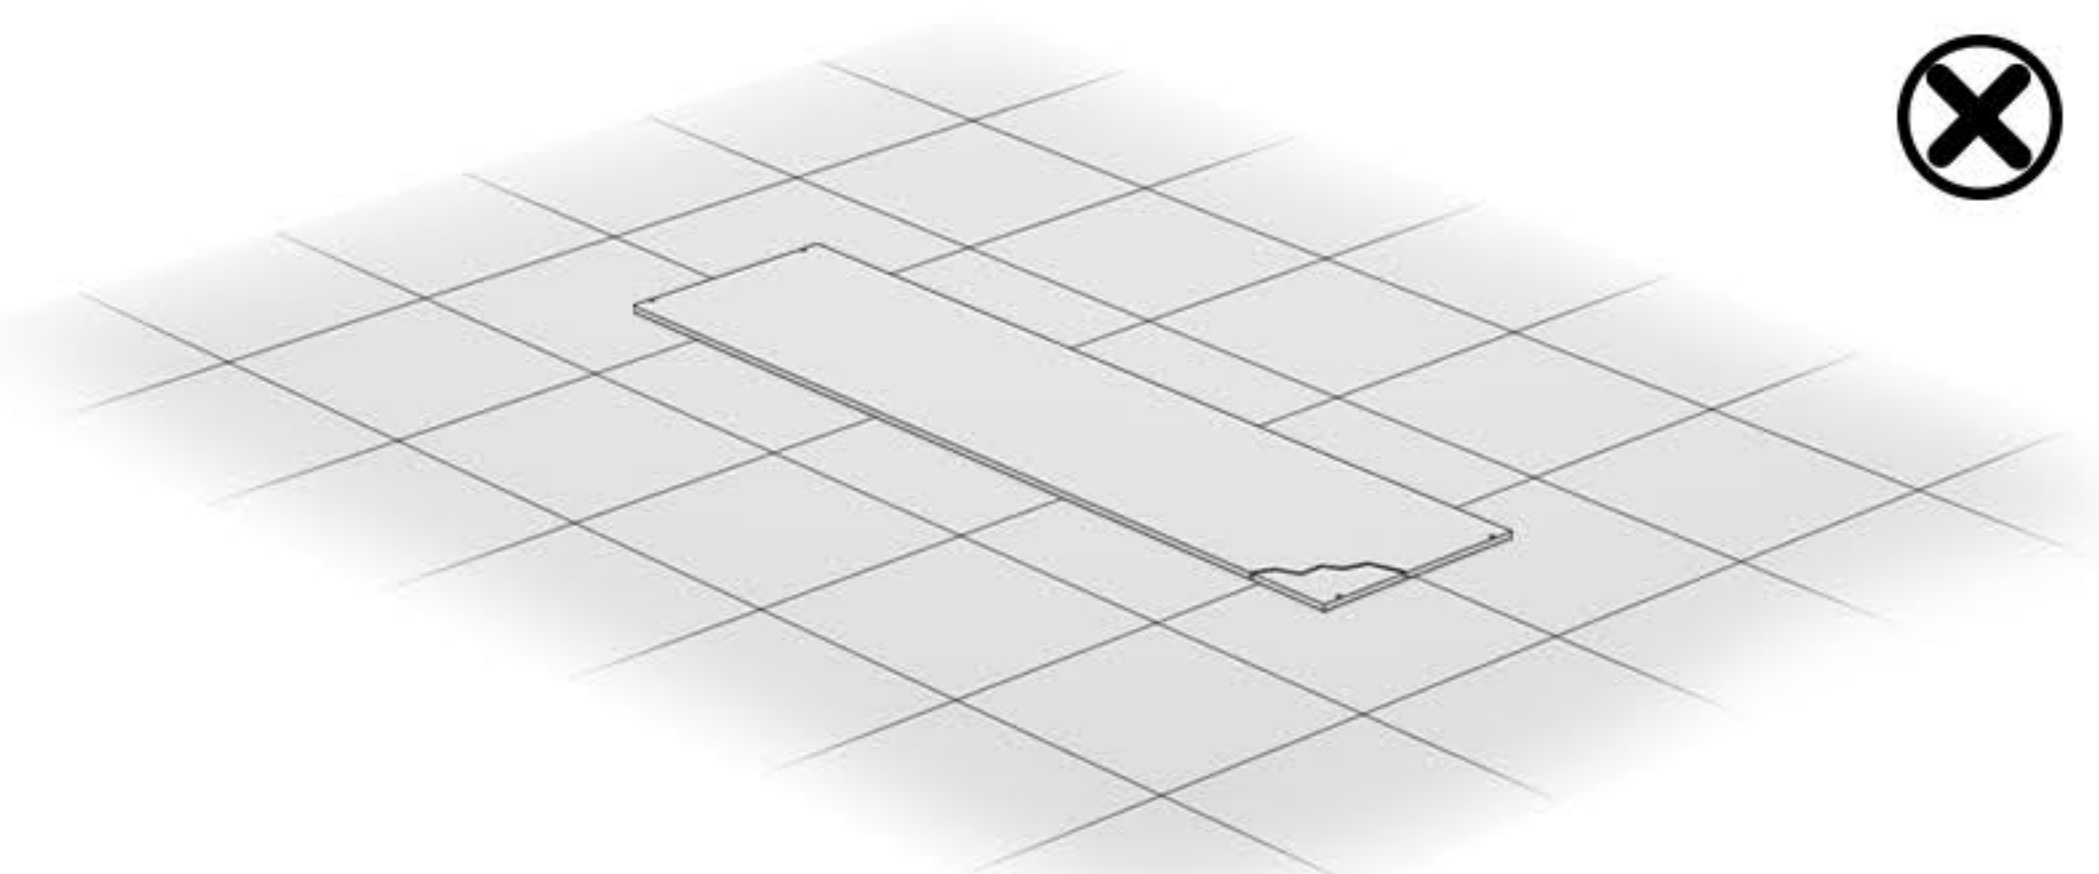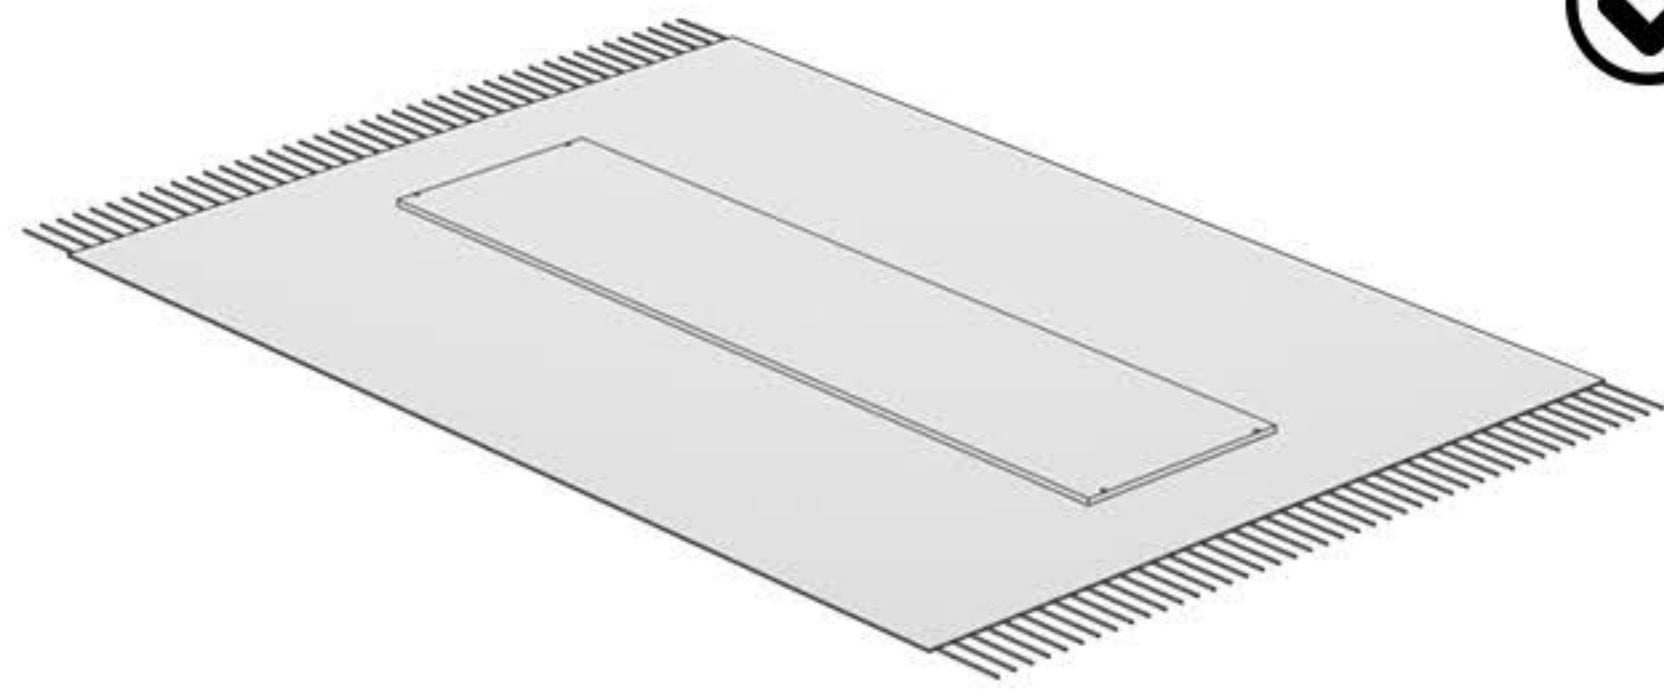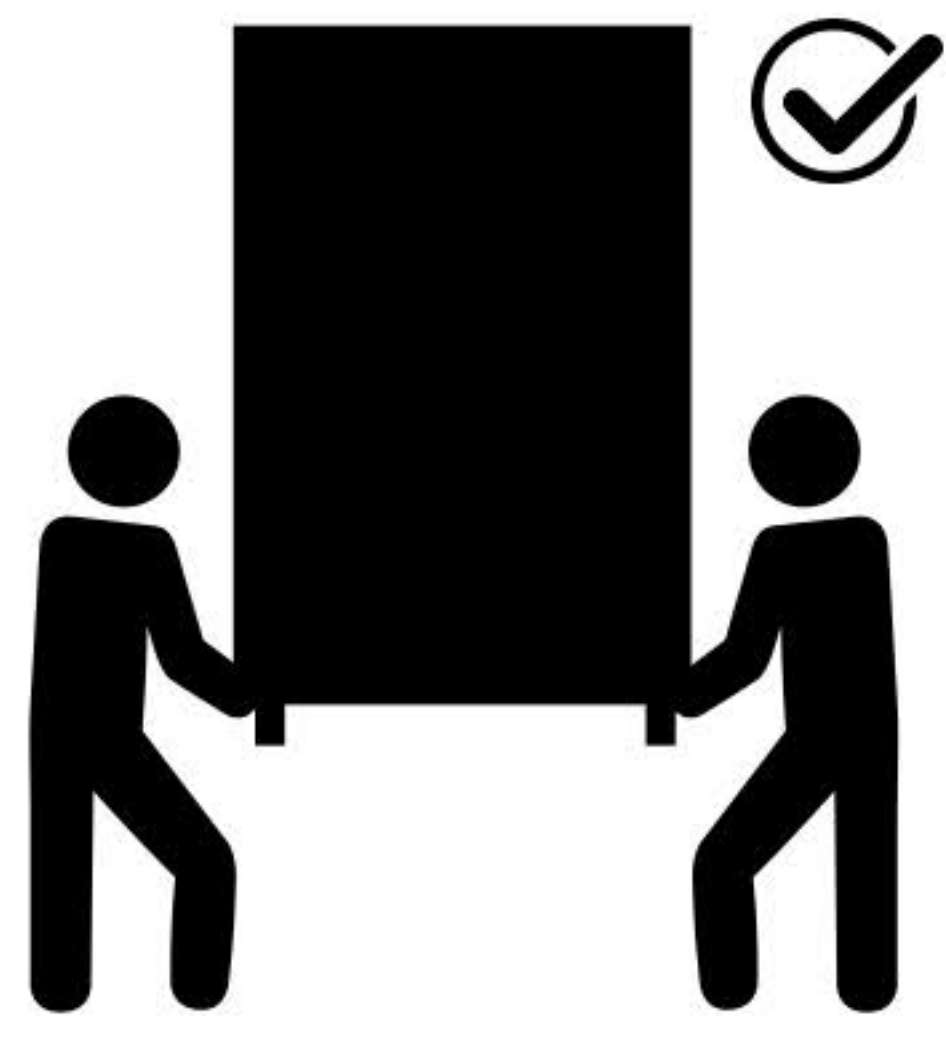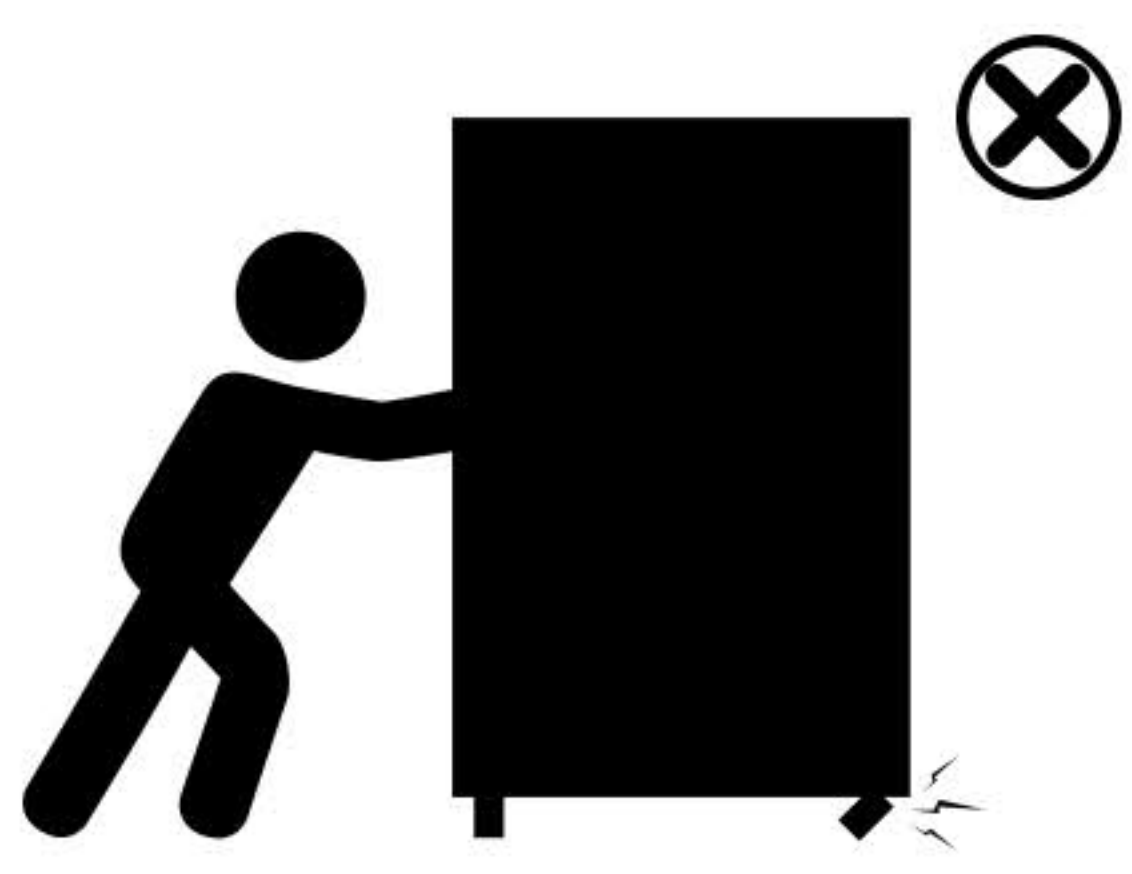





A		x4
B		x6
C	 M8 50mm	x4
D	 M6	x8
E		x6
F		x4
G	 M8 40mm	x2

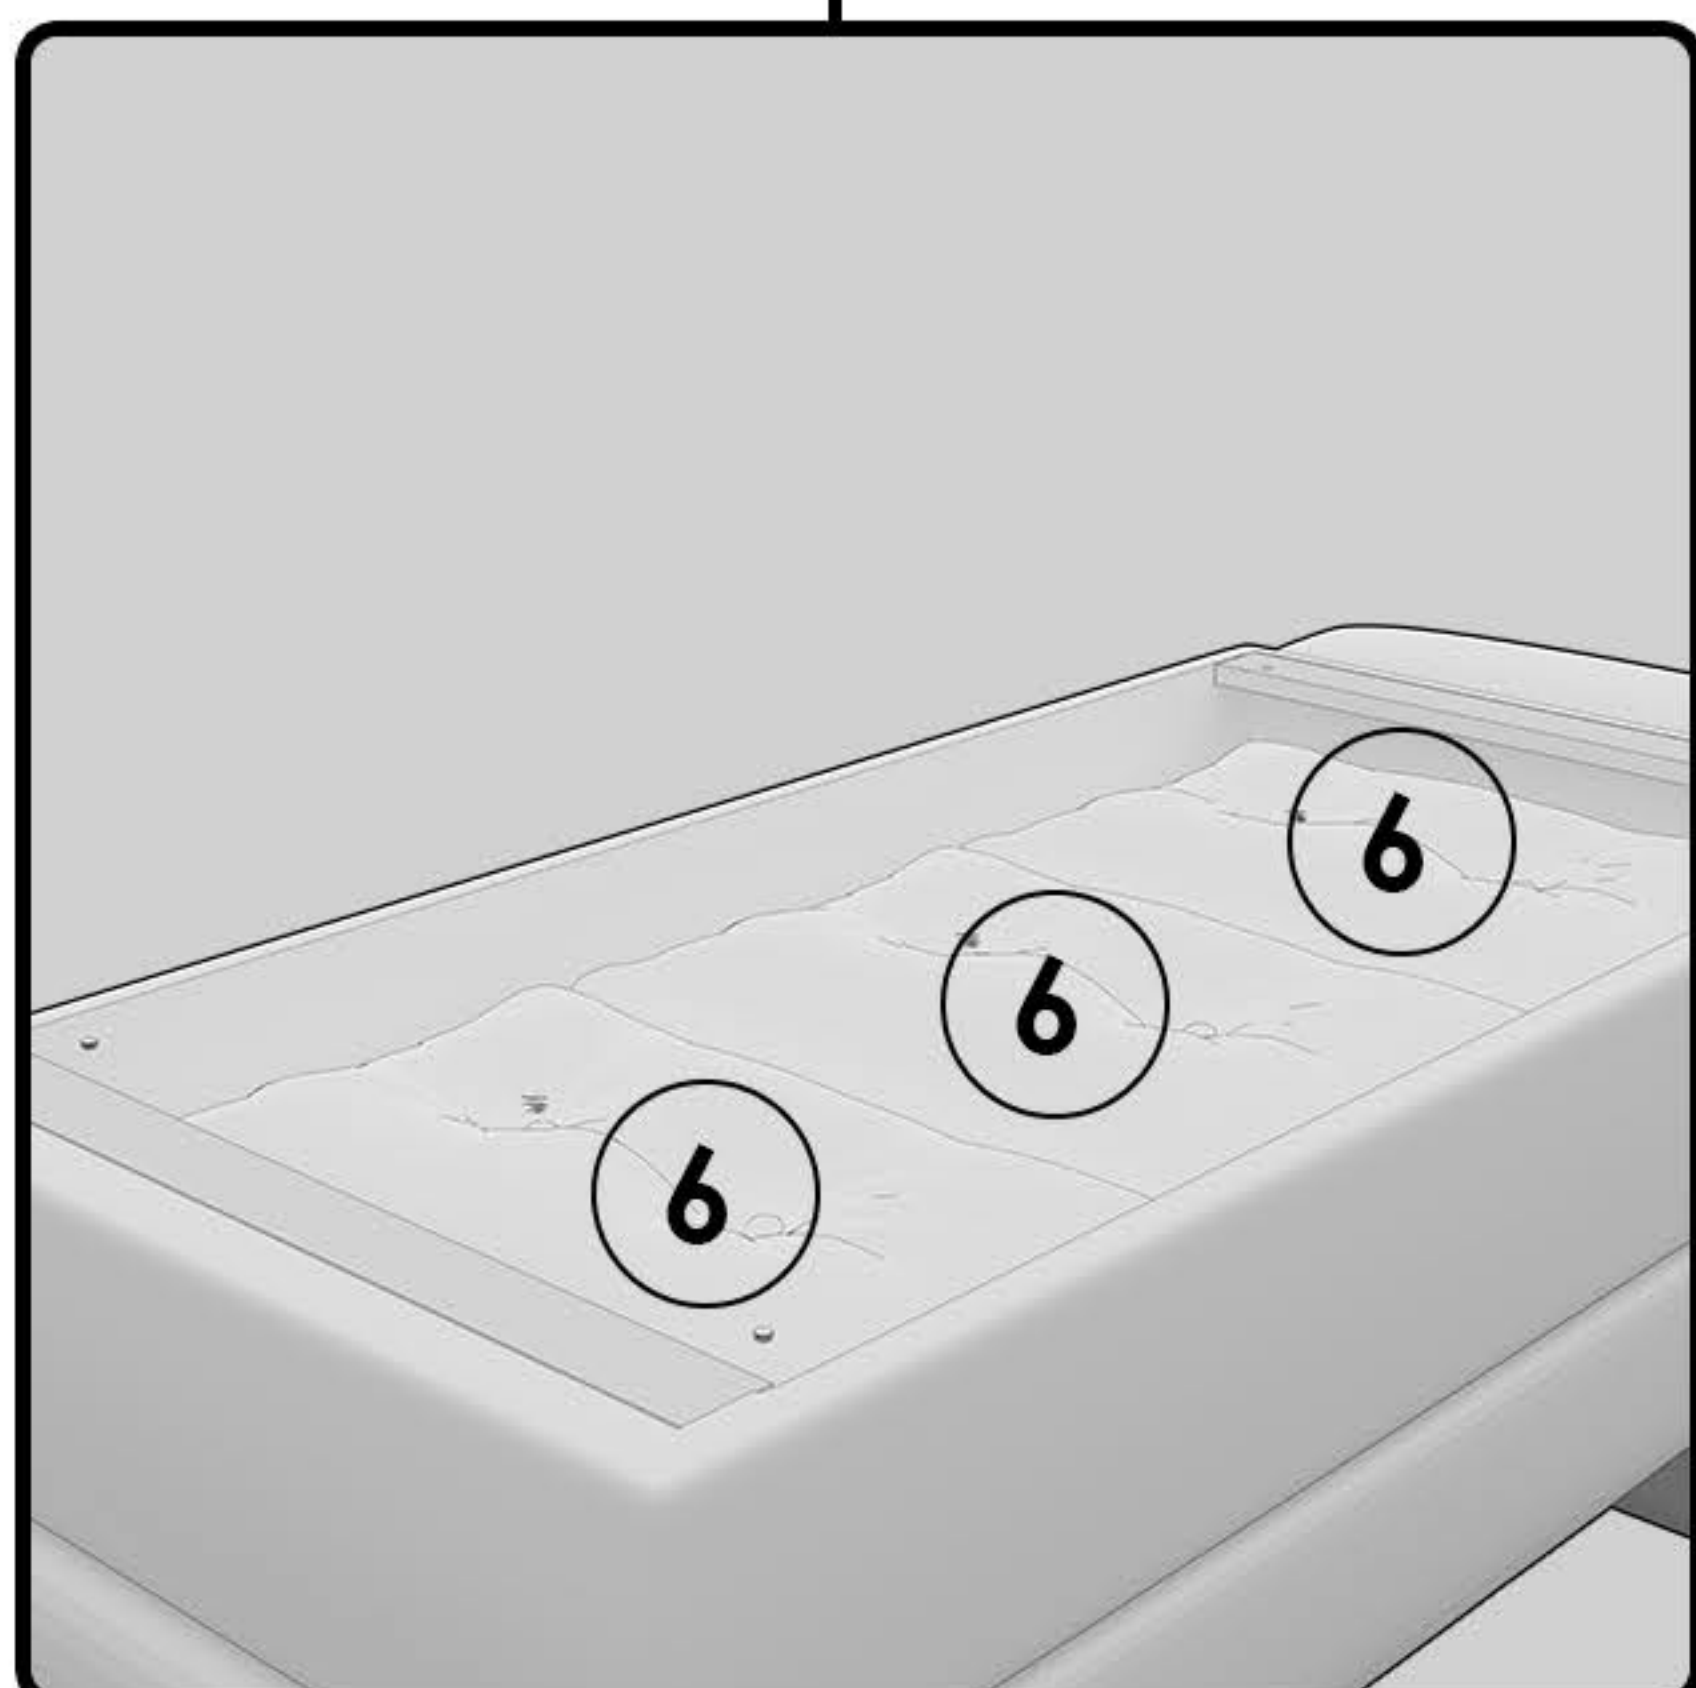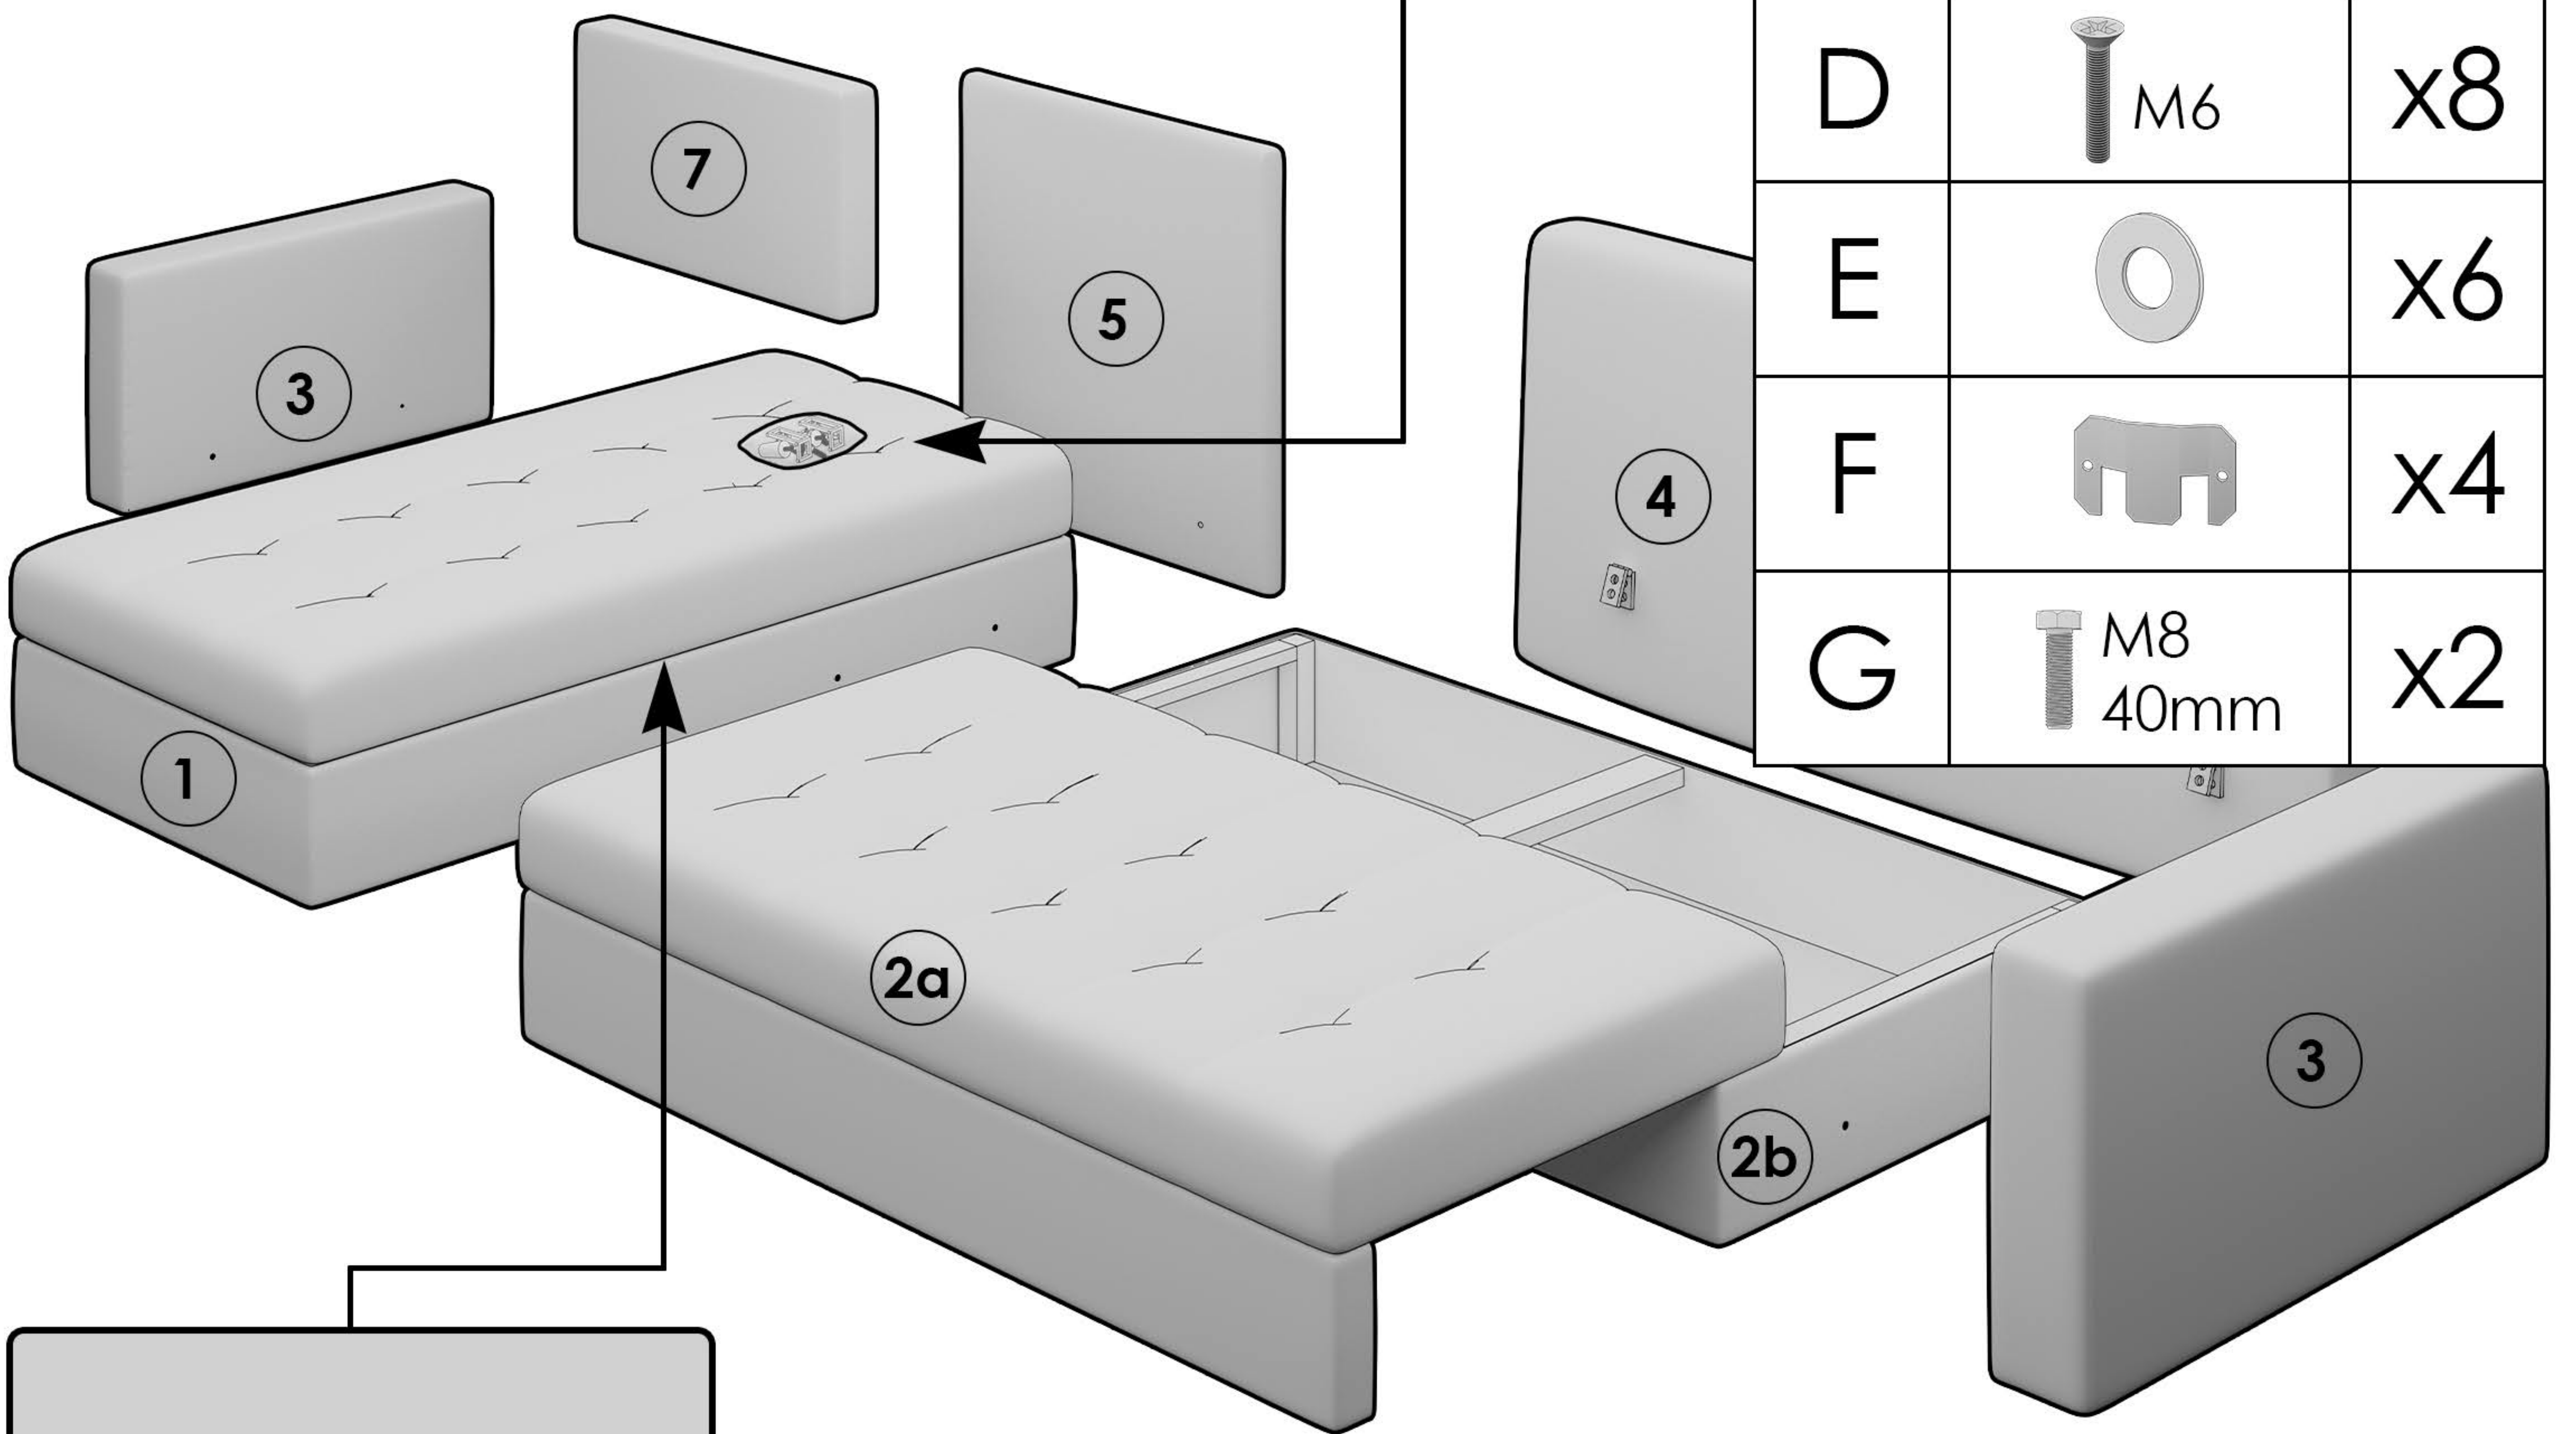



A		x4
B		x6
C	 M8 50mm	x4
D	 M6	x8
E		x6
F		x4
G	 M8 40mm	x2

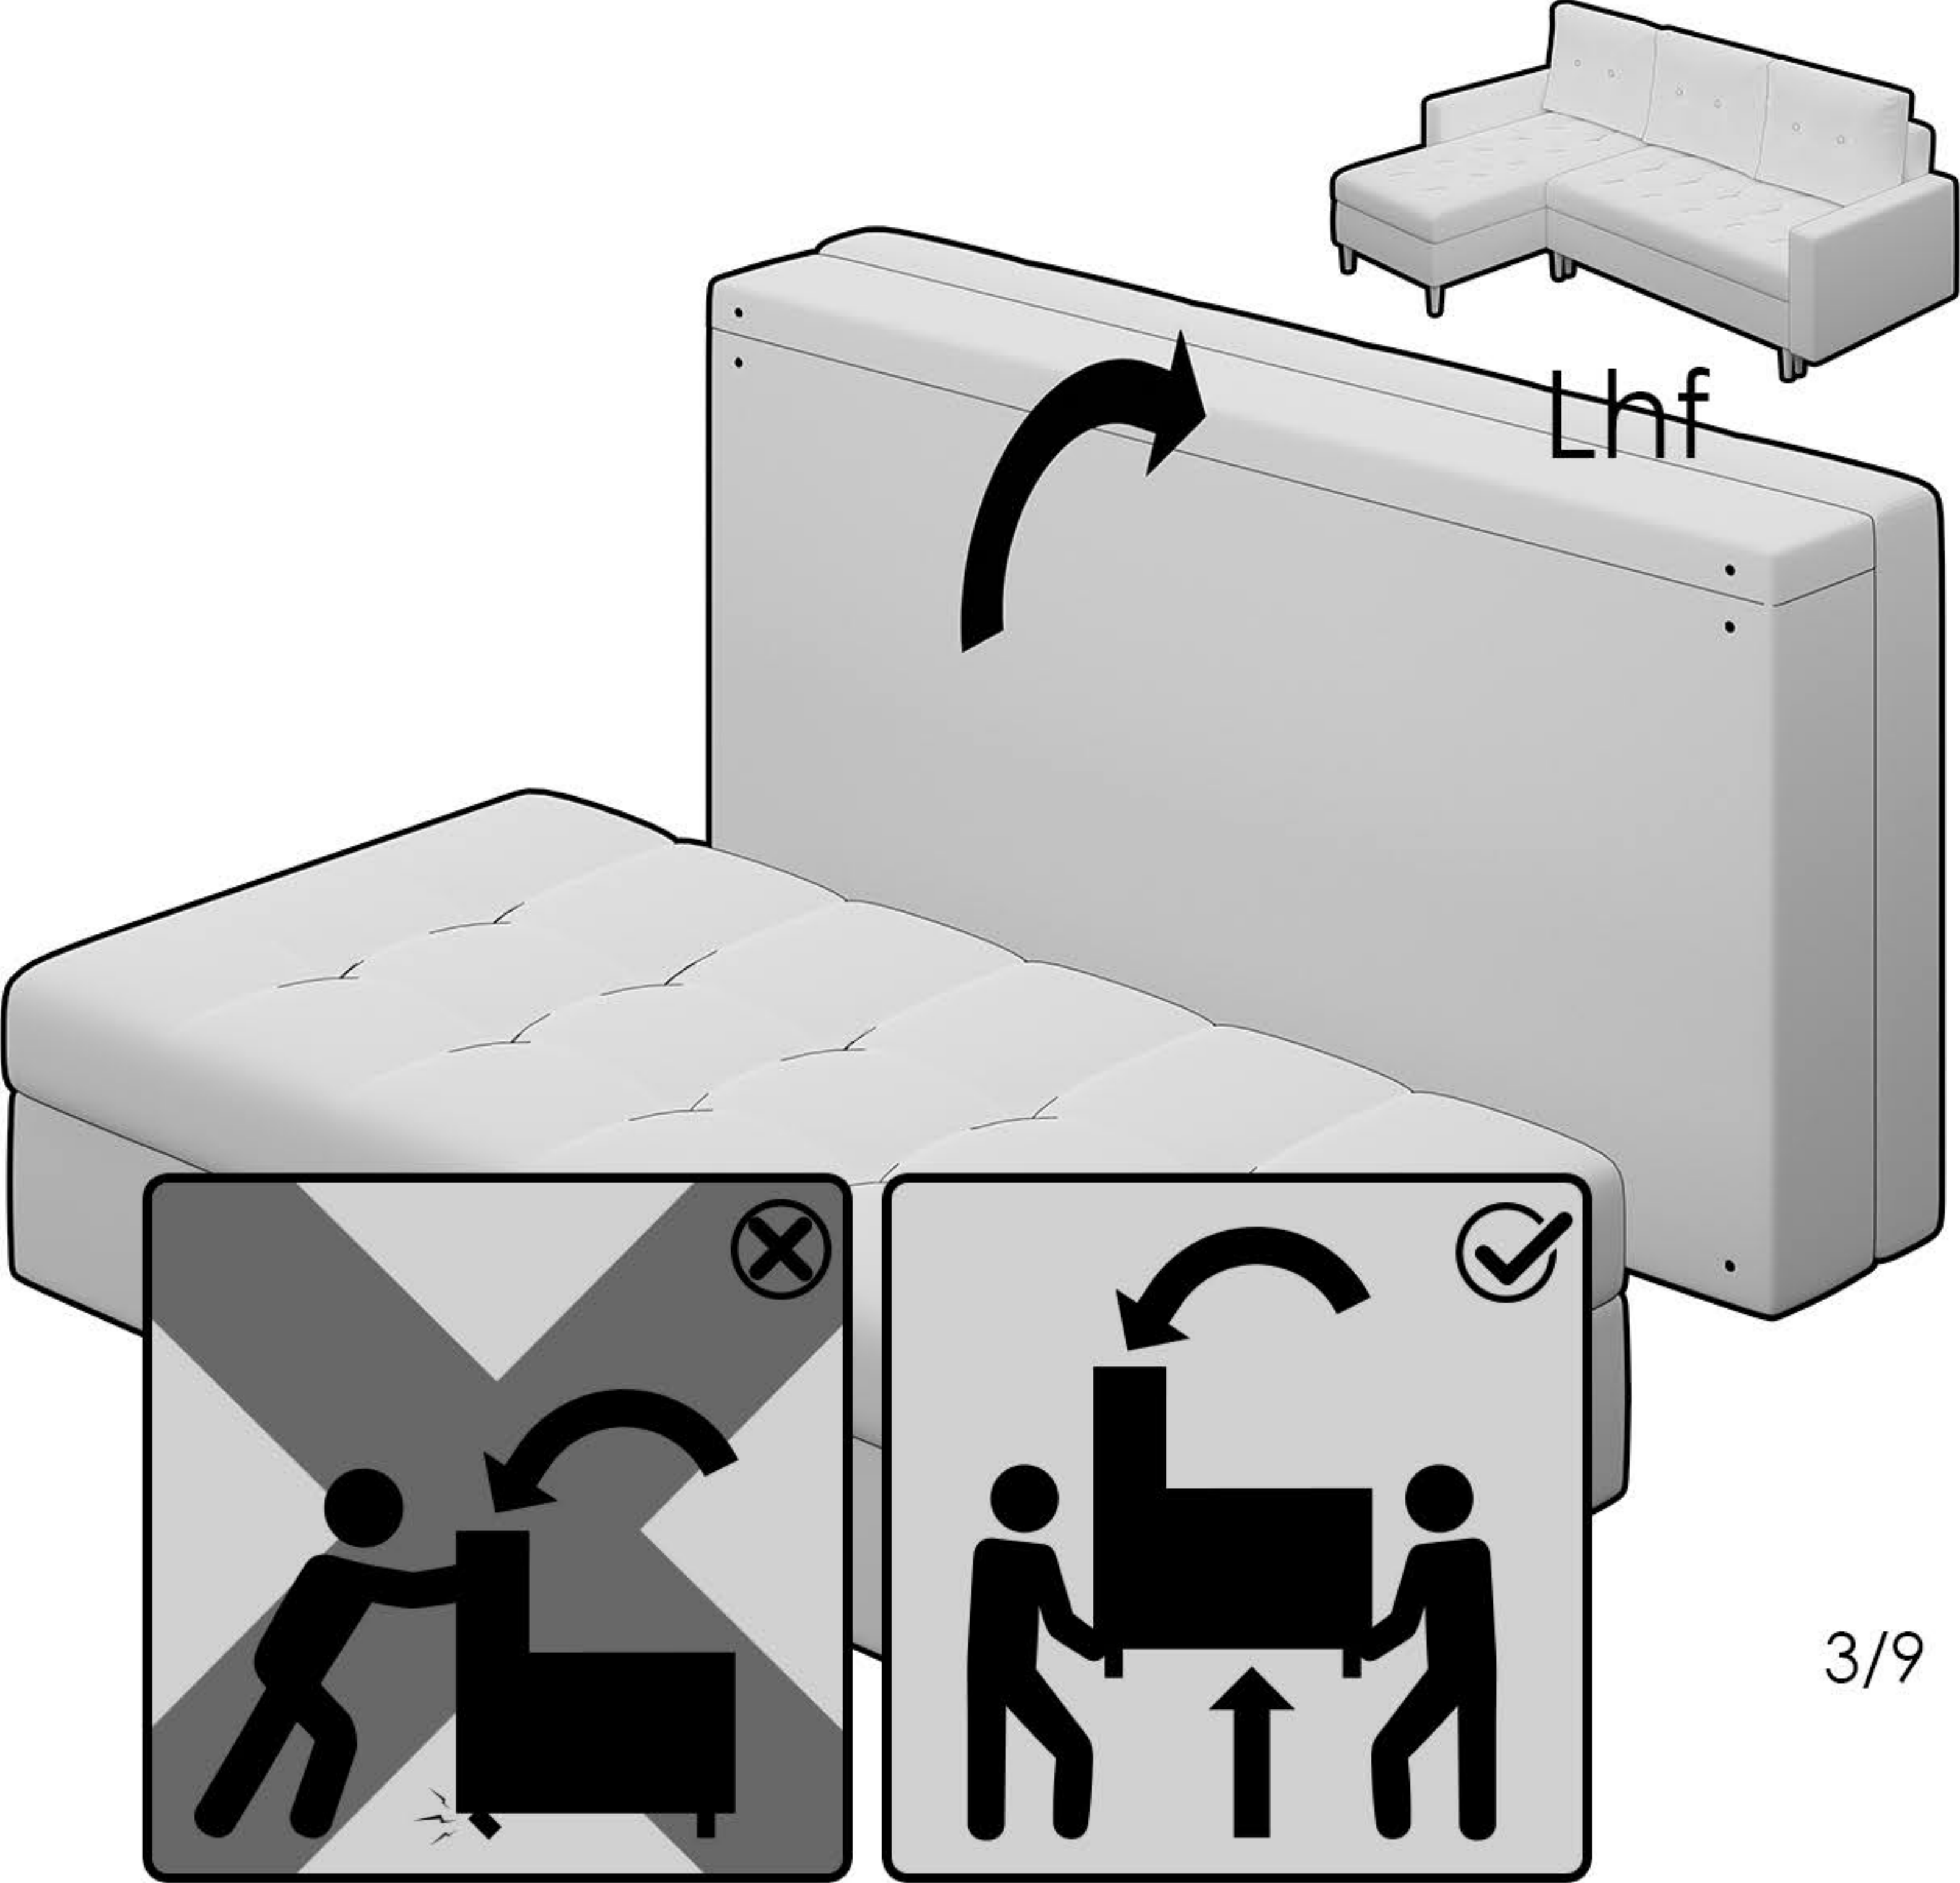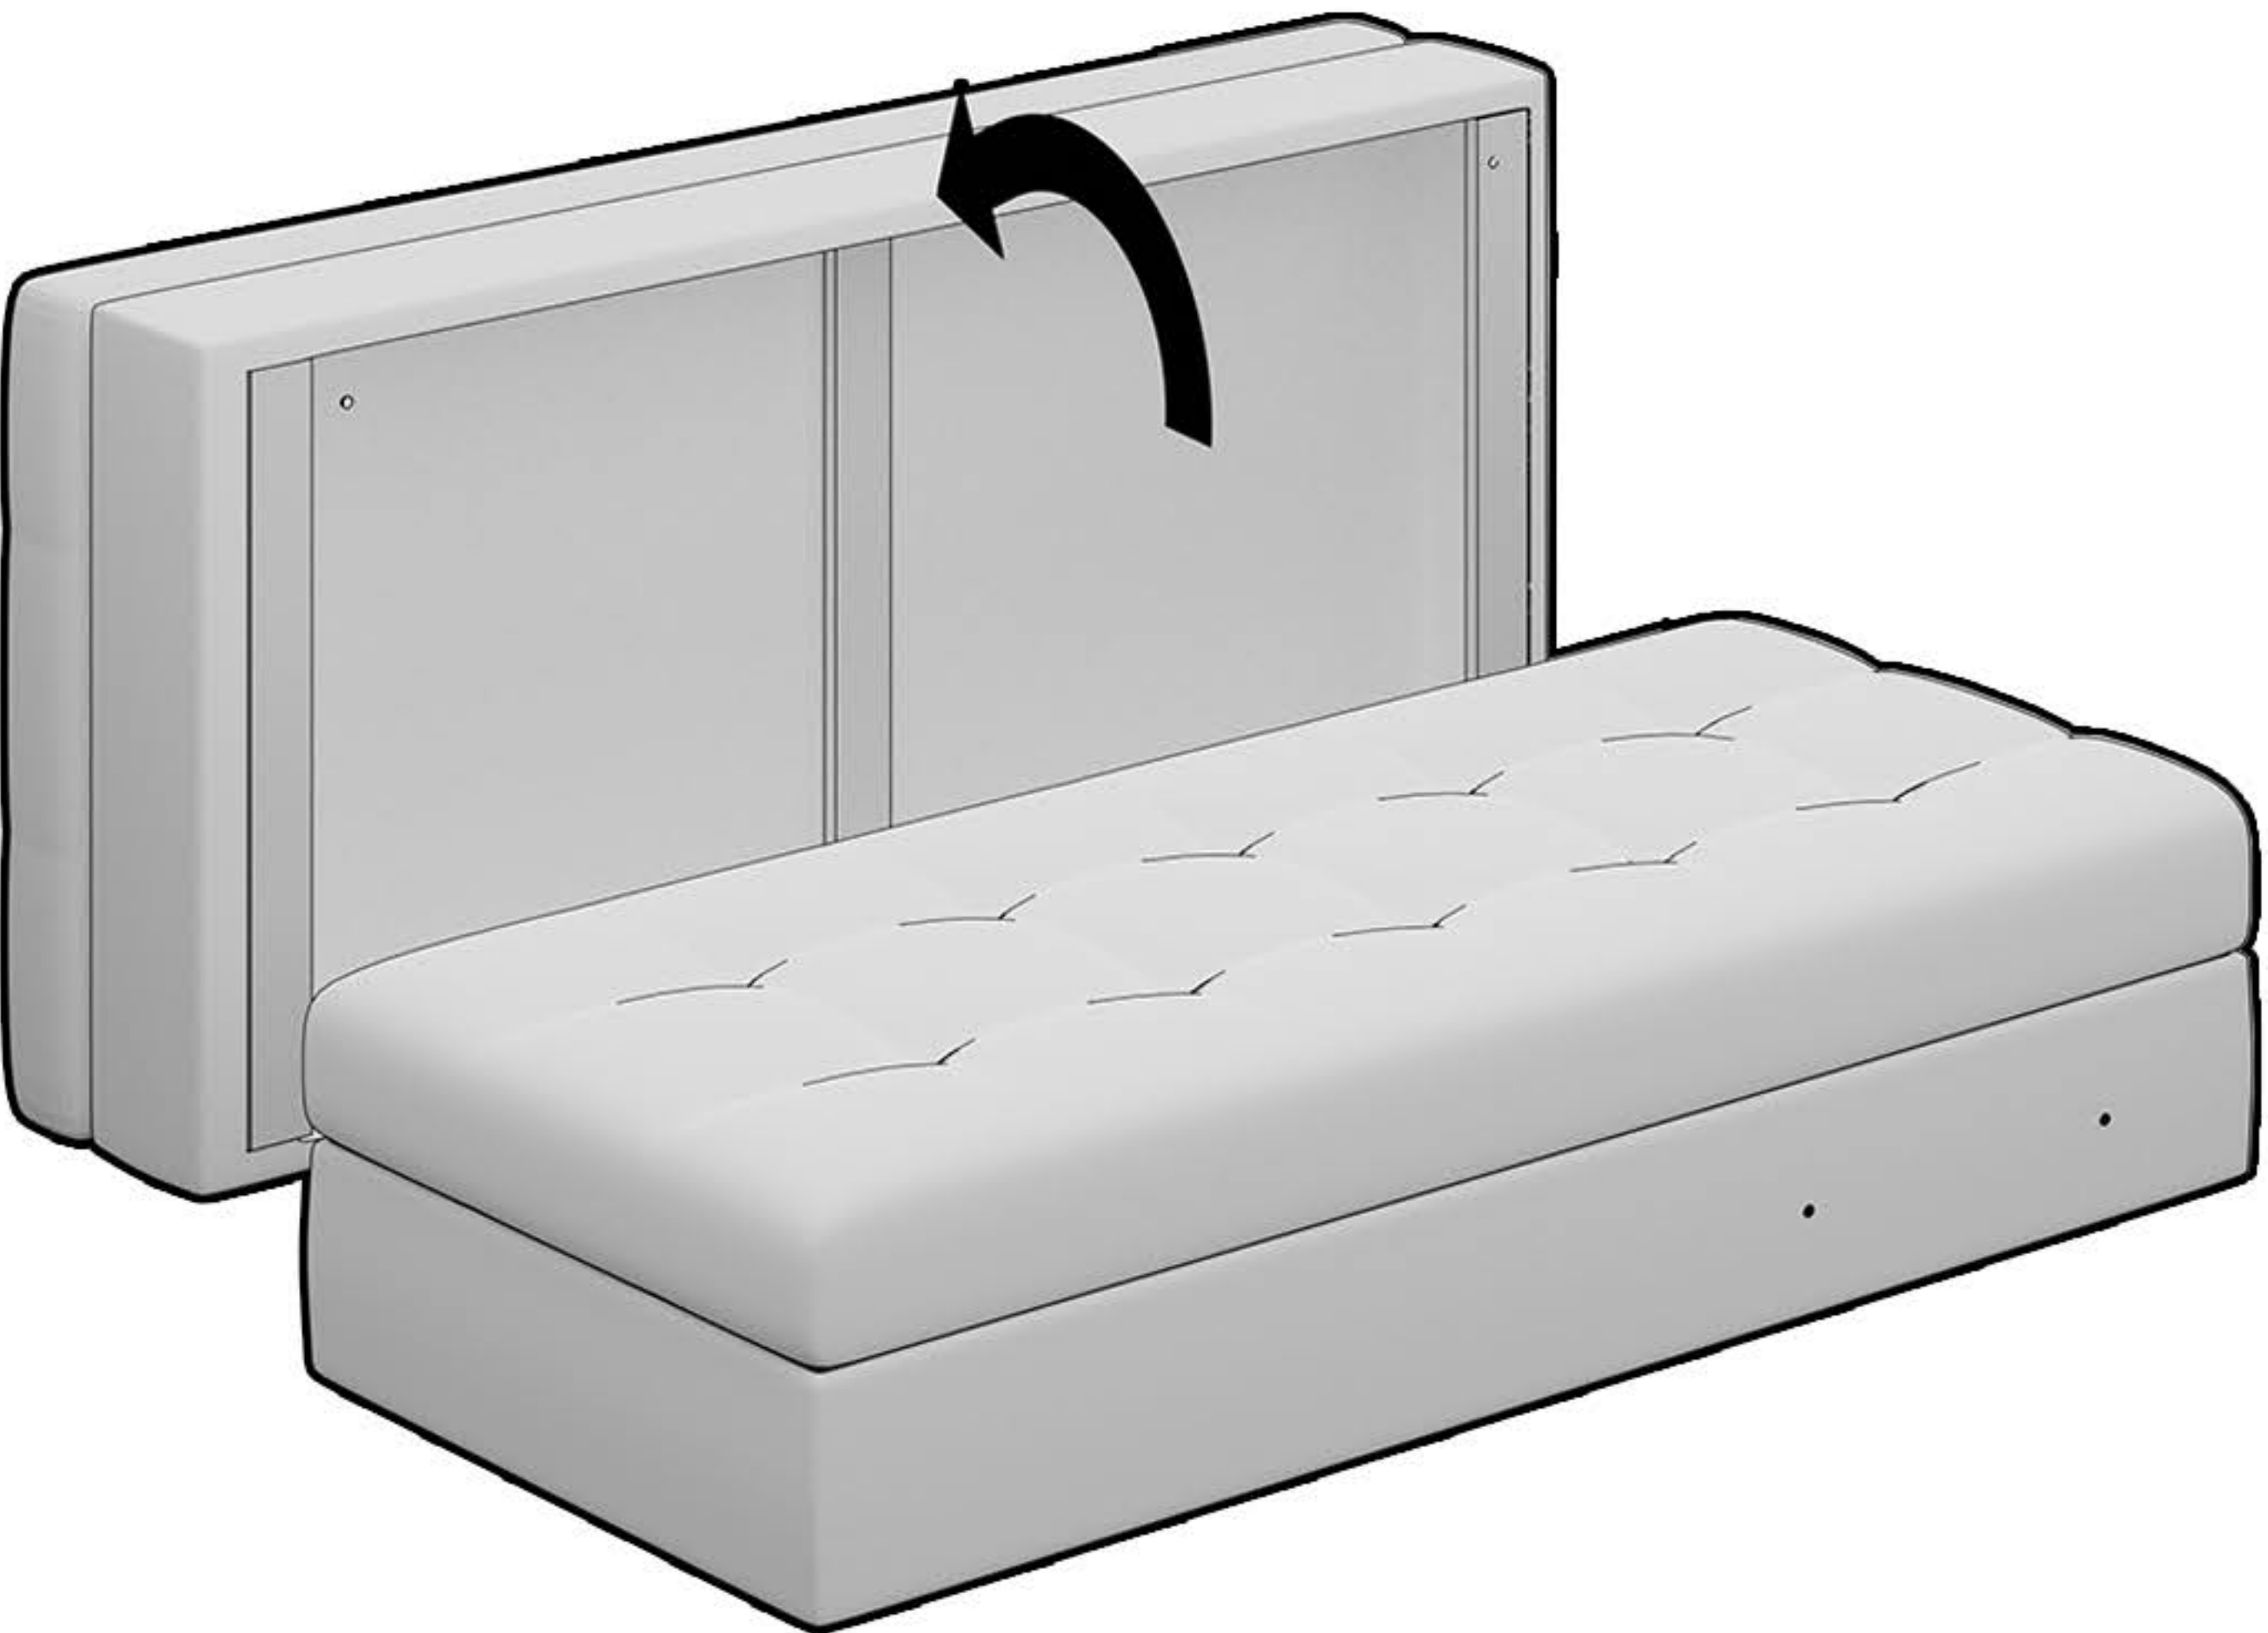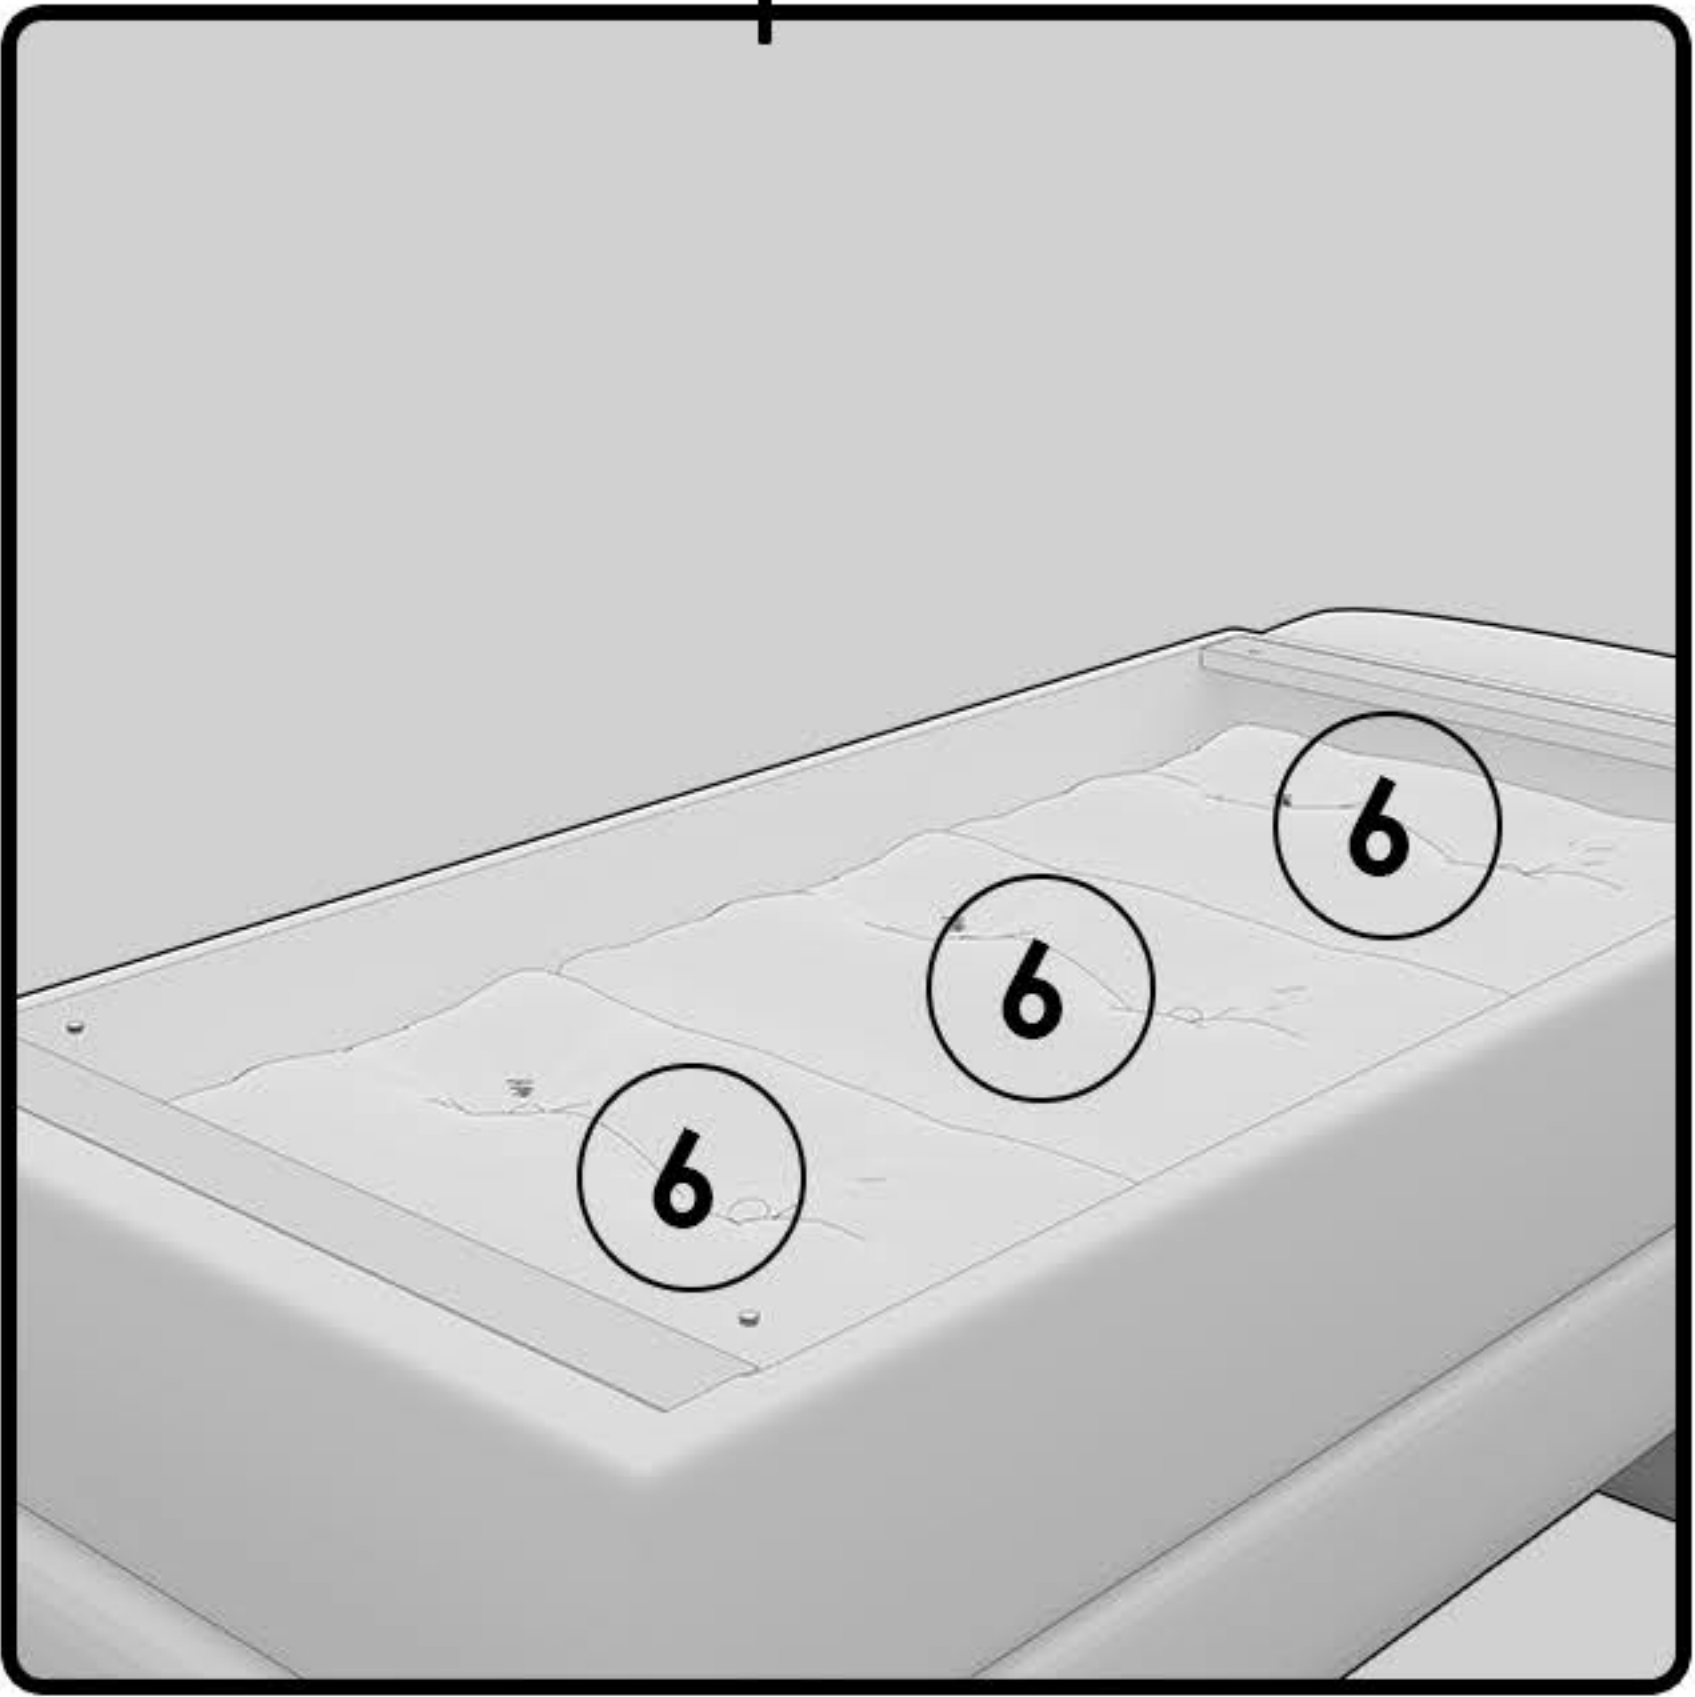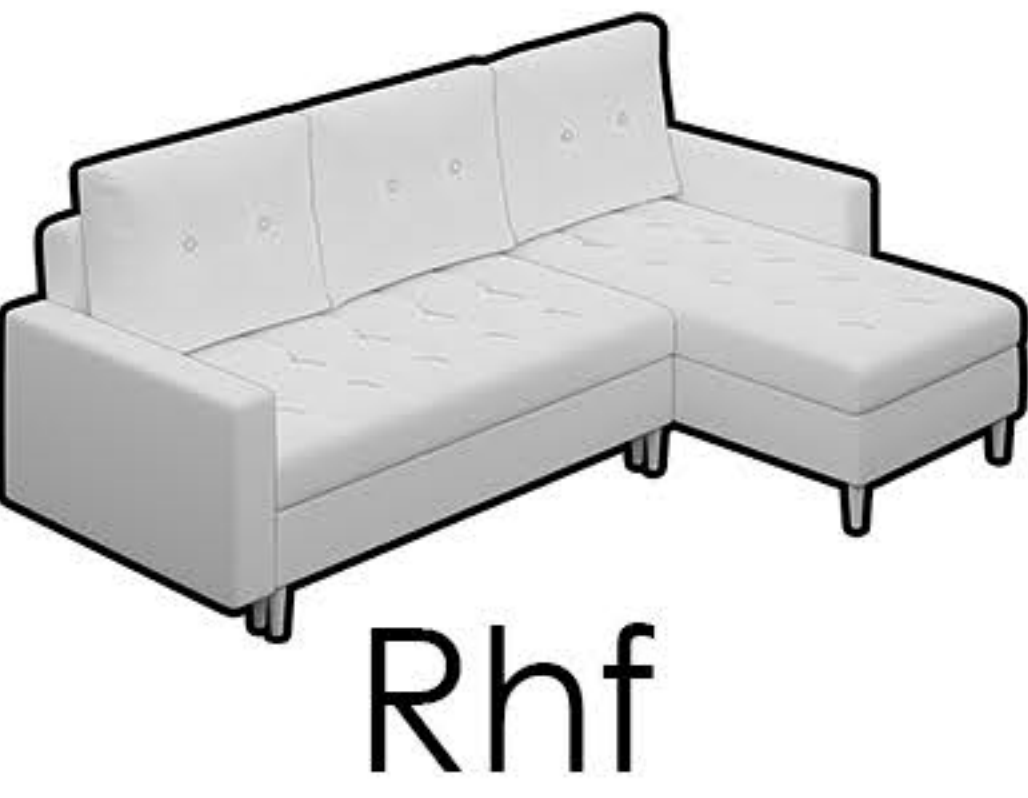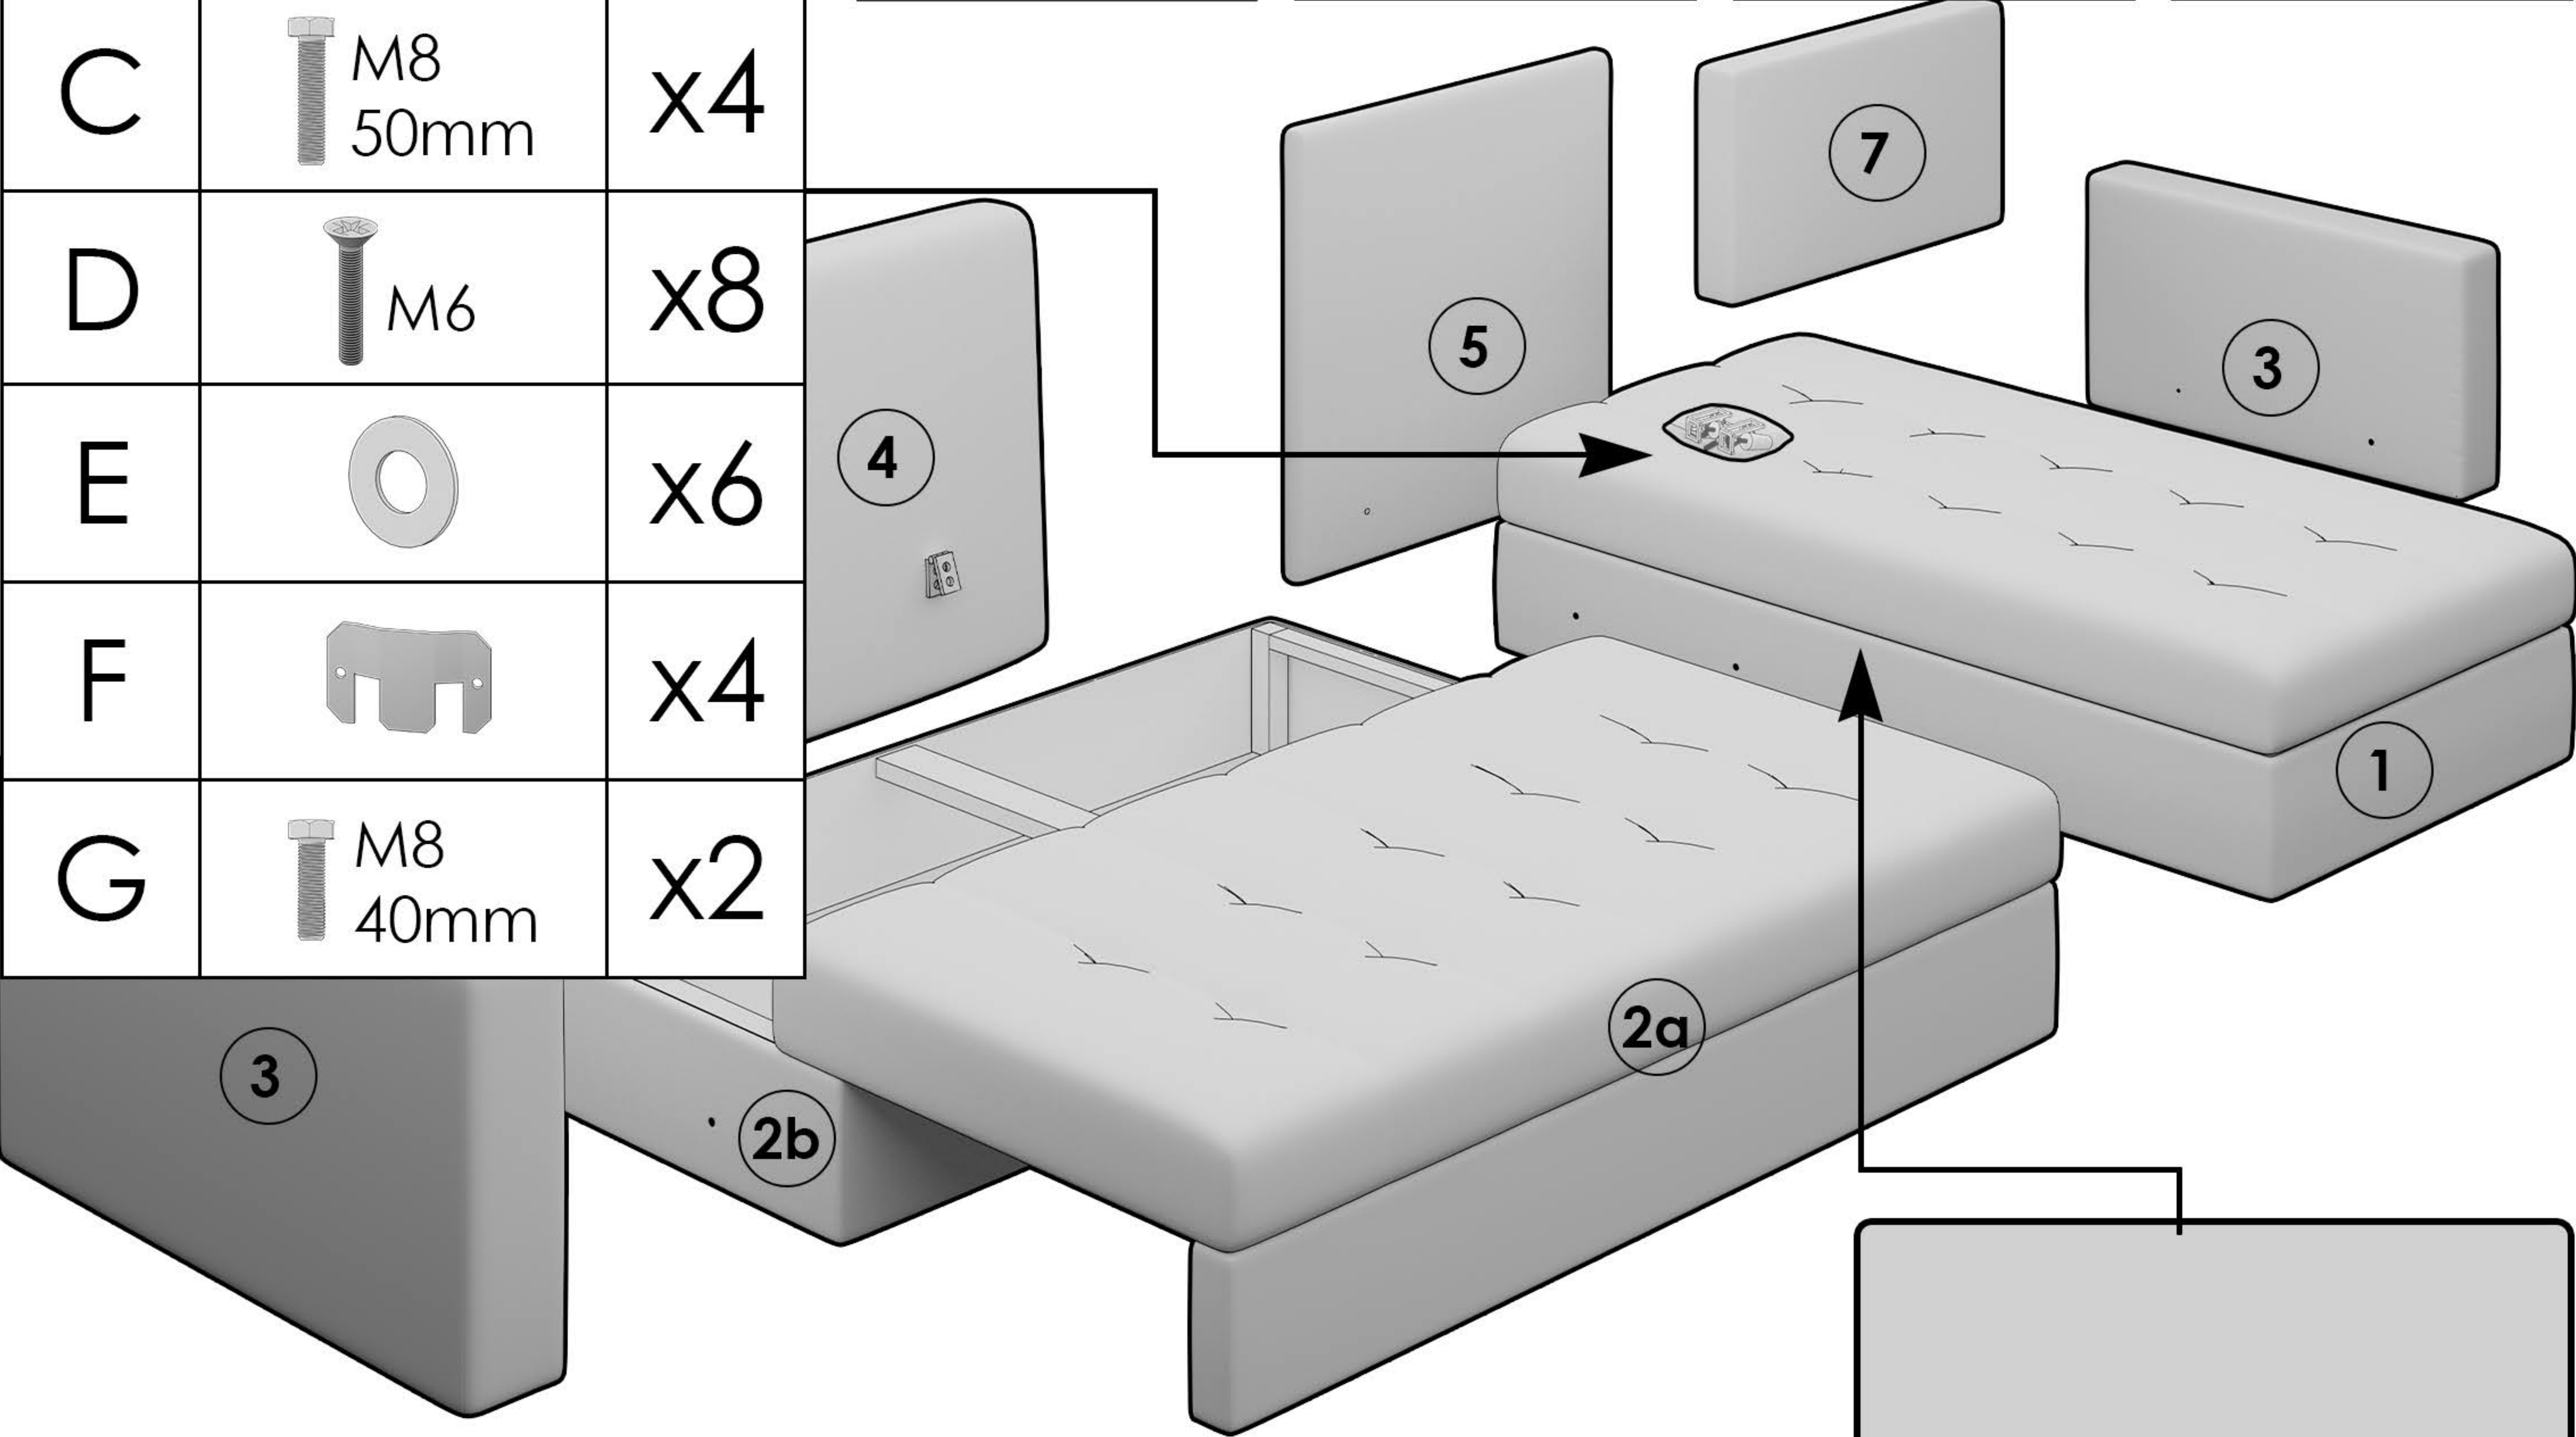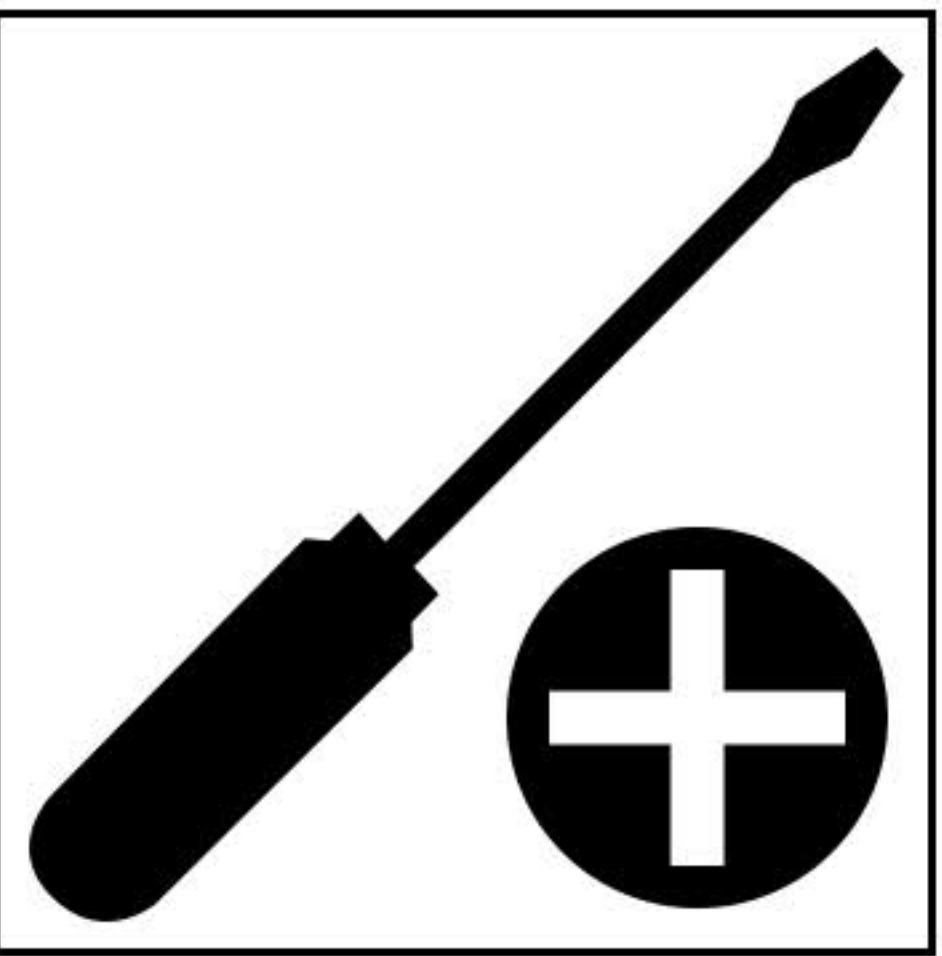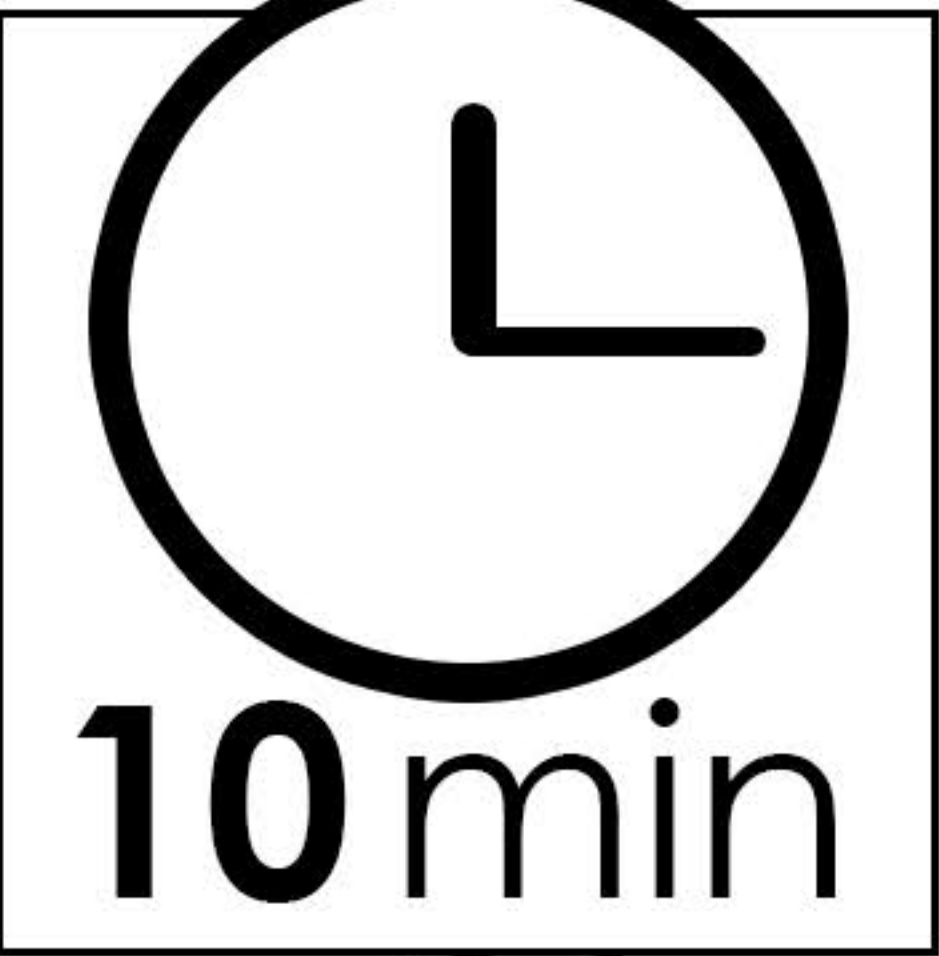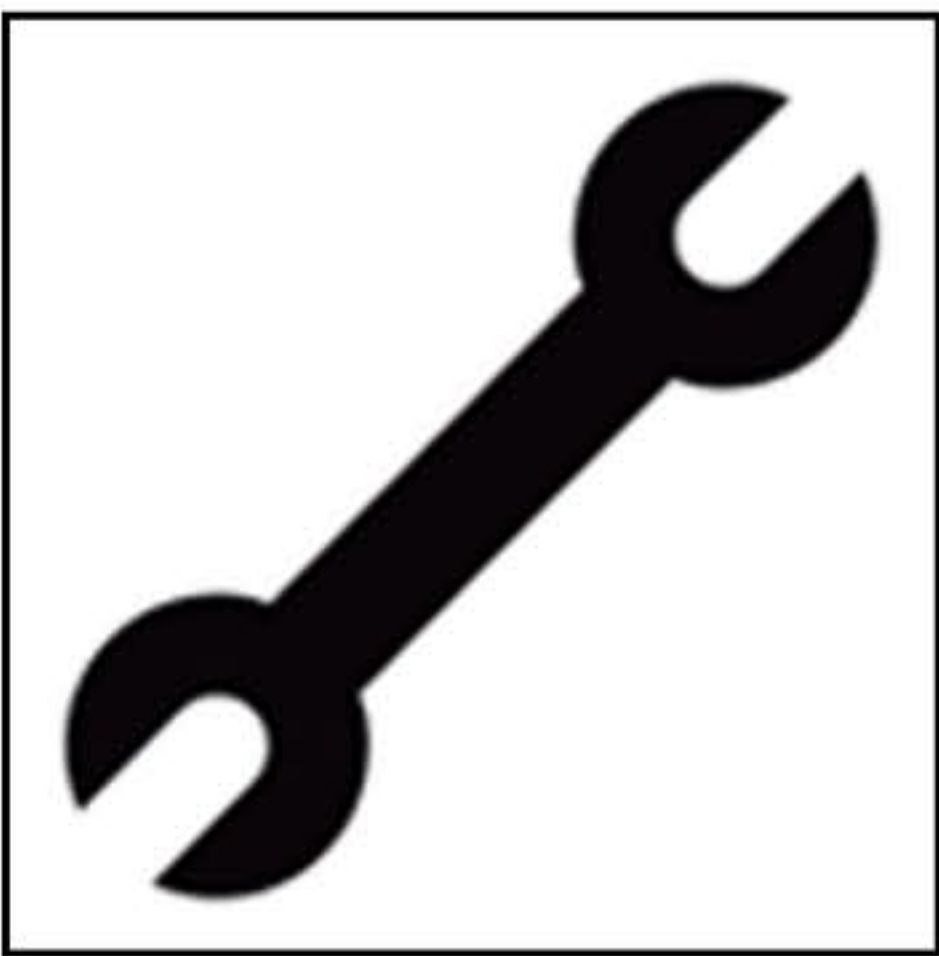






A		x4	B		x6
---	---	----	---	--	----

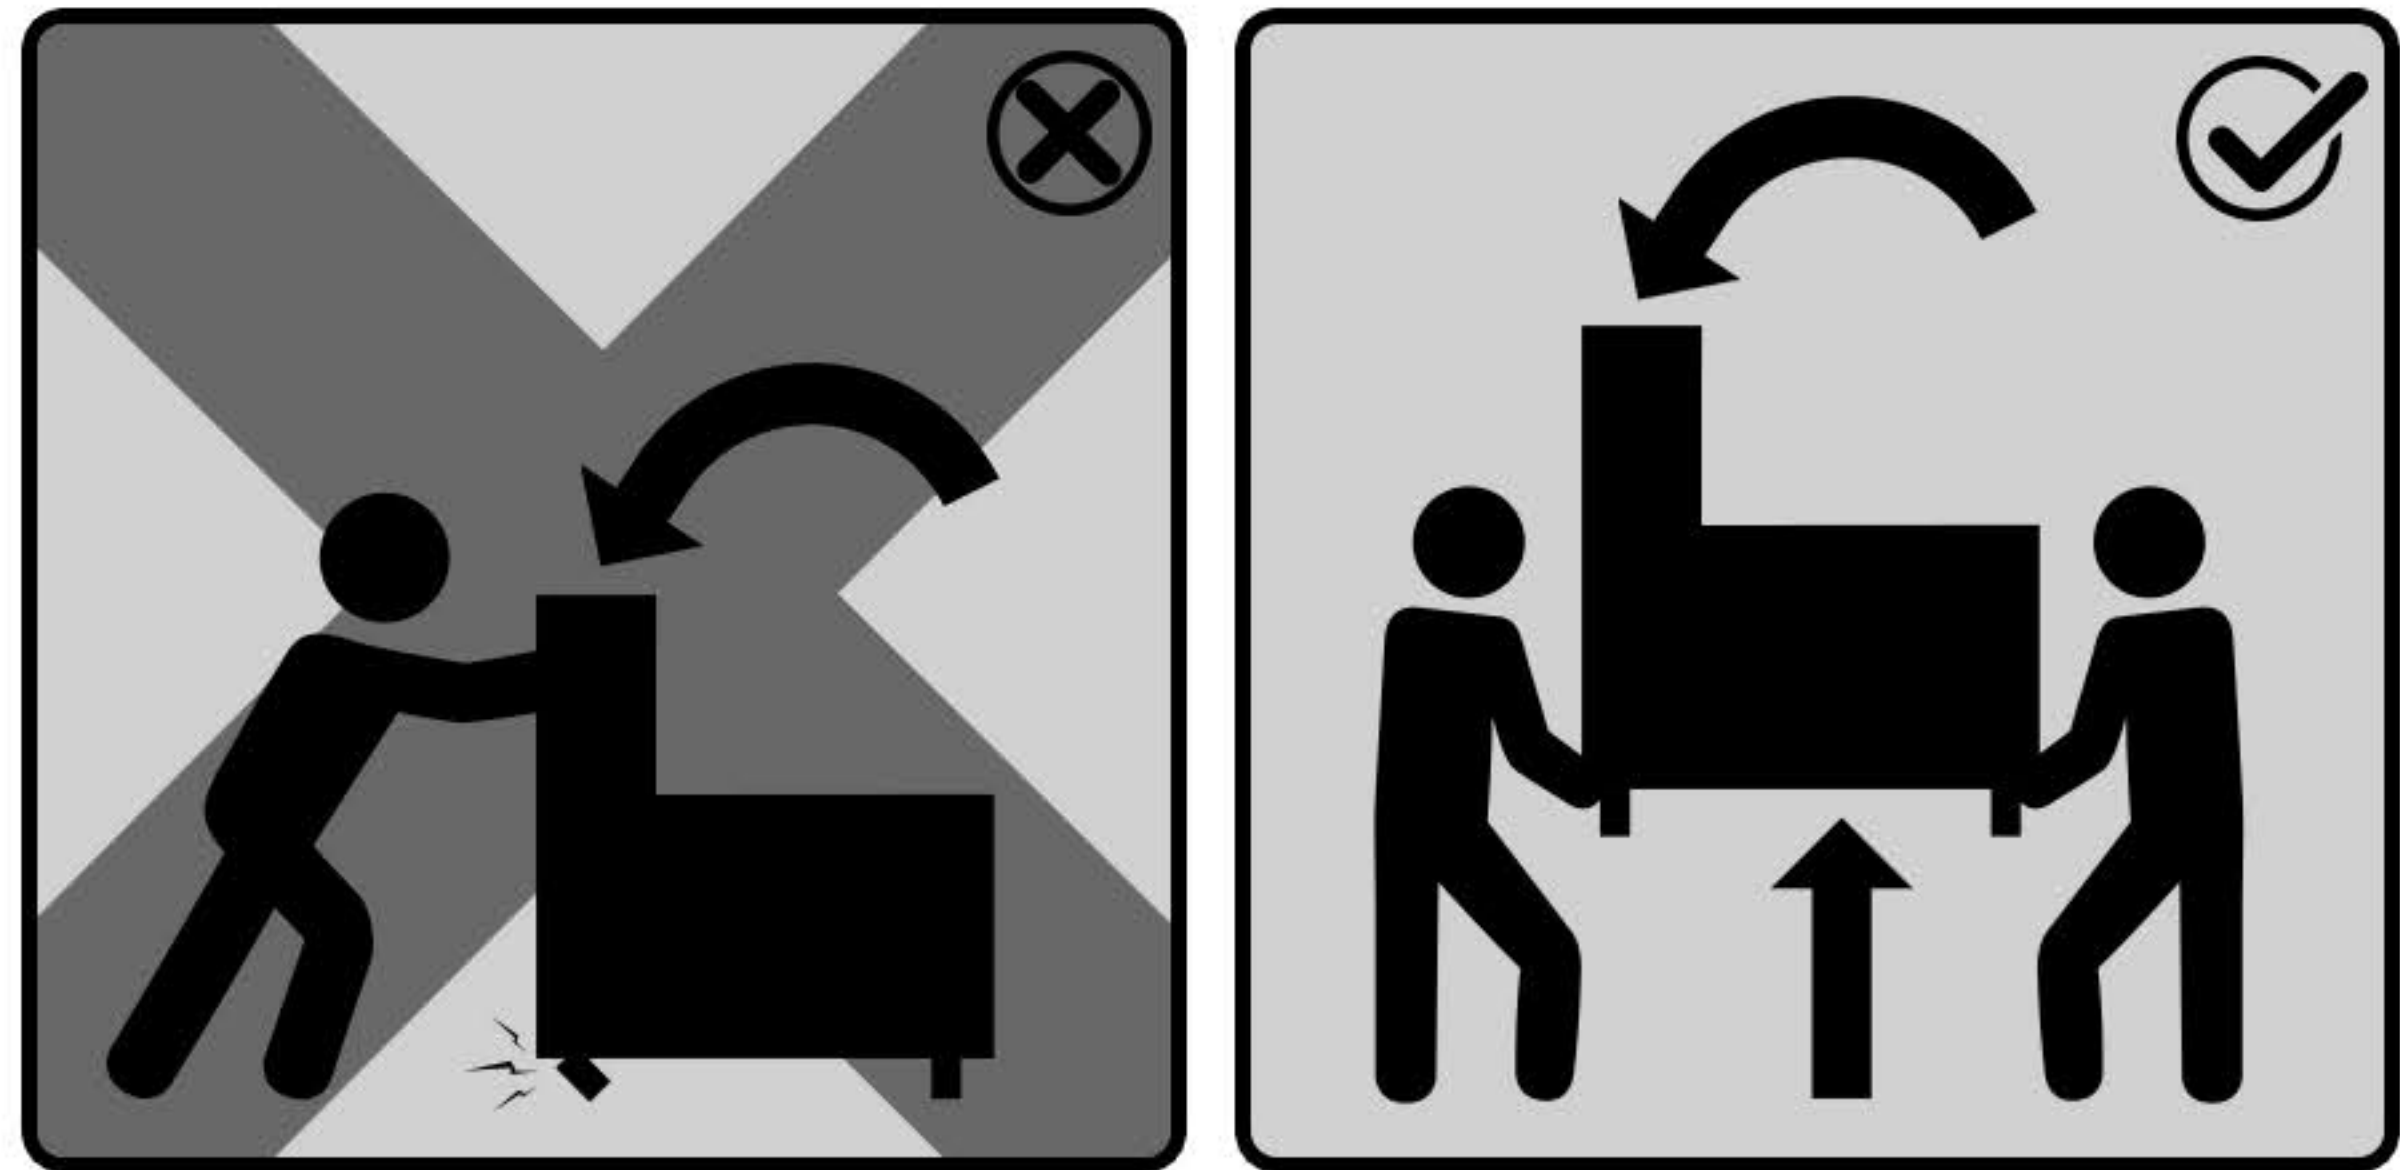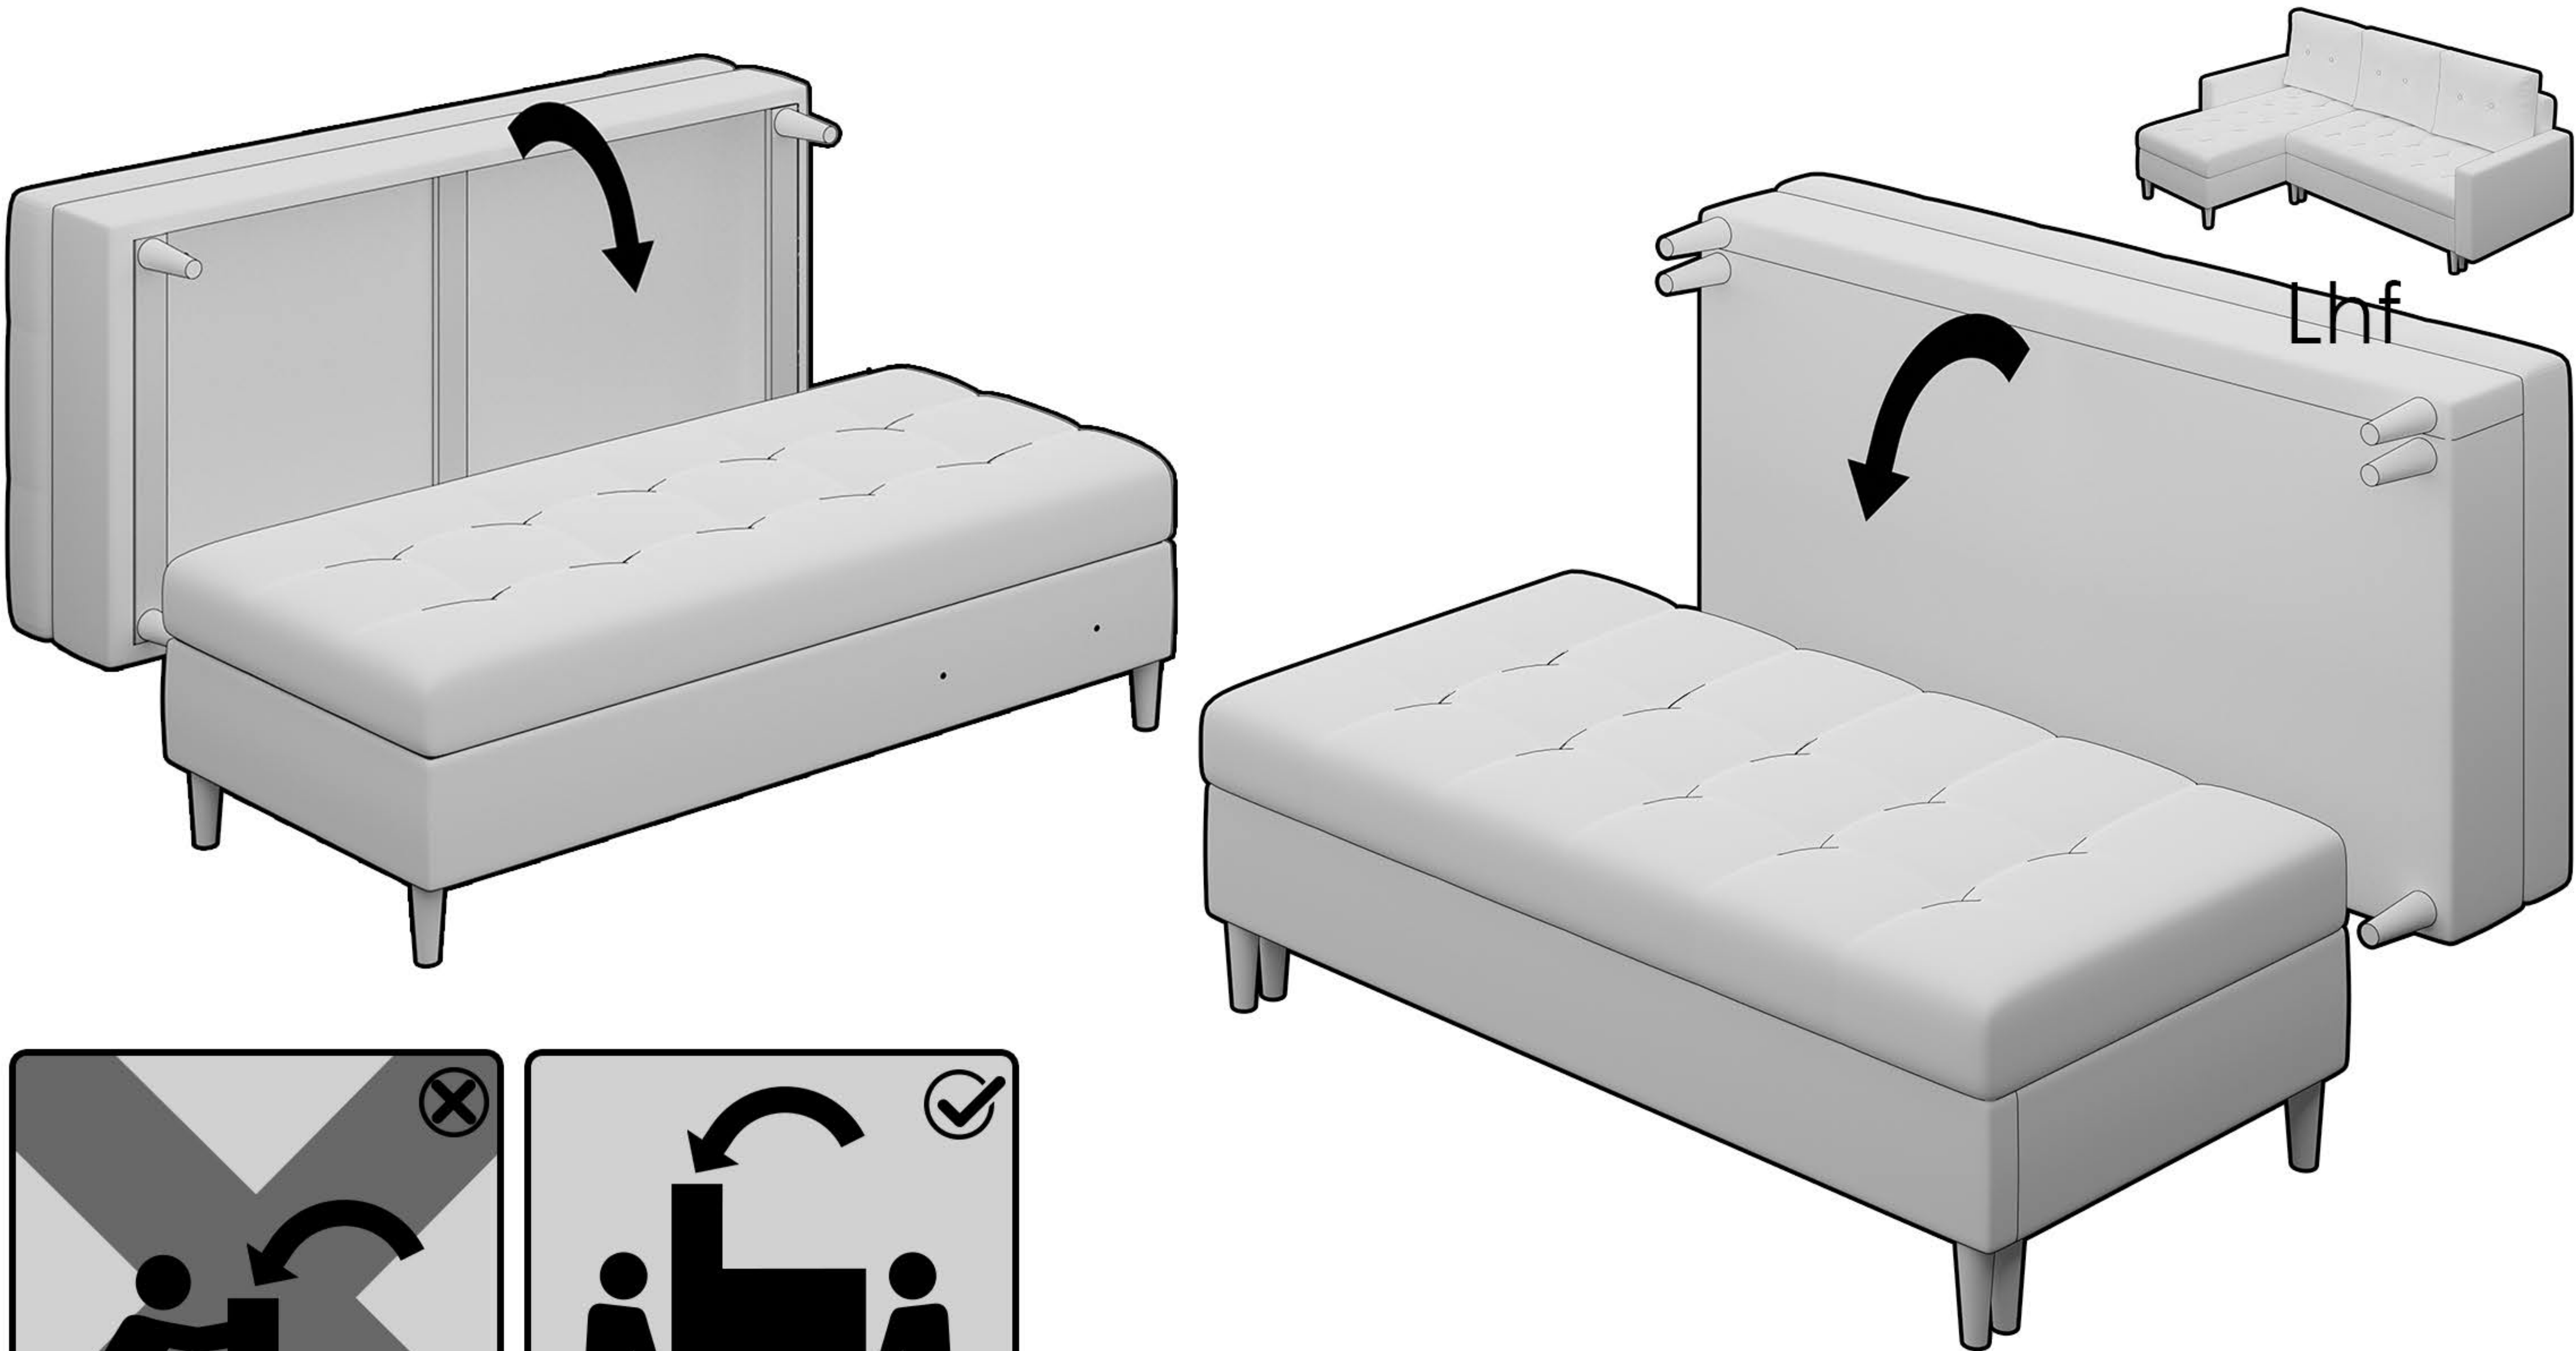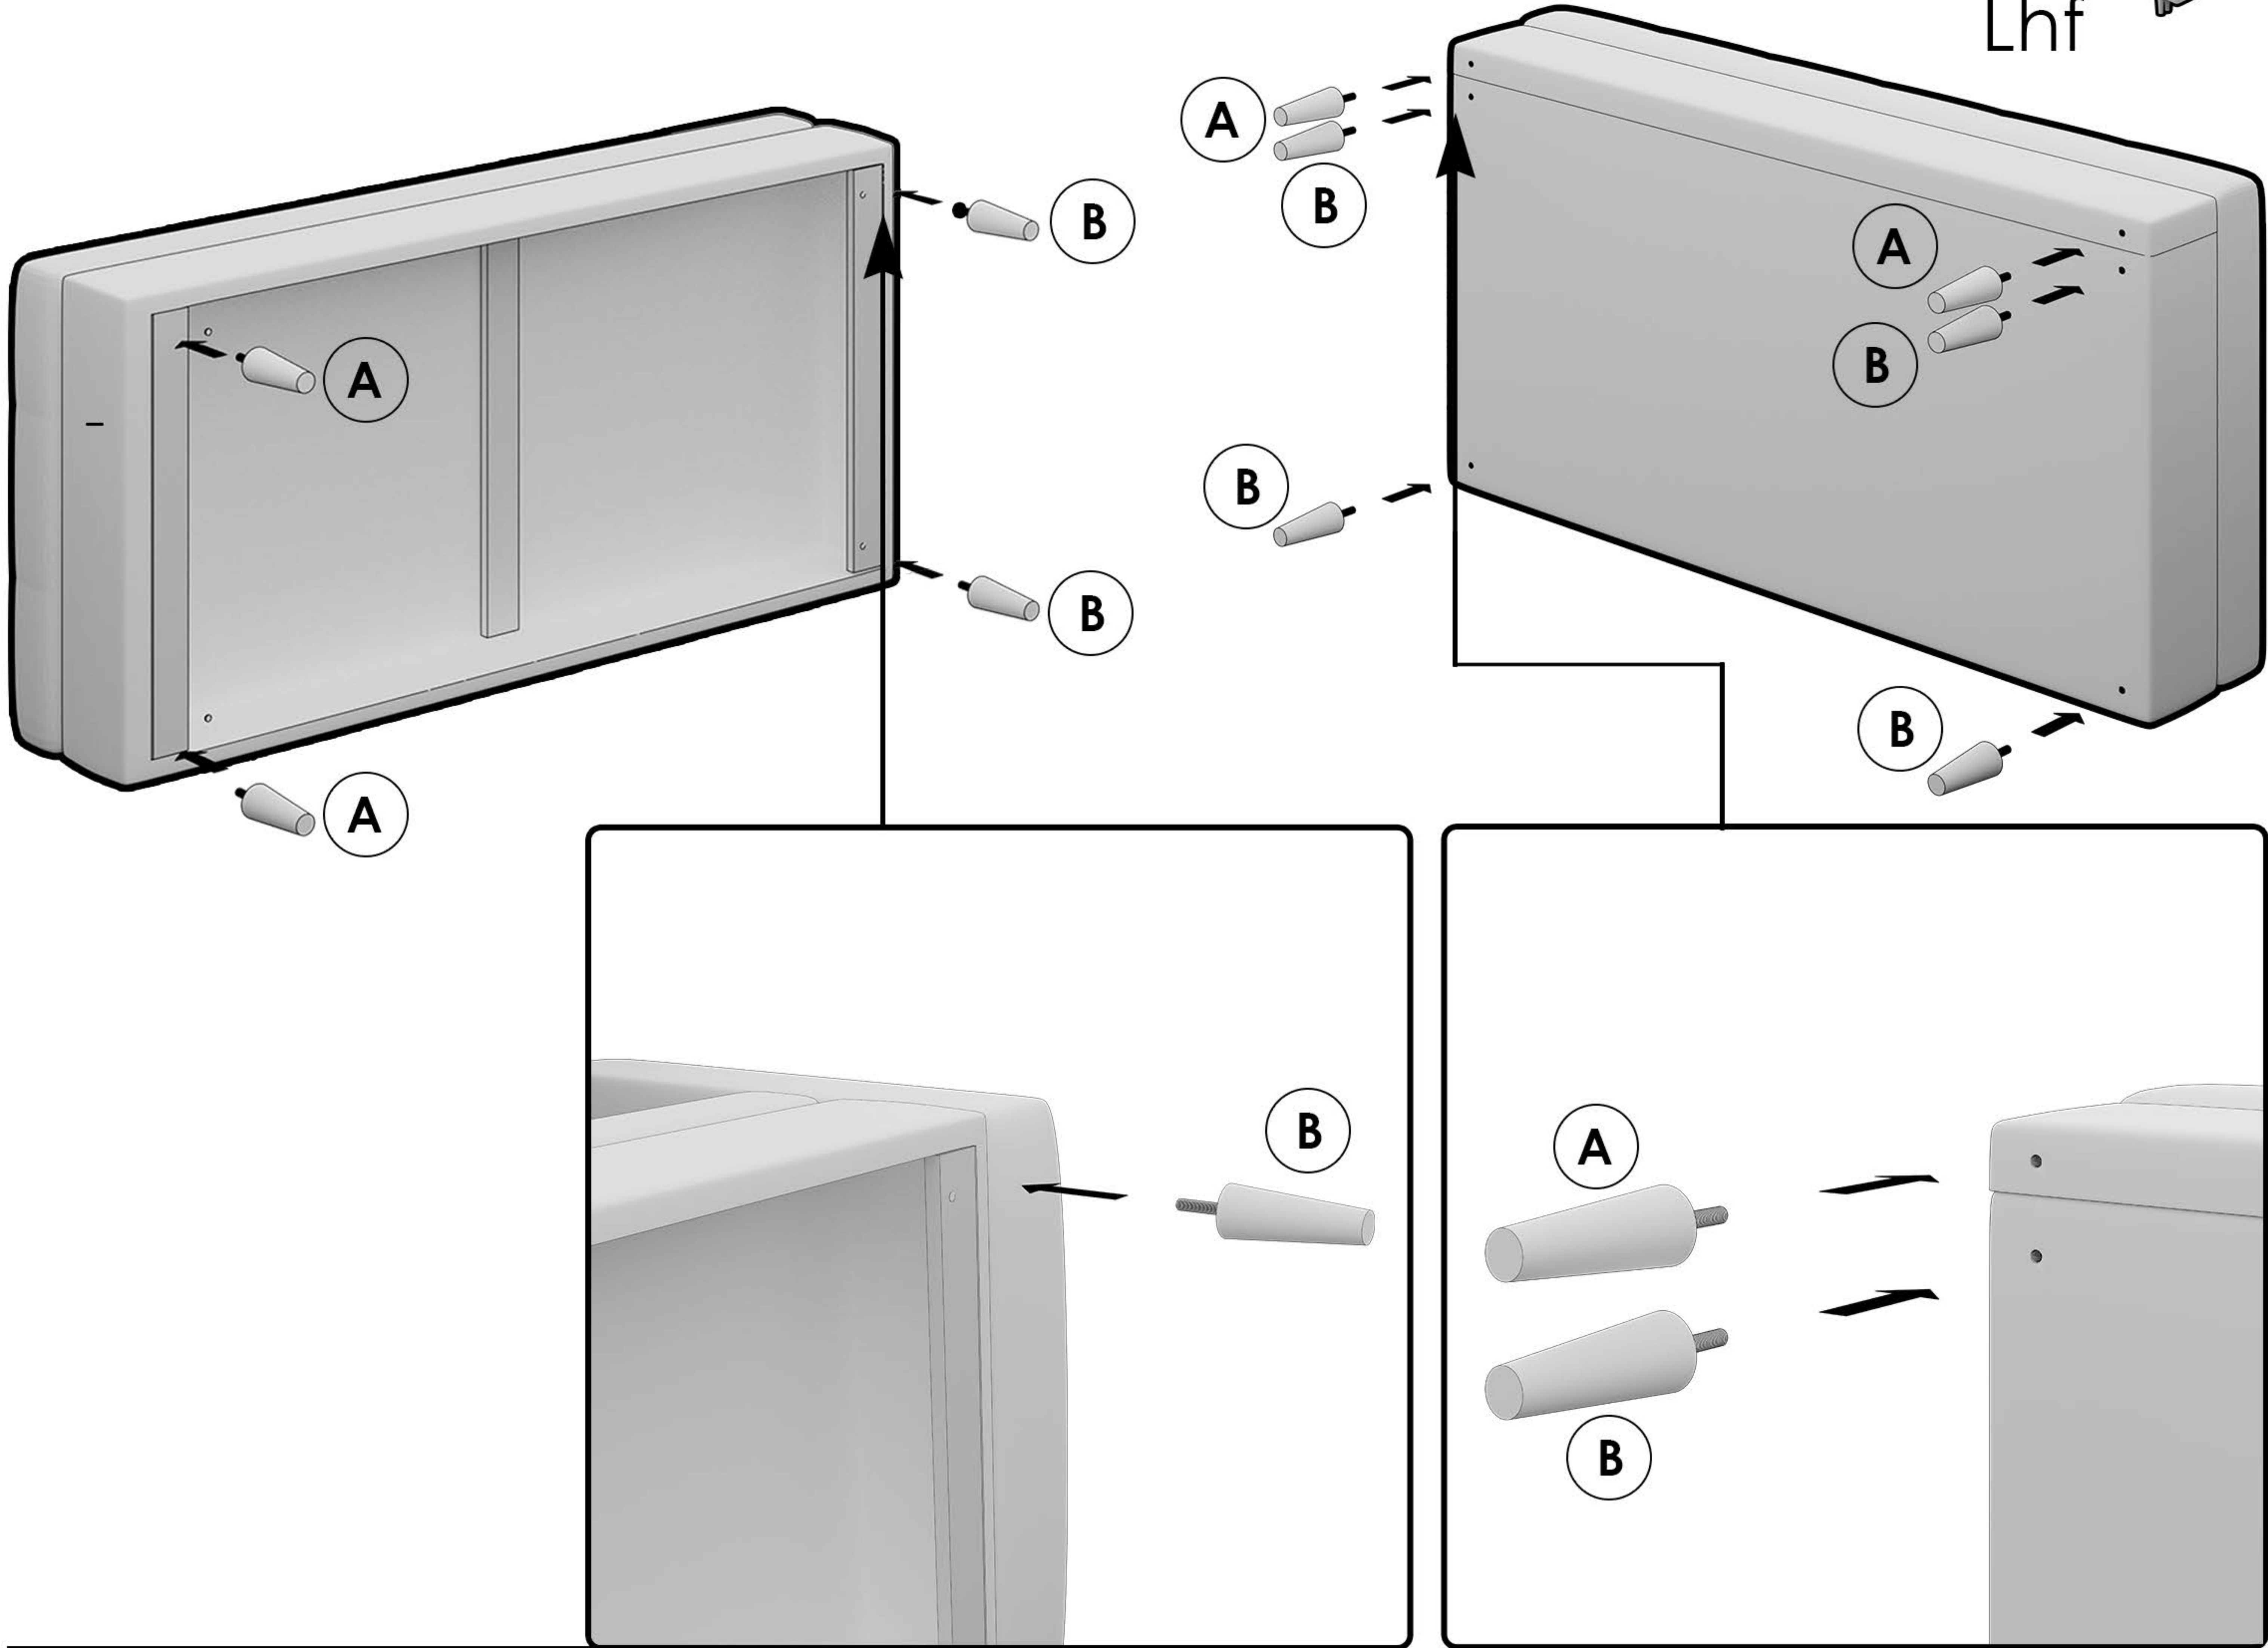
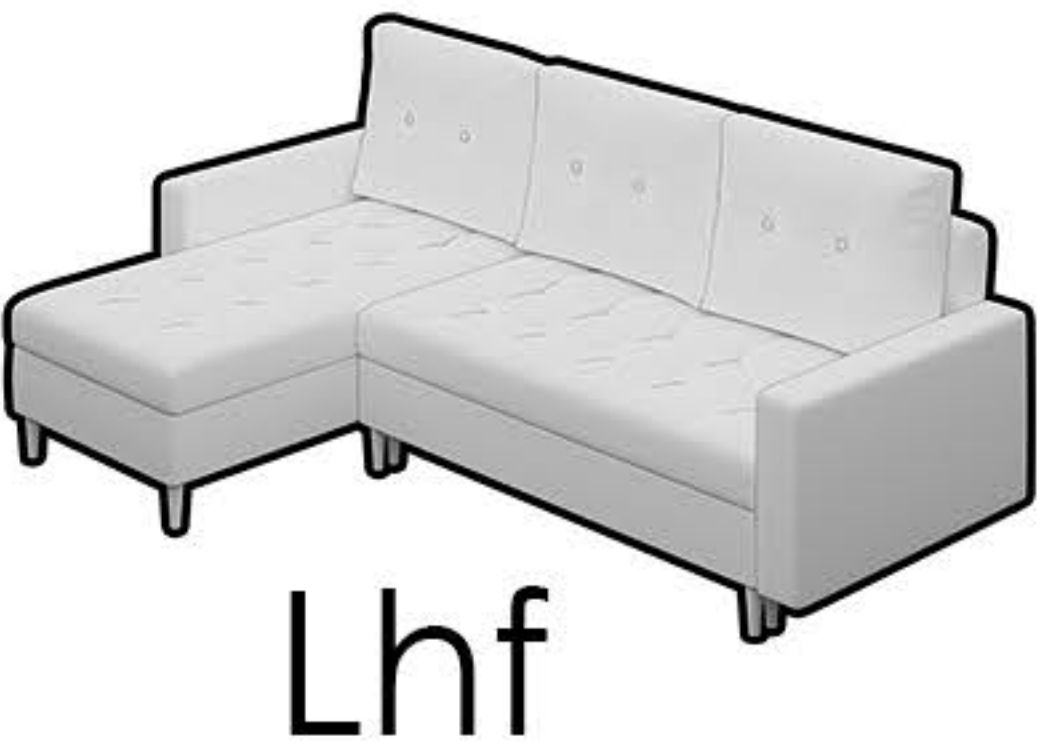


C	M8 50mm	x4	E		x4
---	------------	----	---	--	----

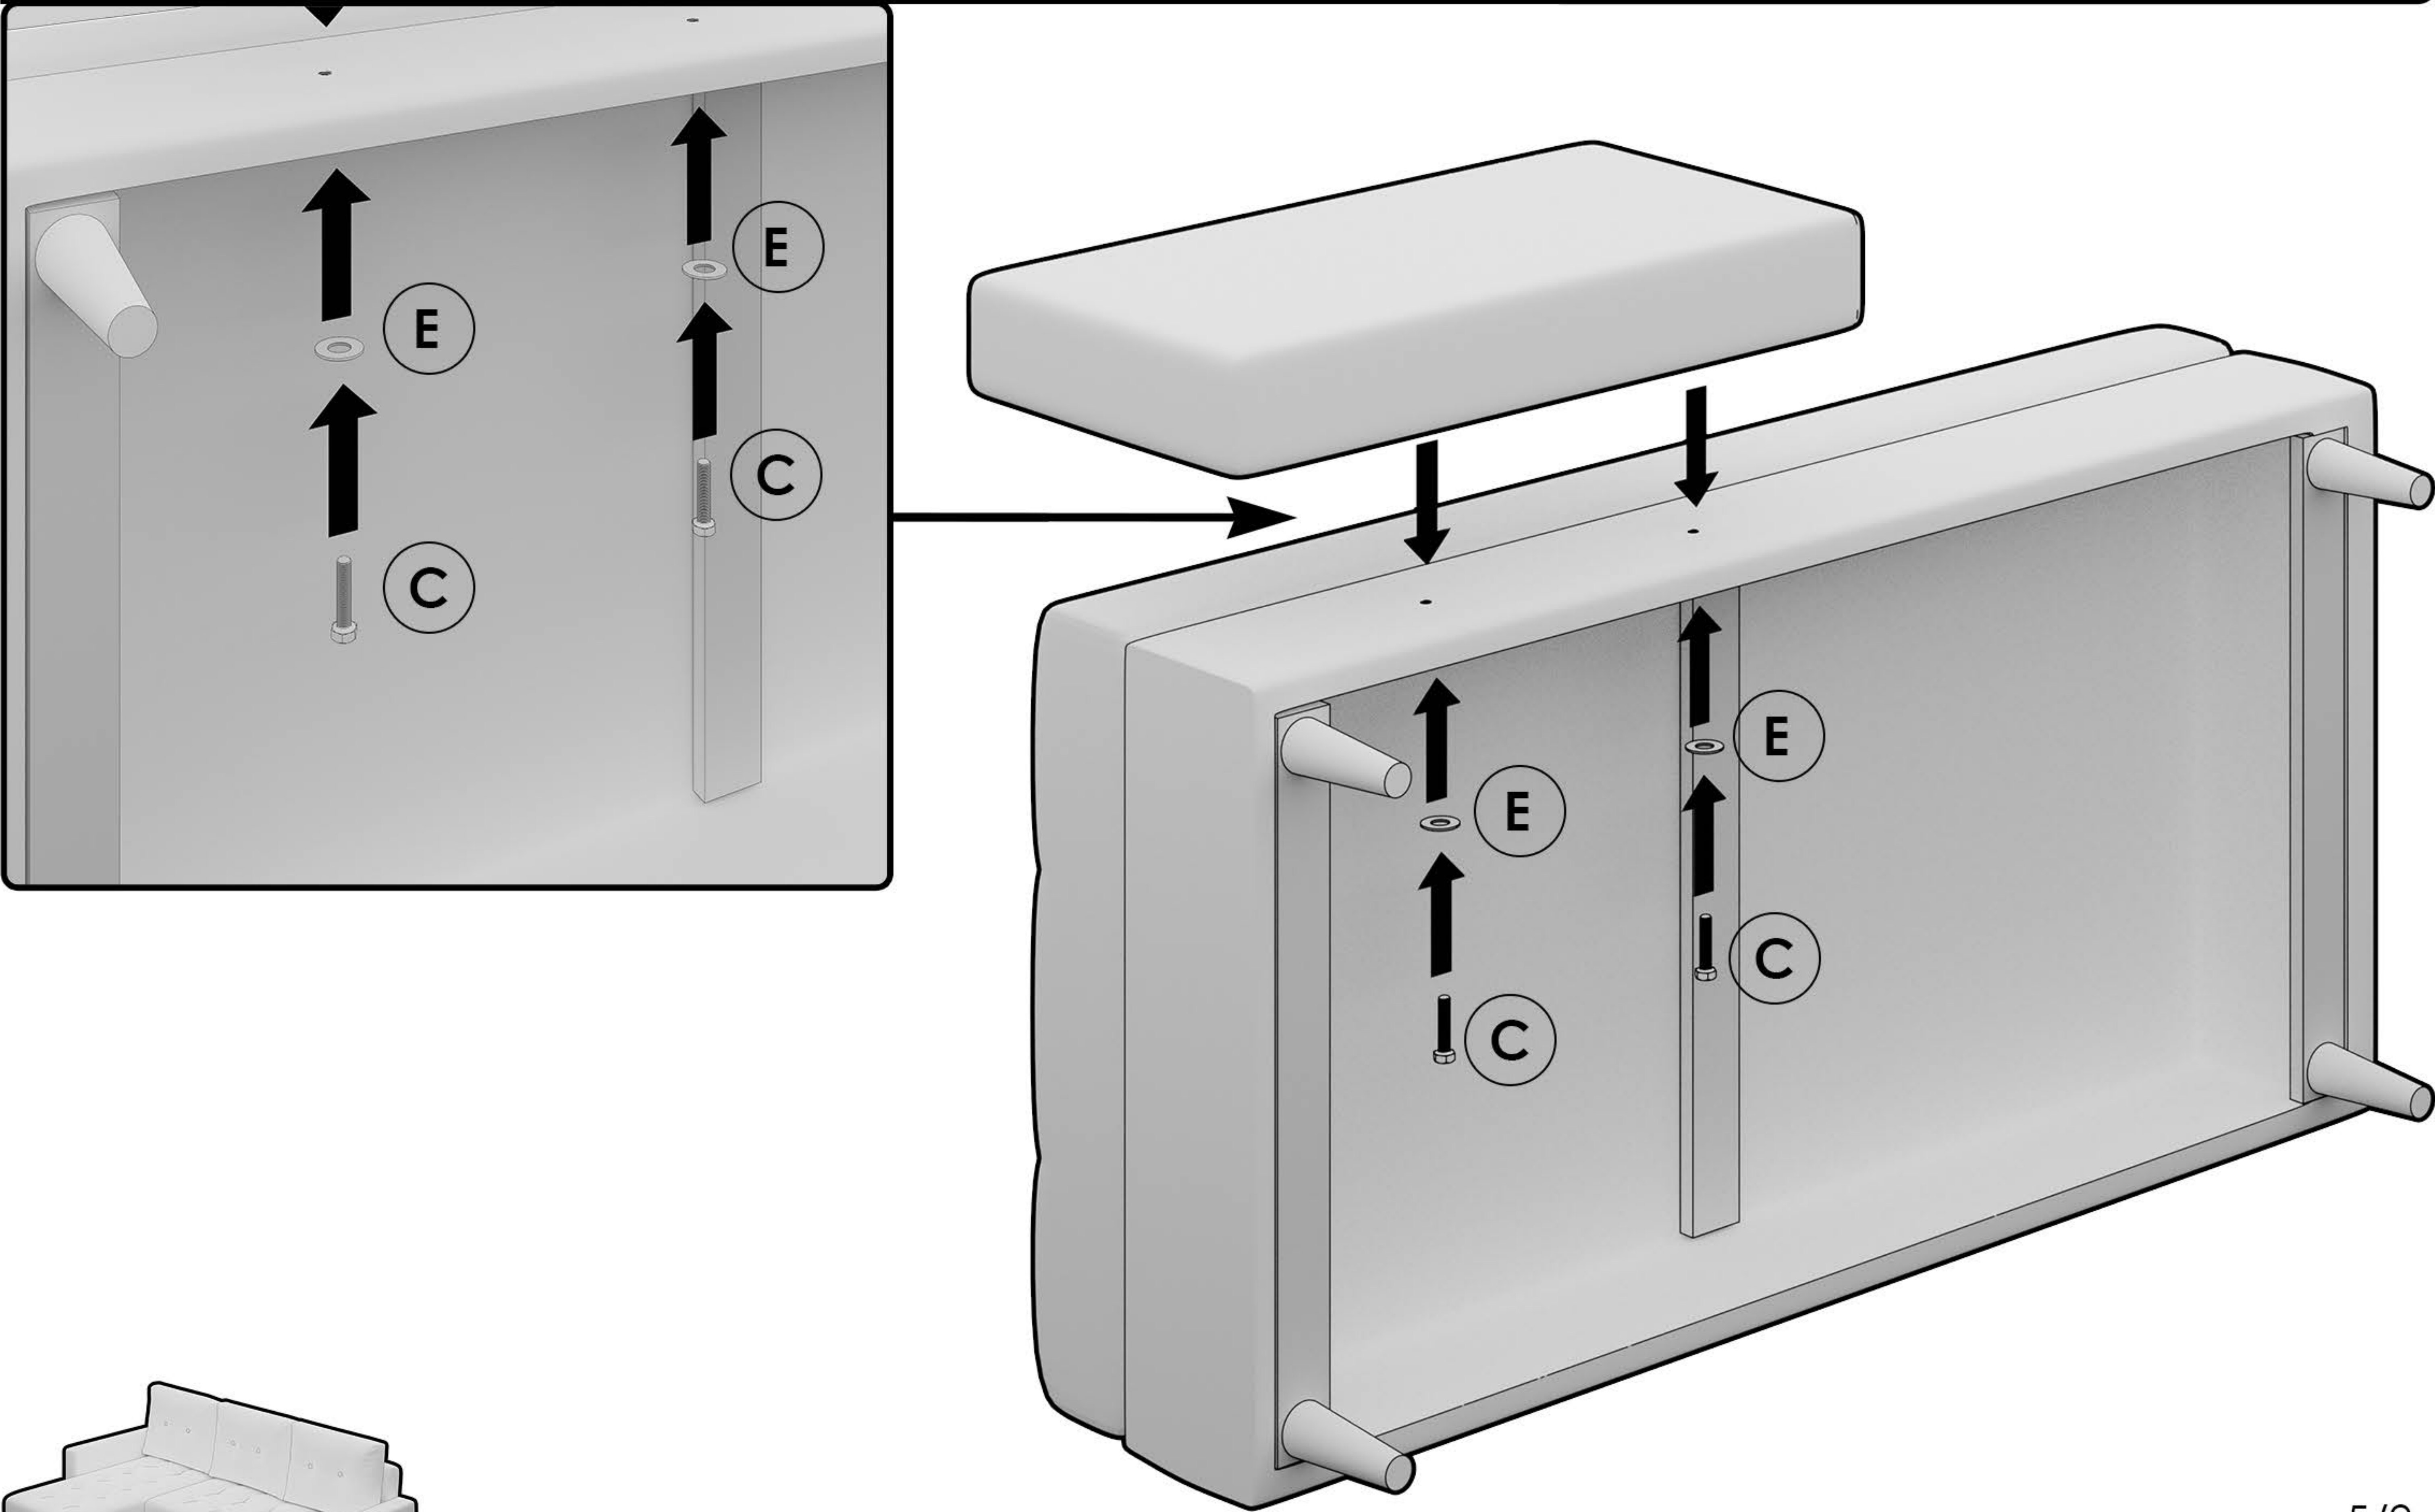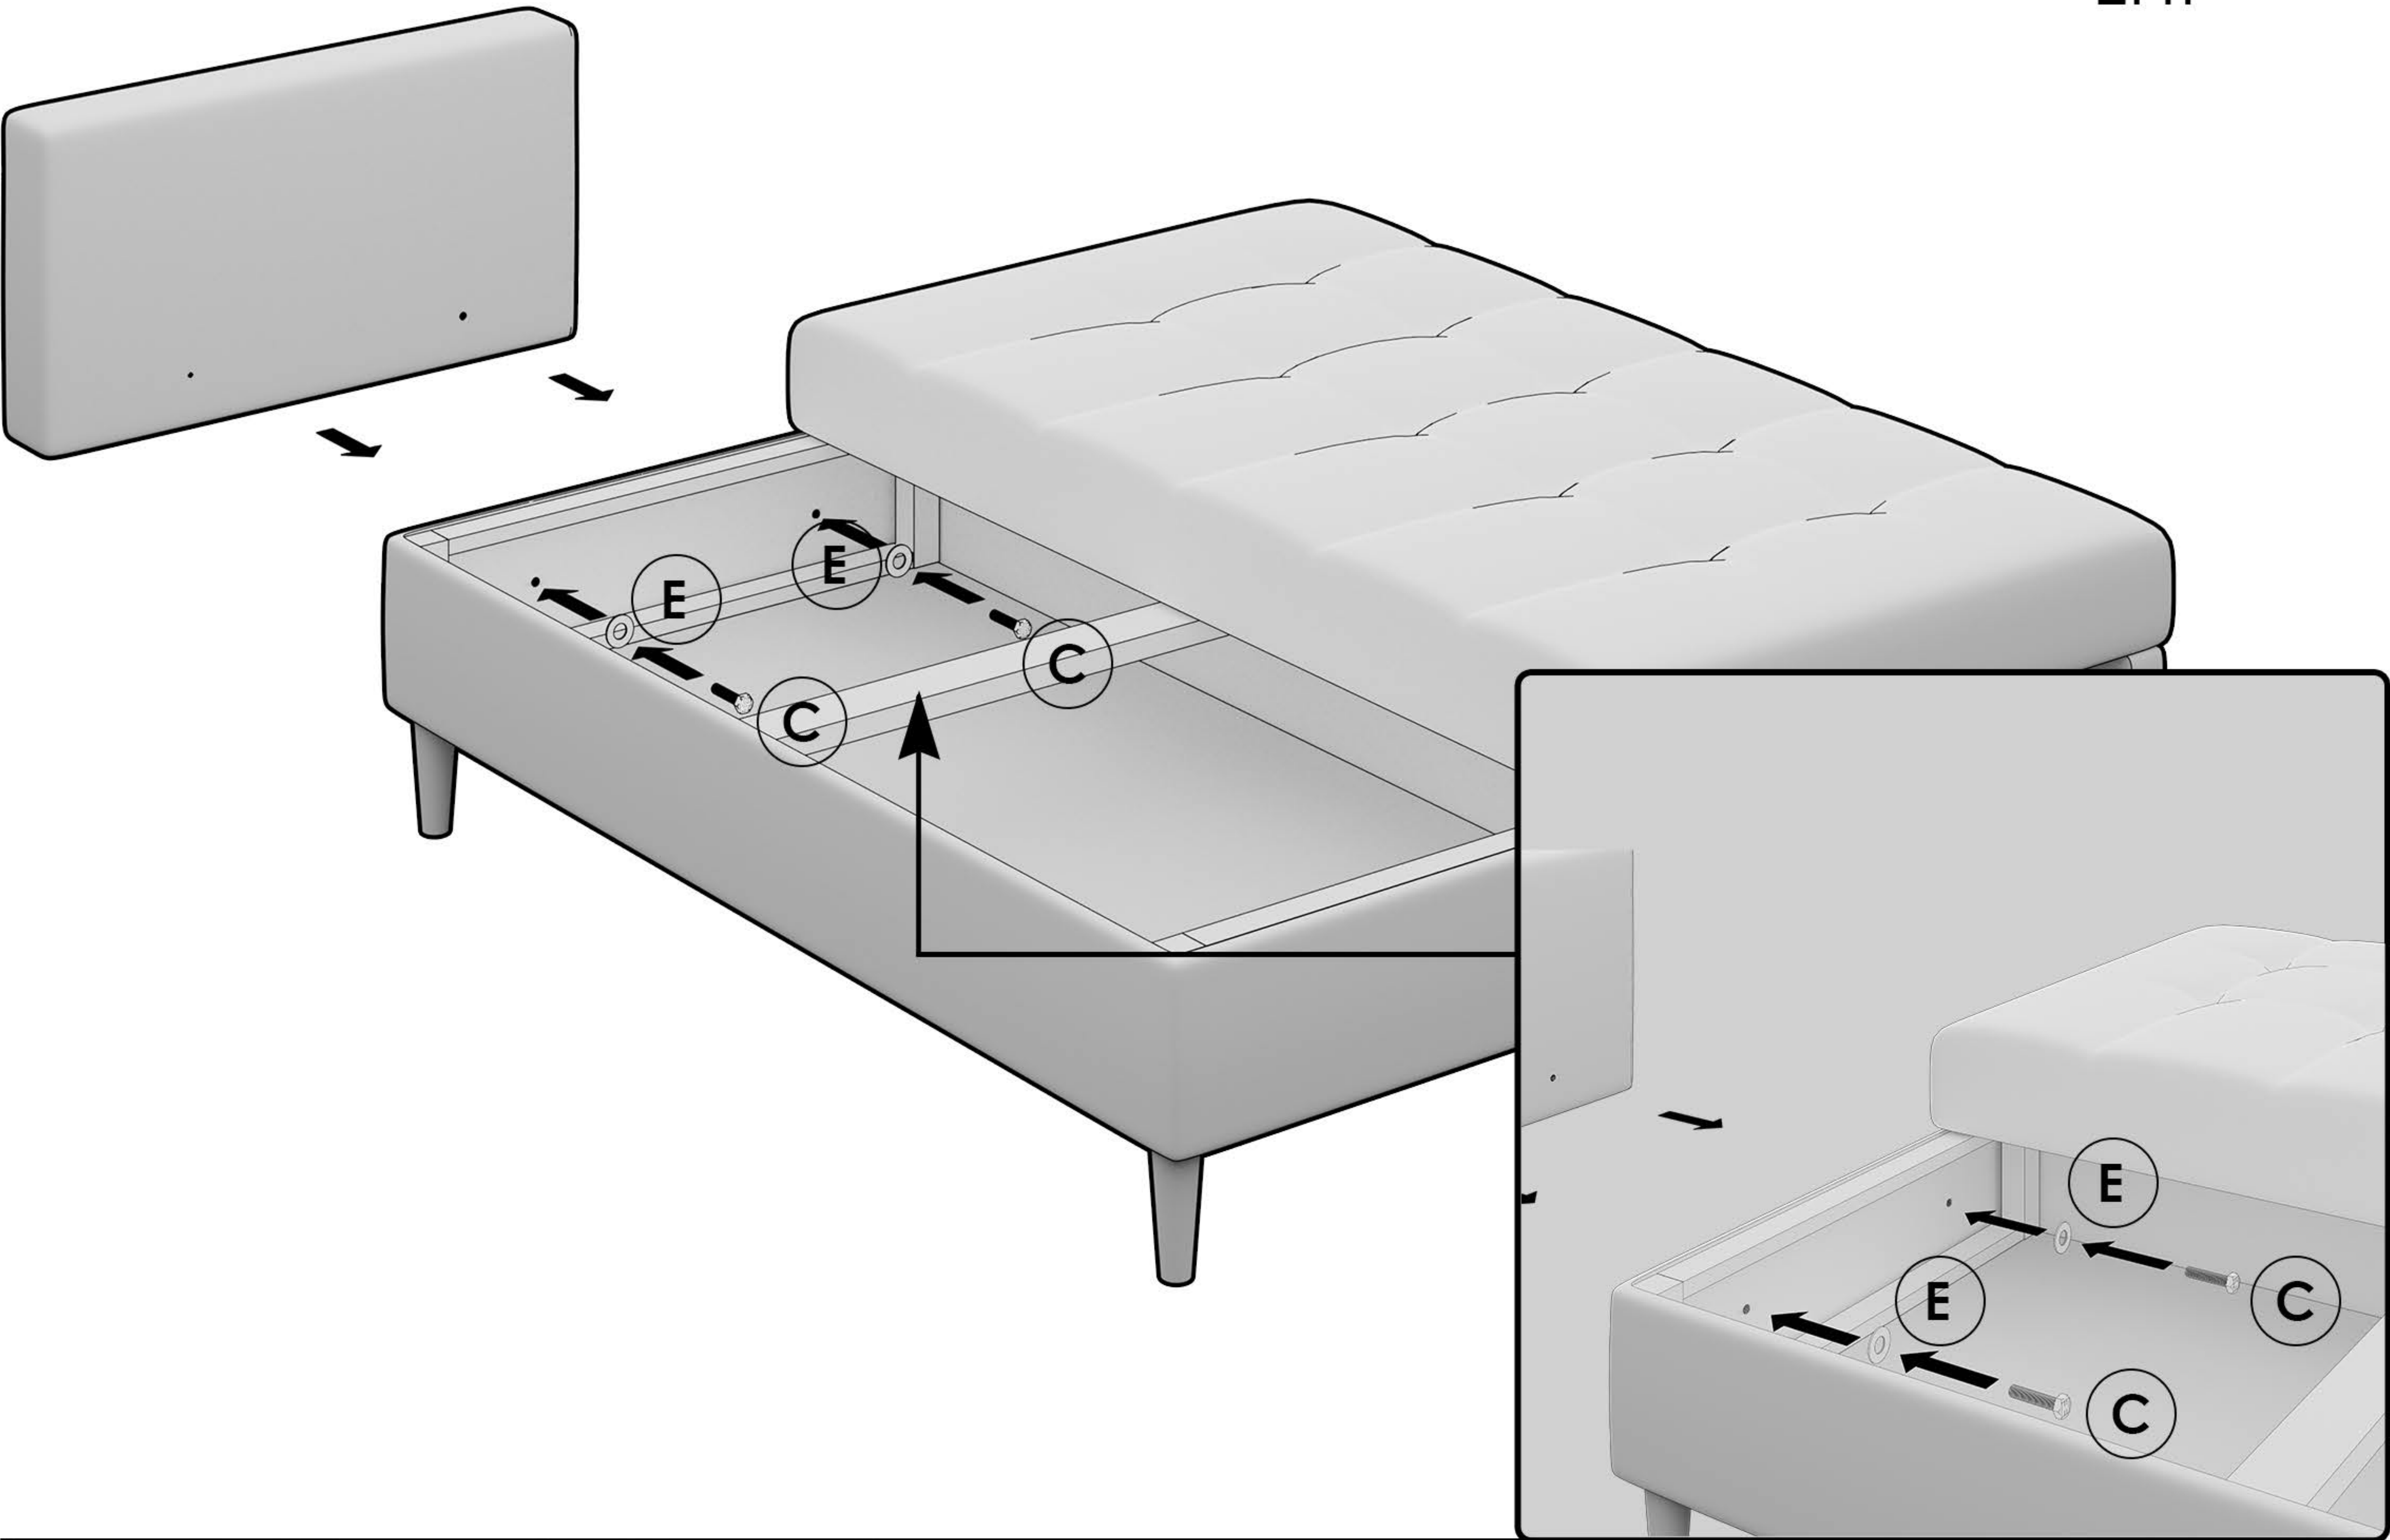



D	 M6	x8	E		x2
F		x4	G	 M8 40mm	x2

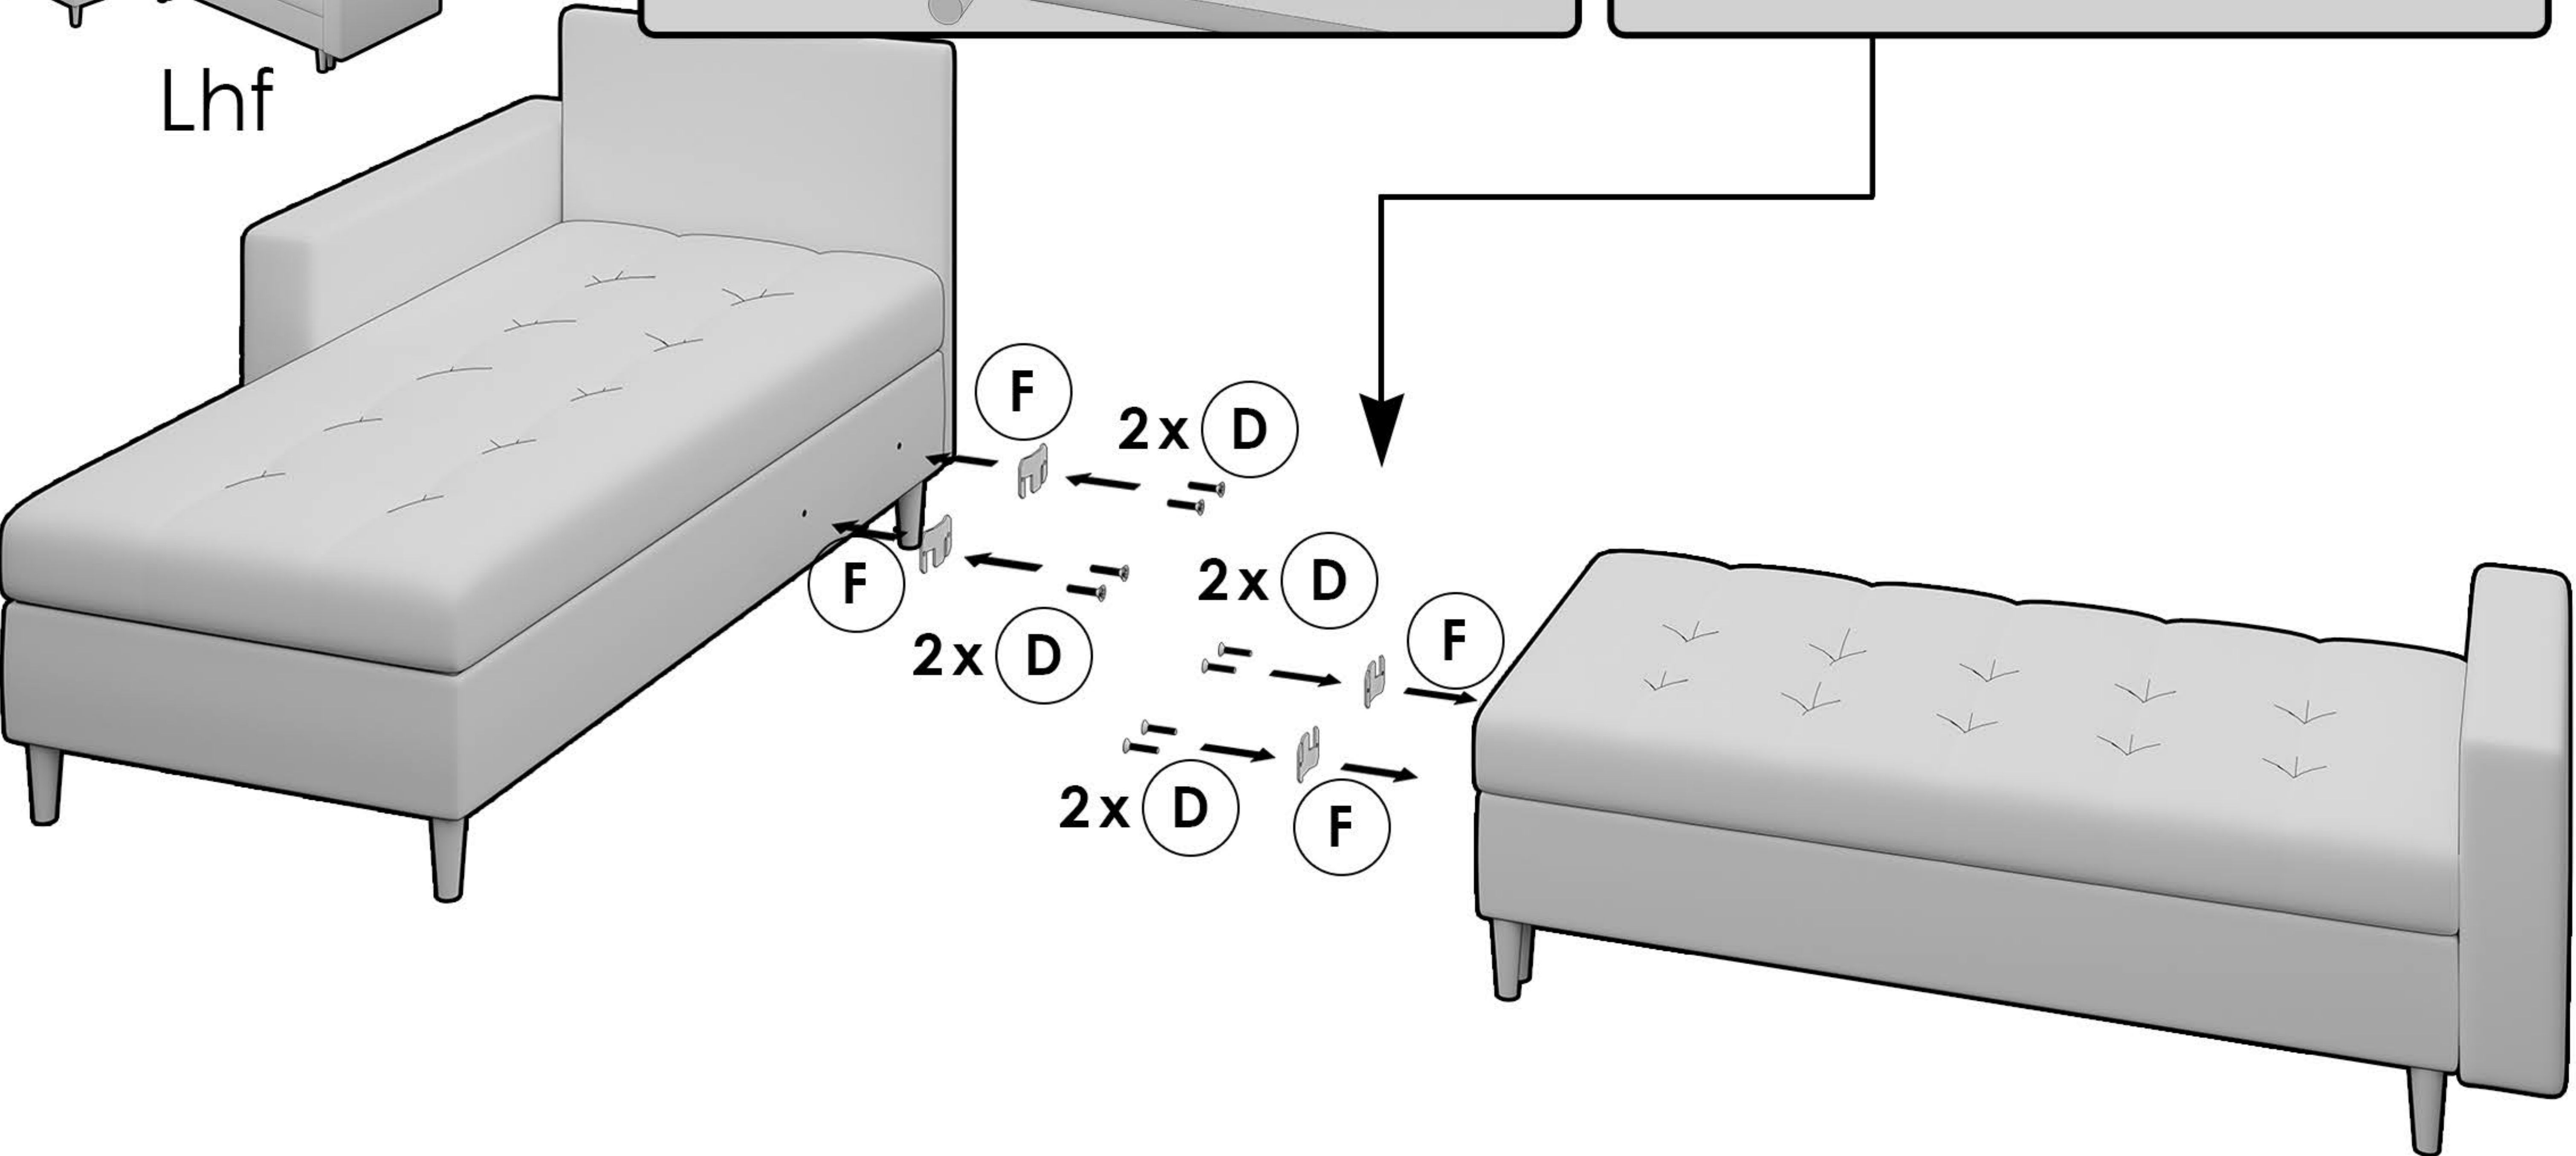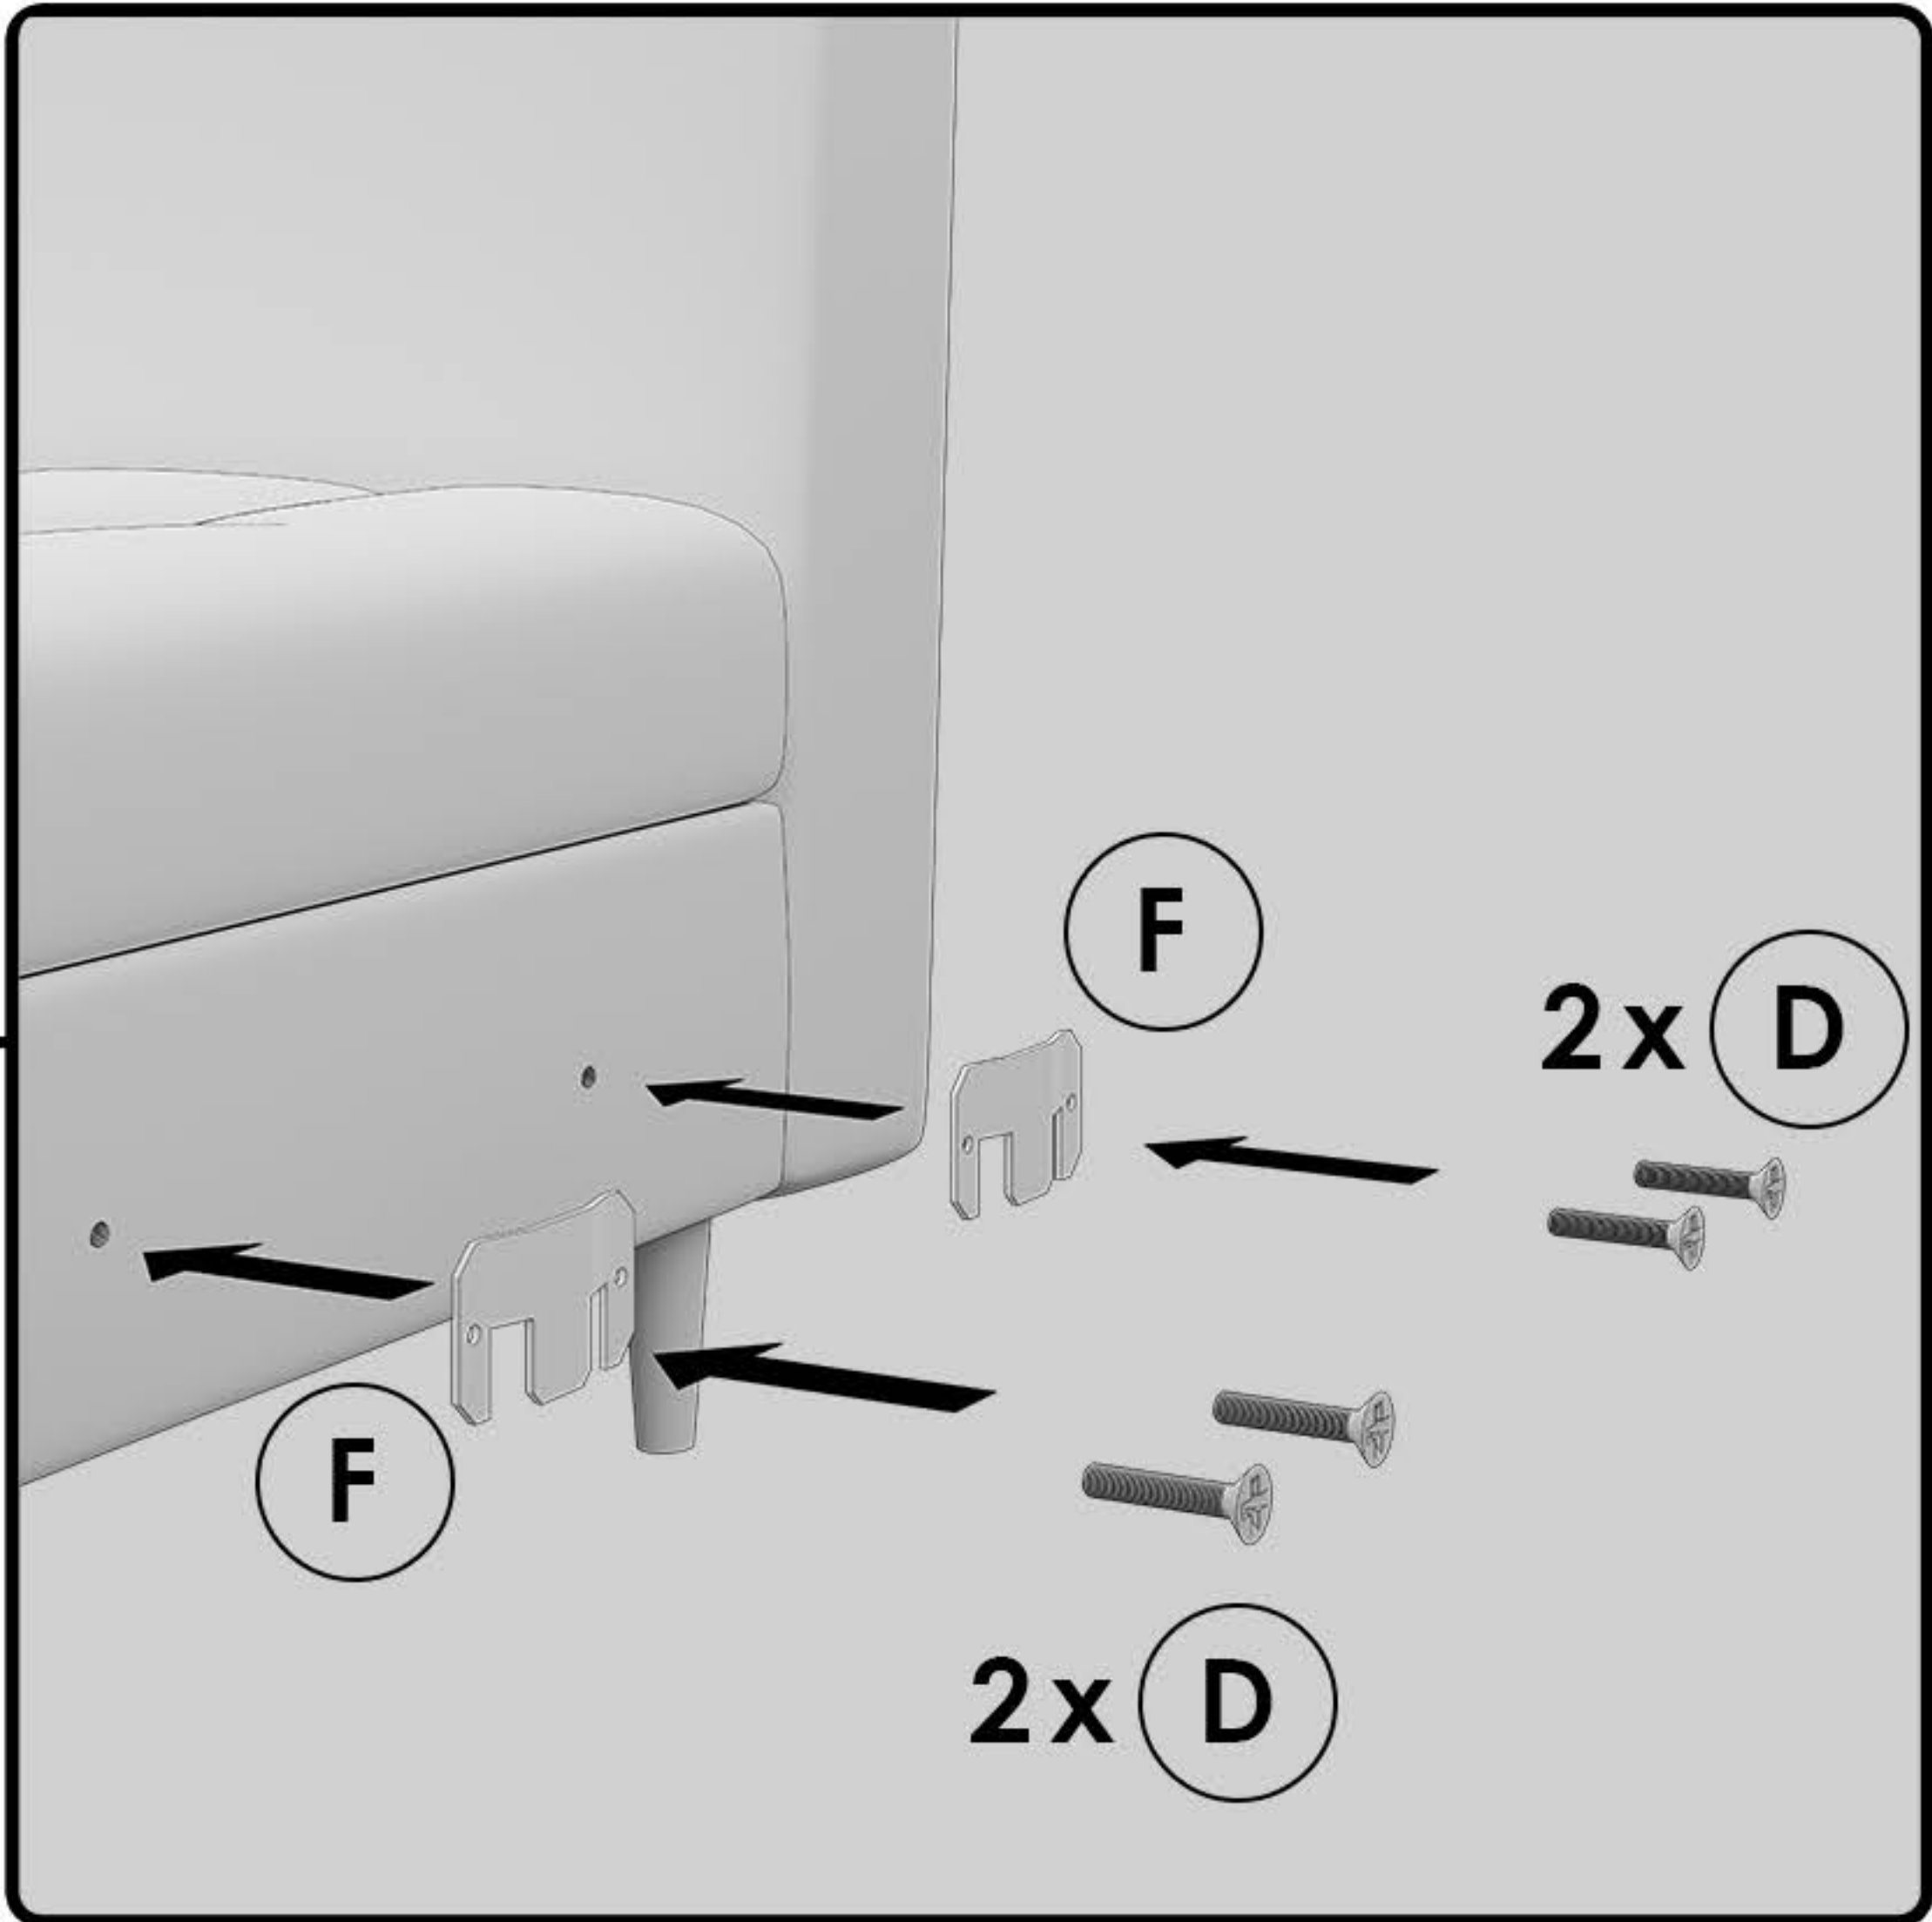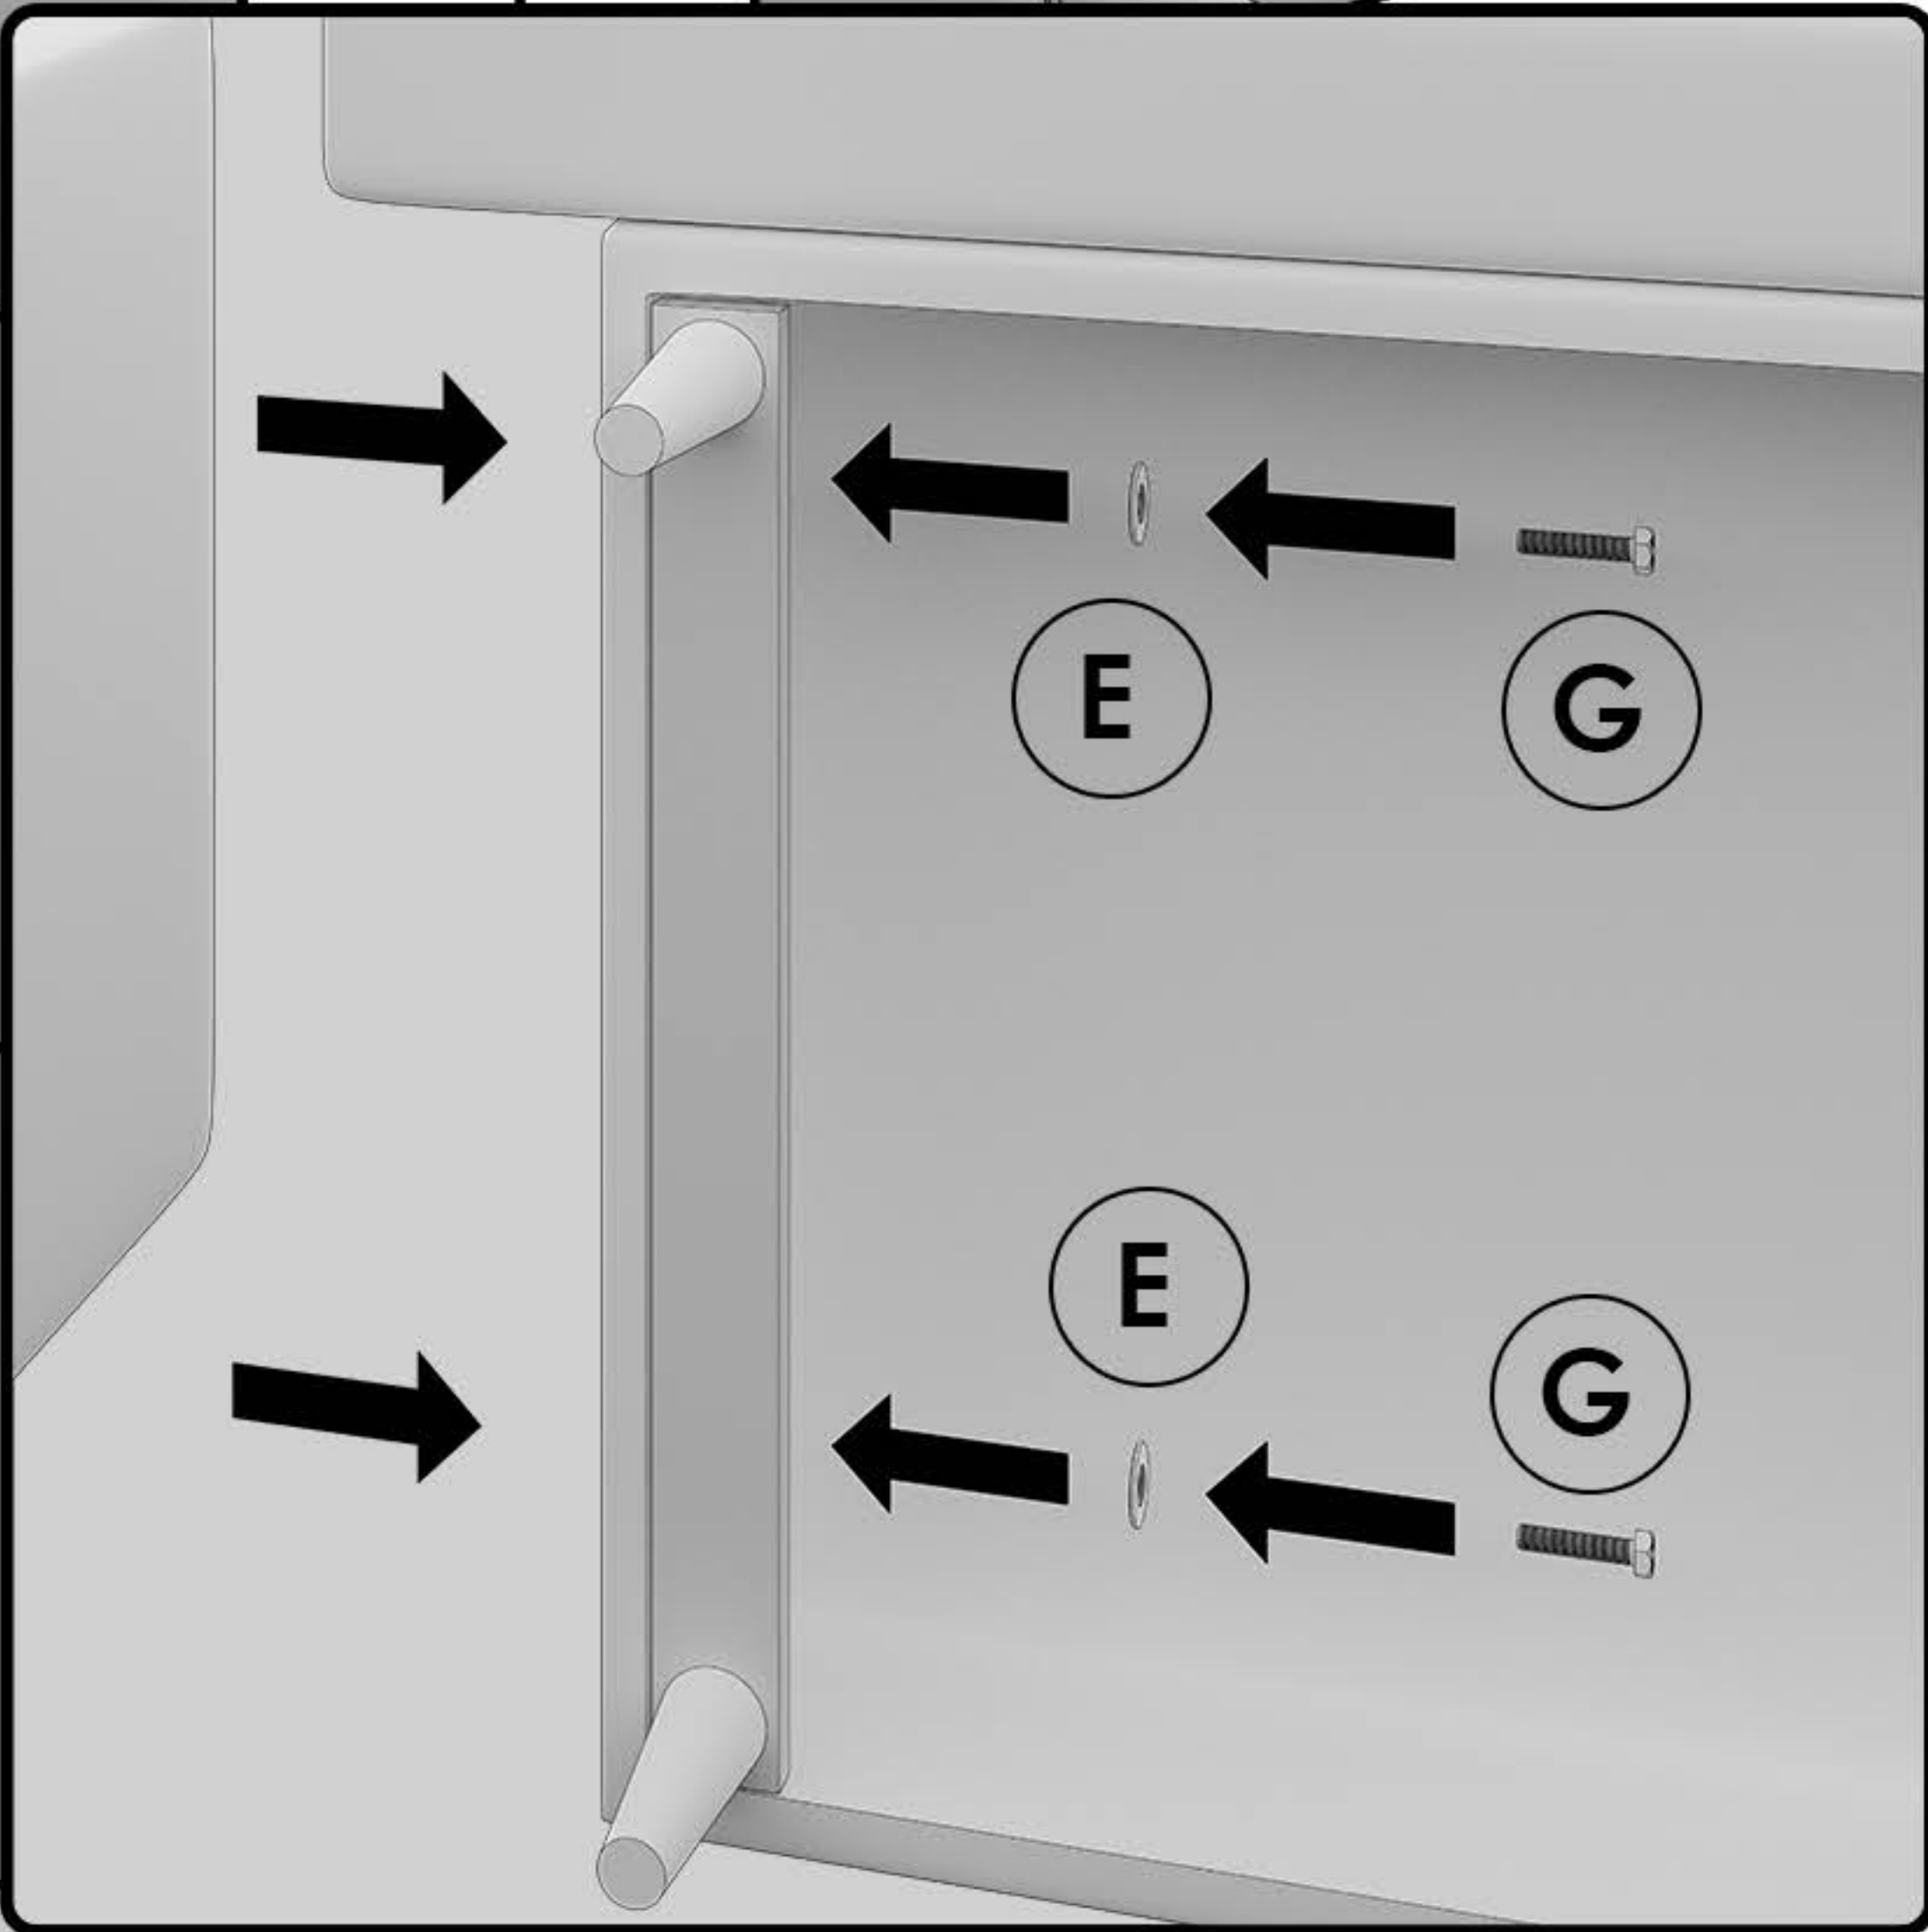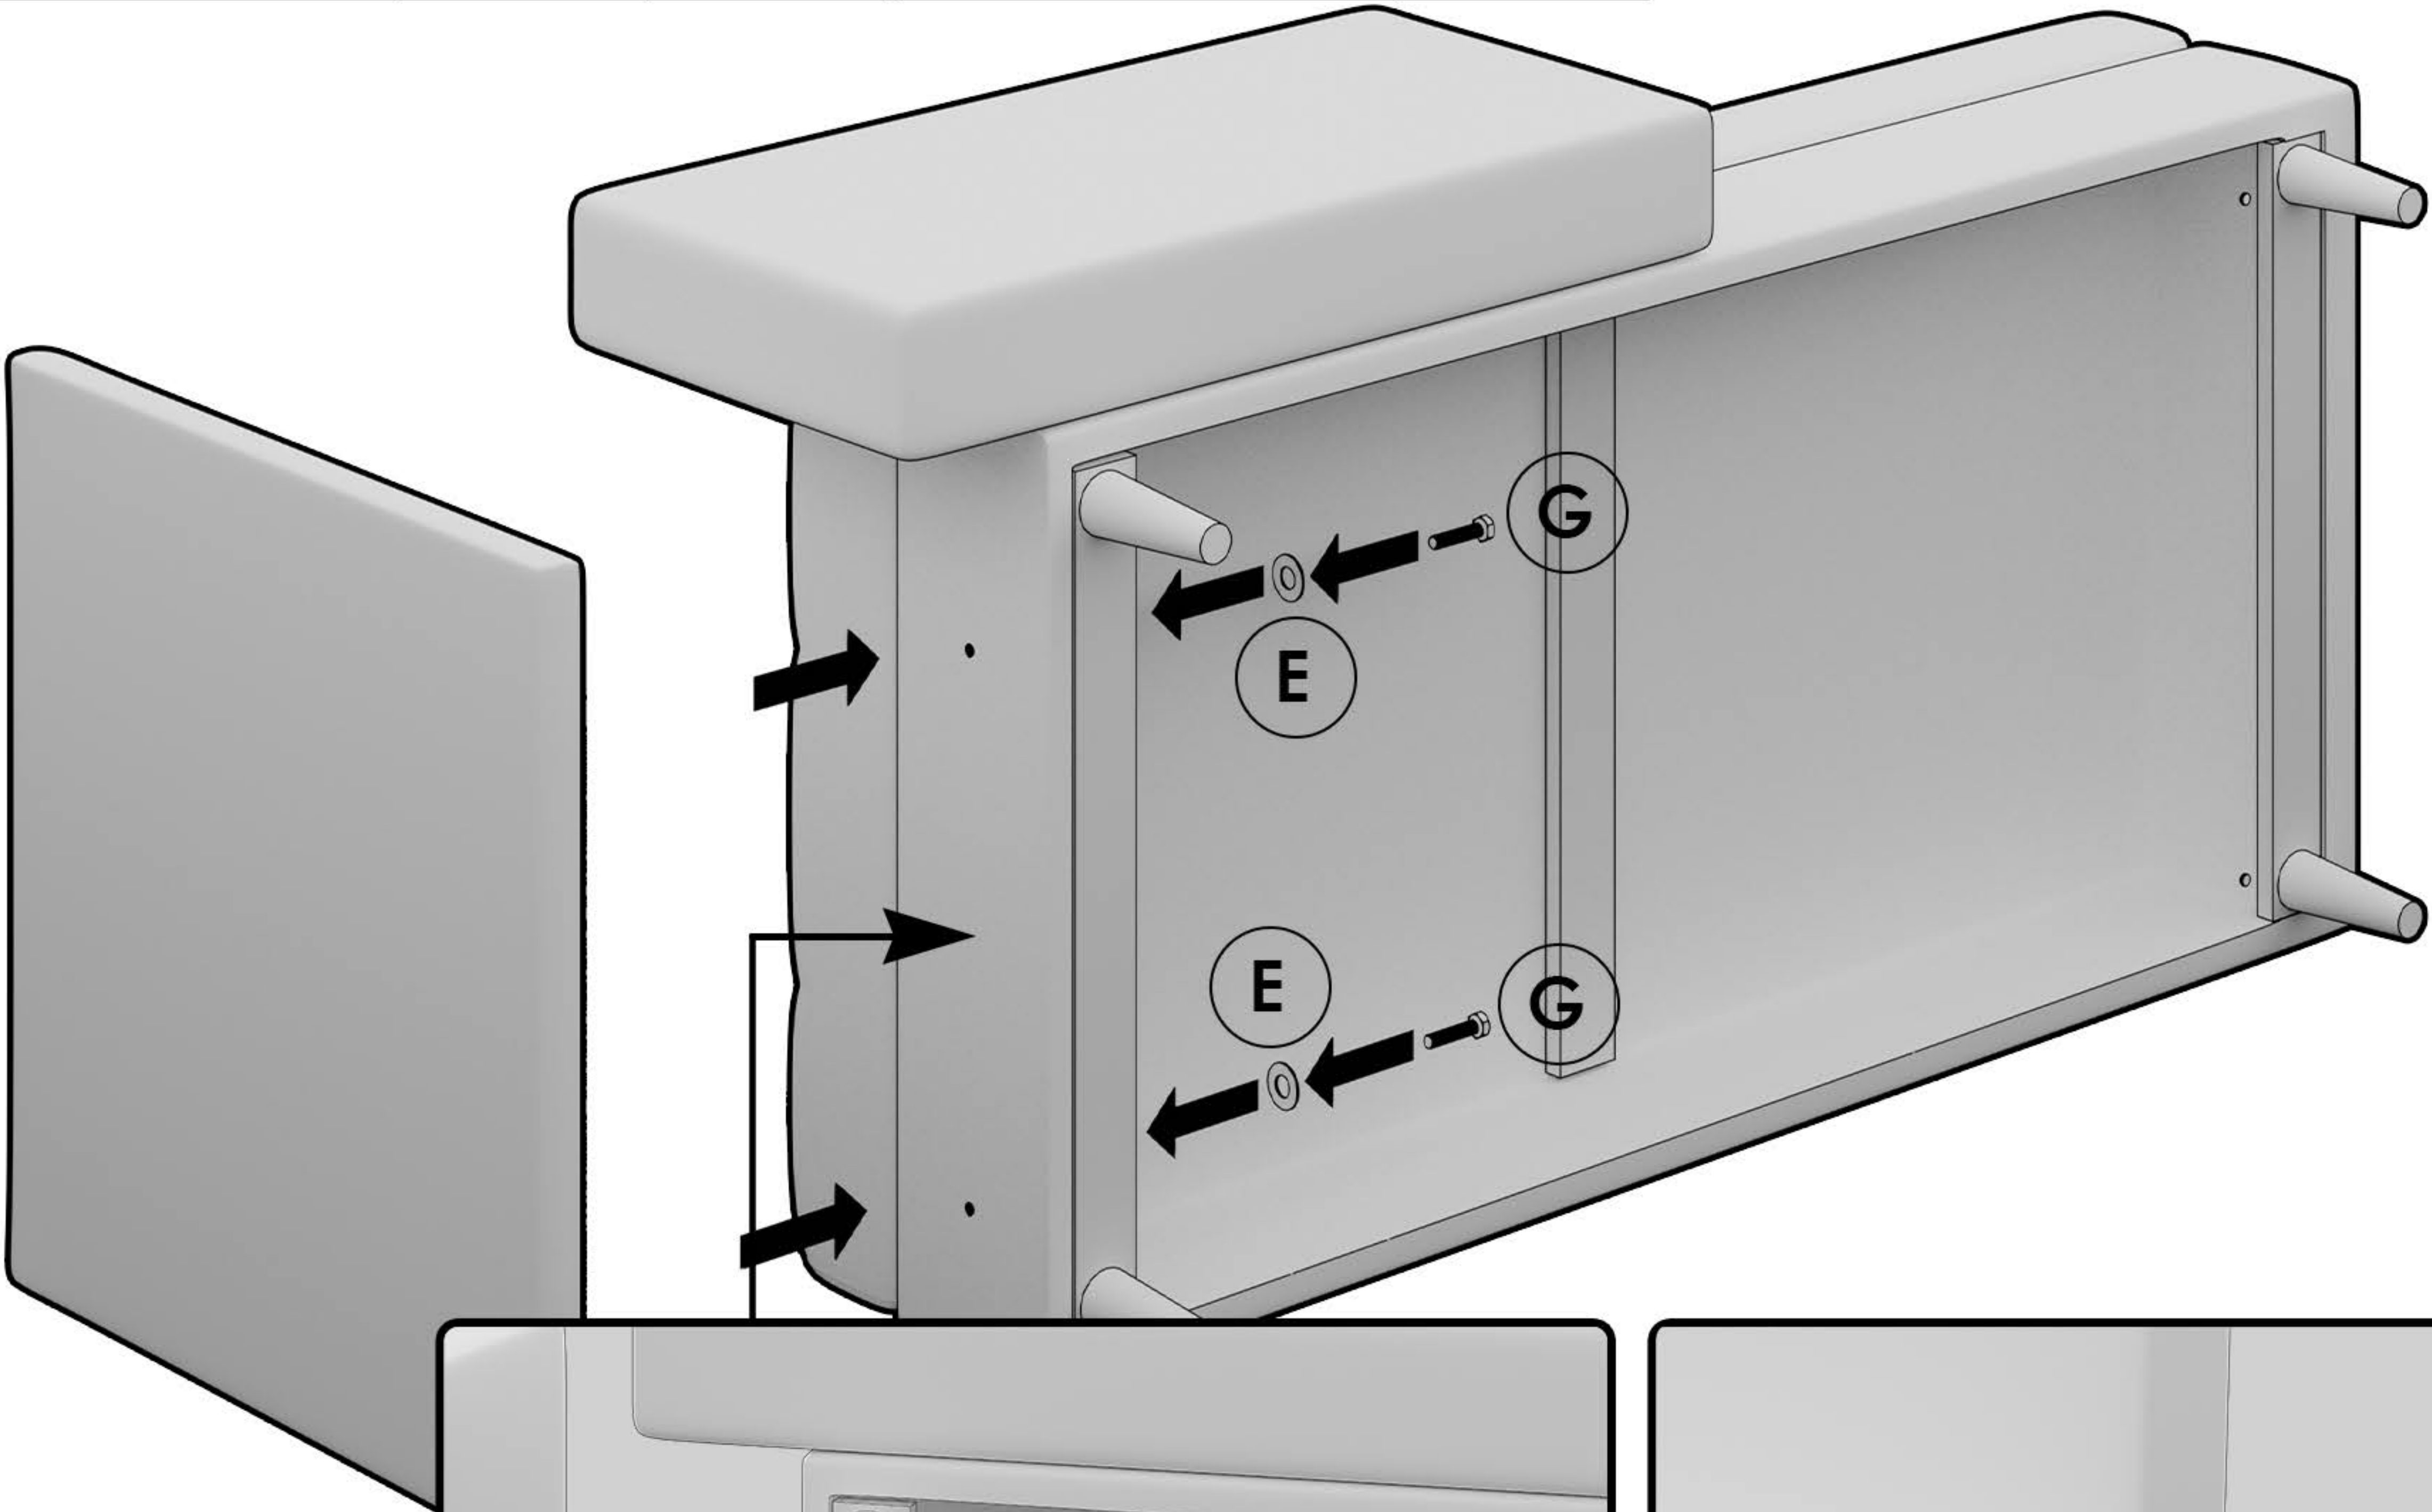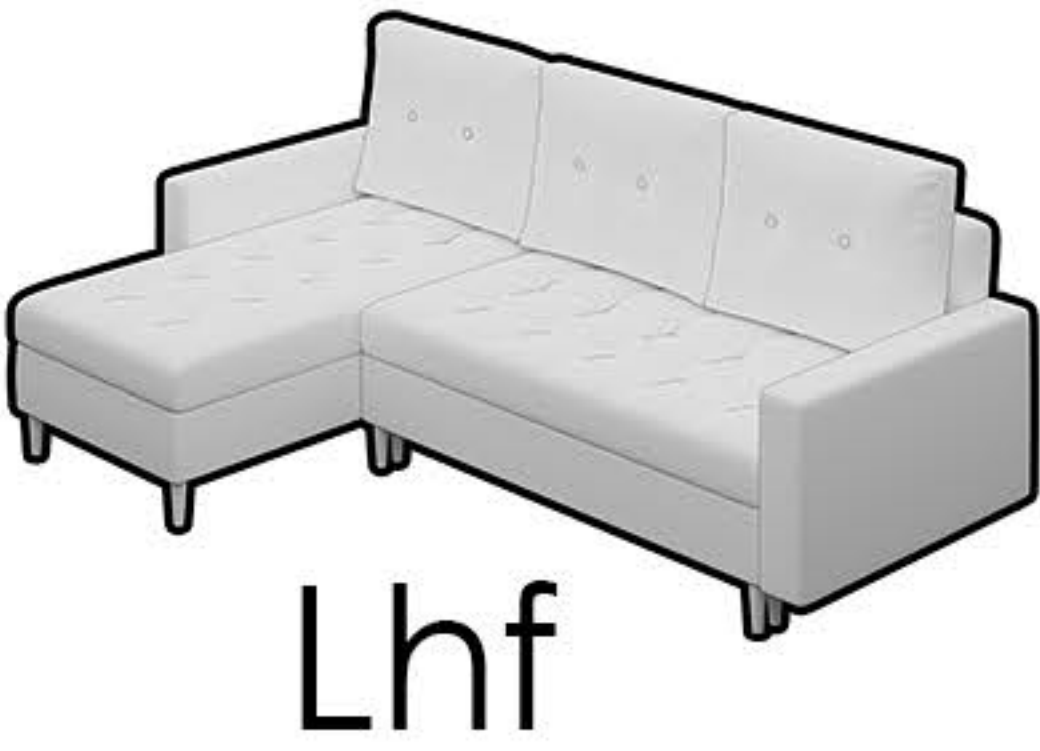

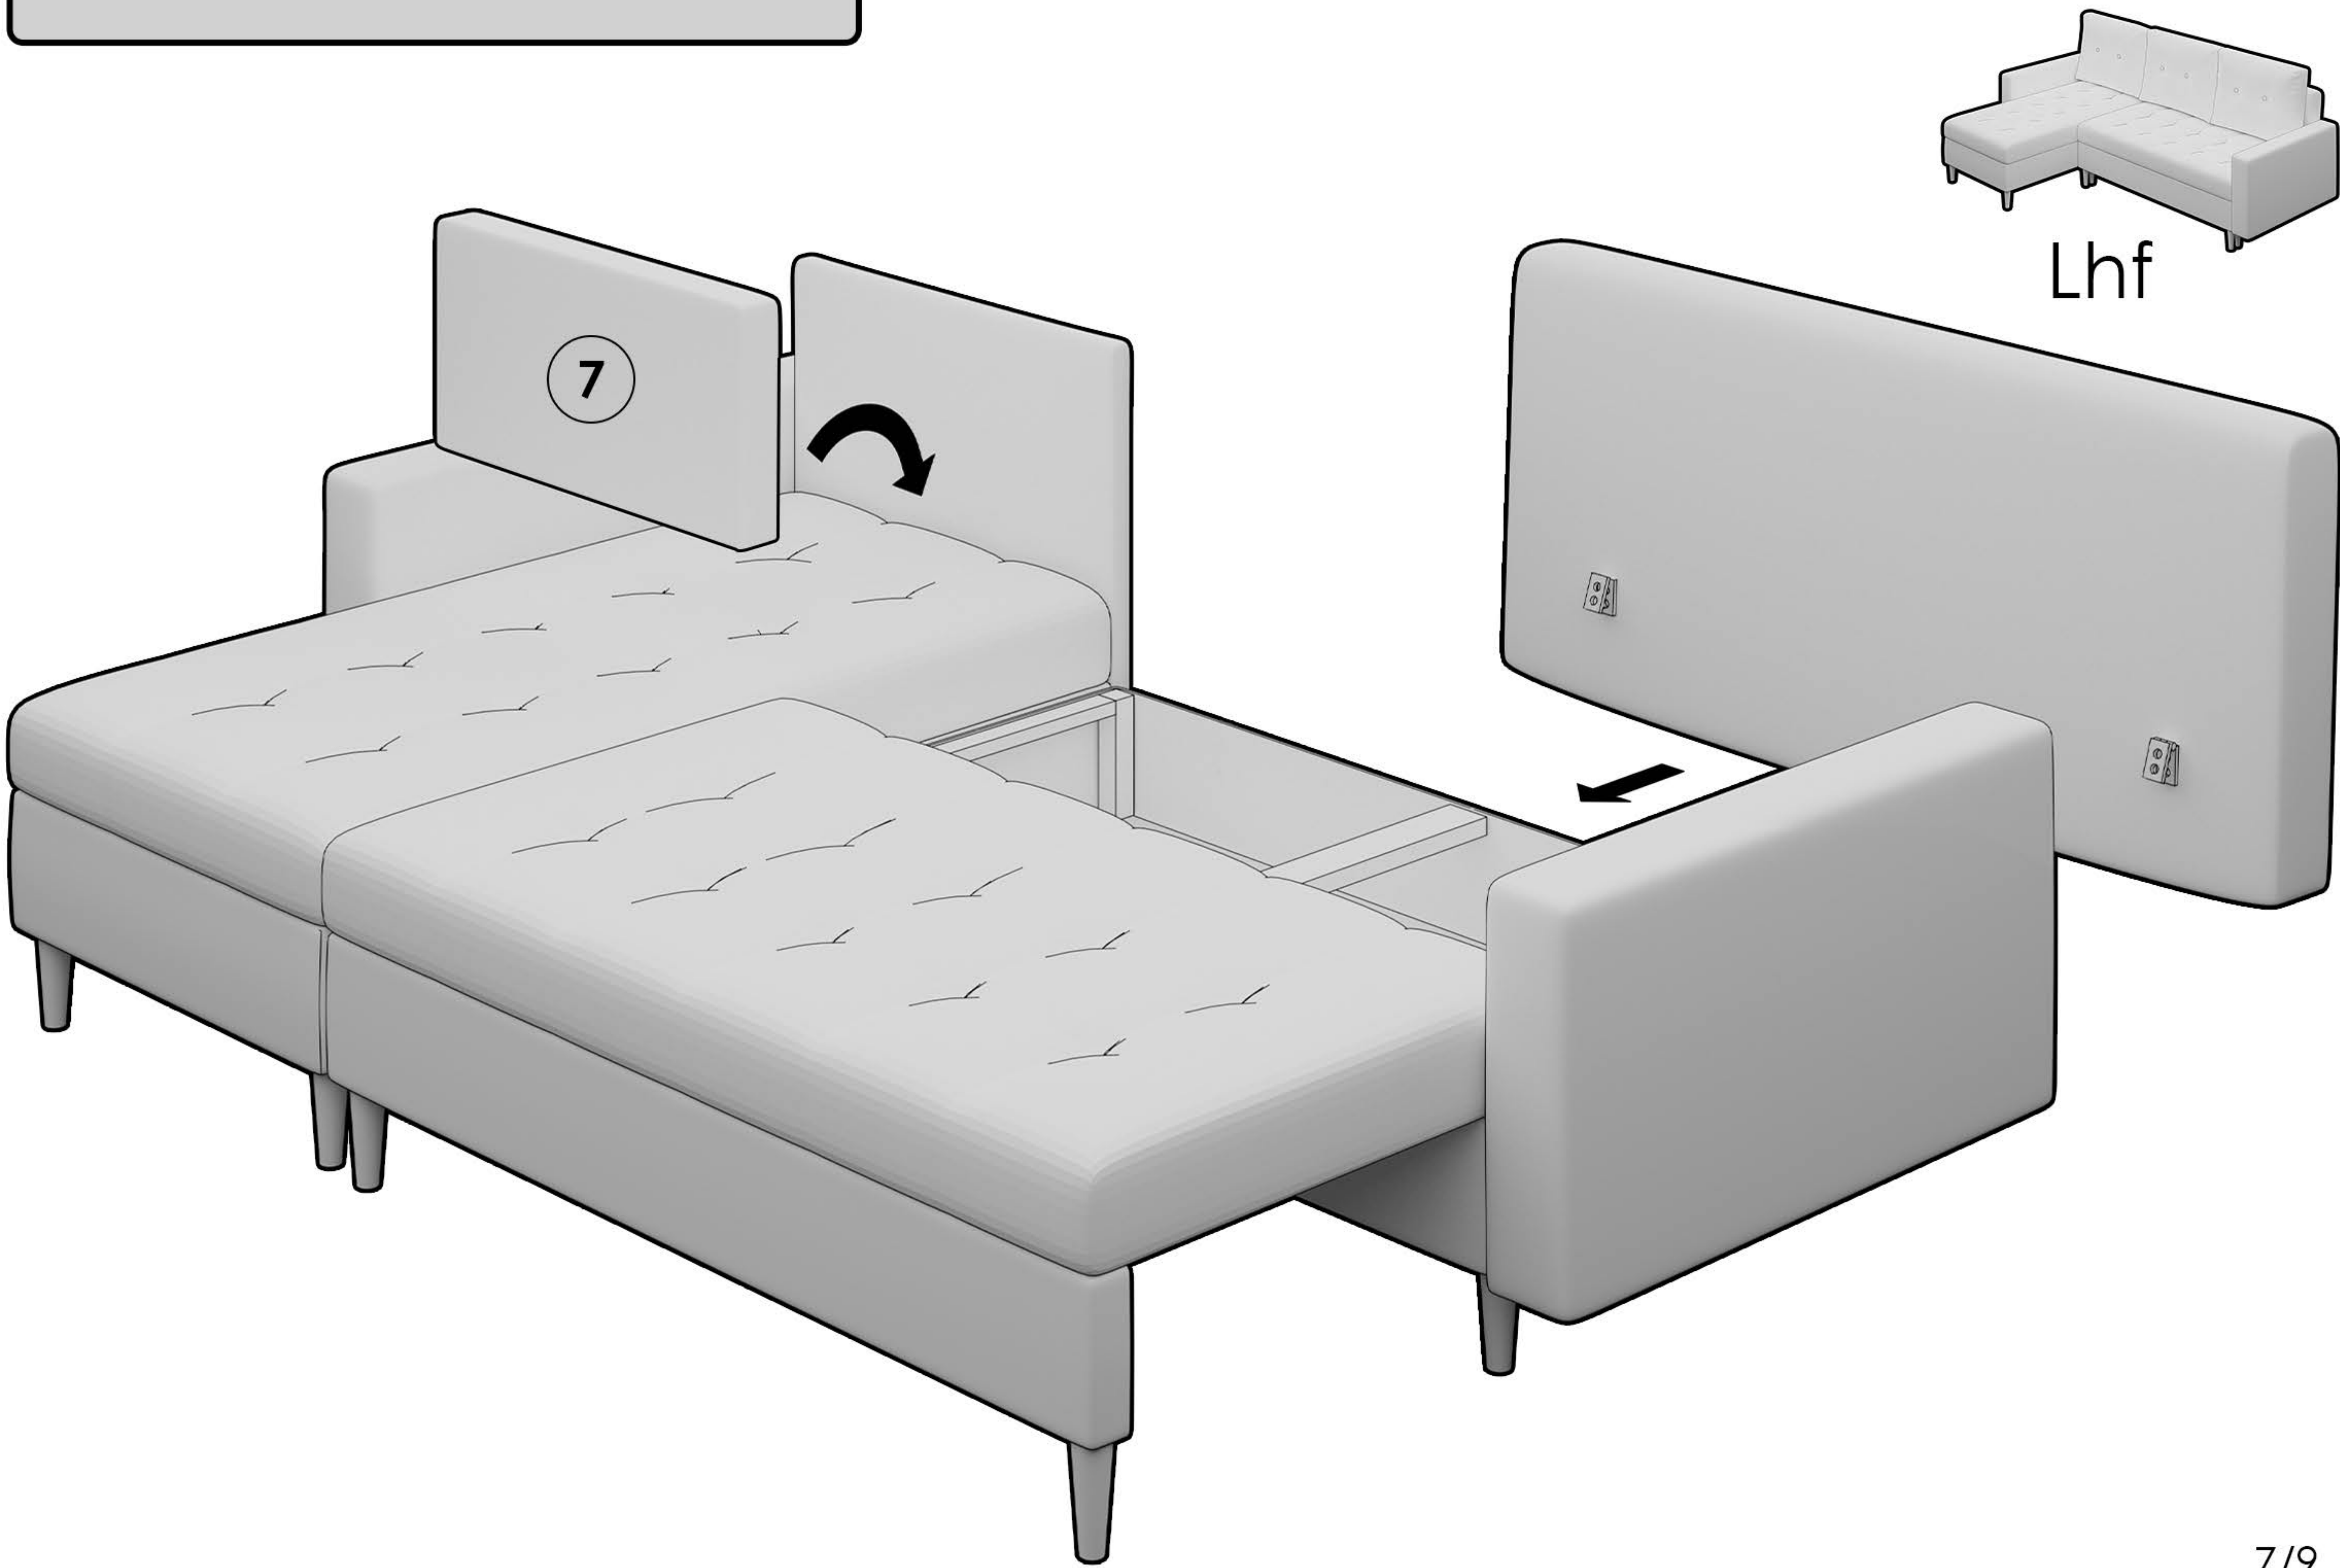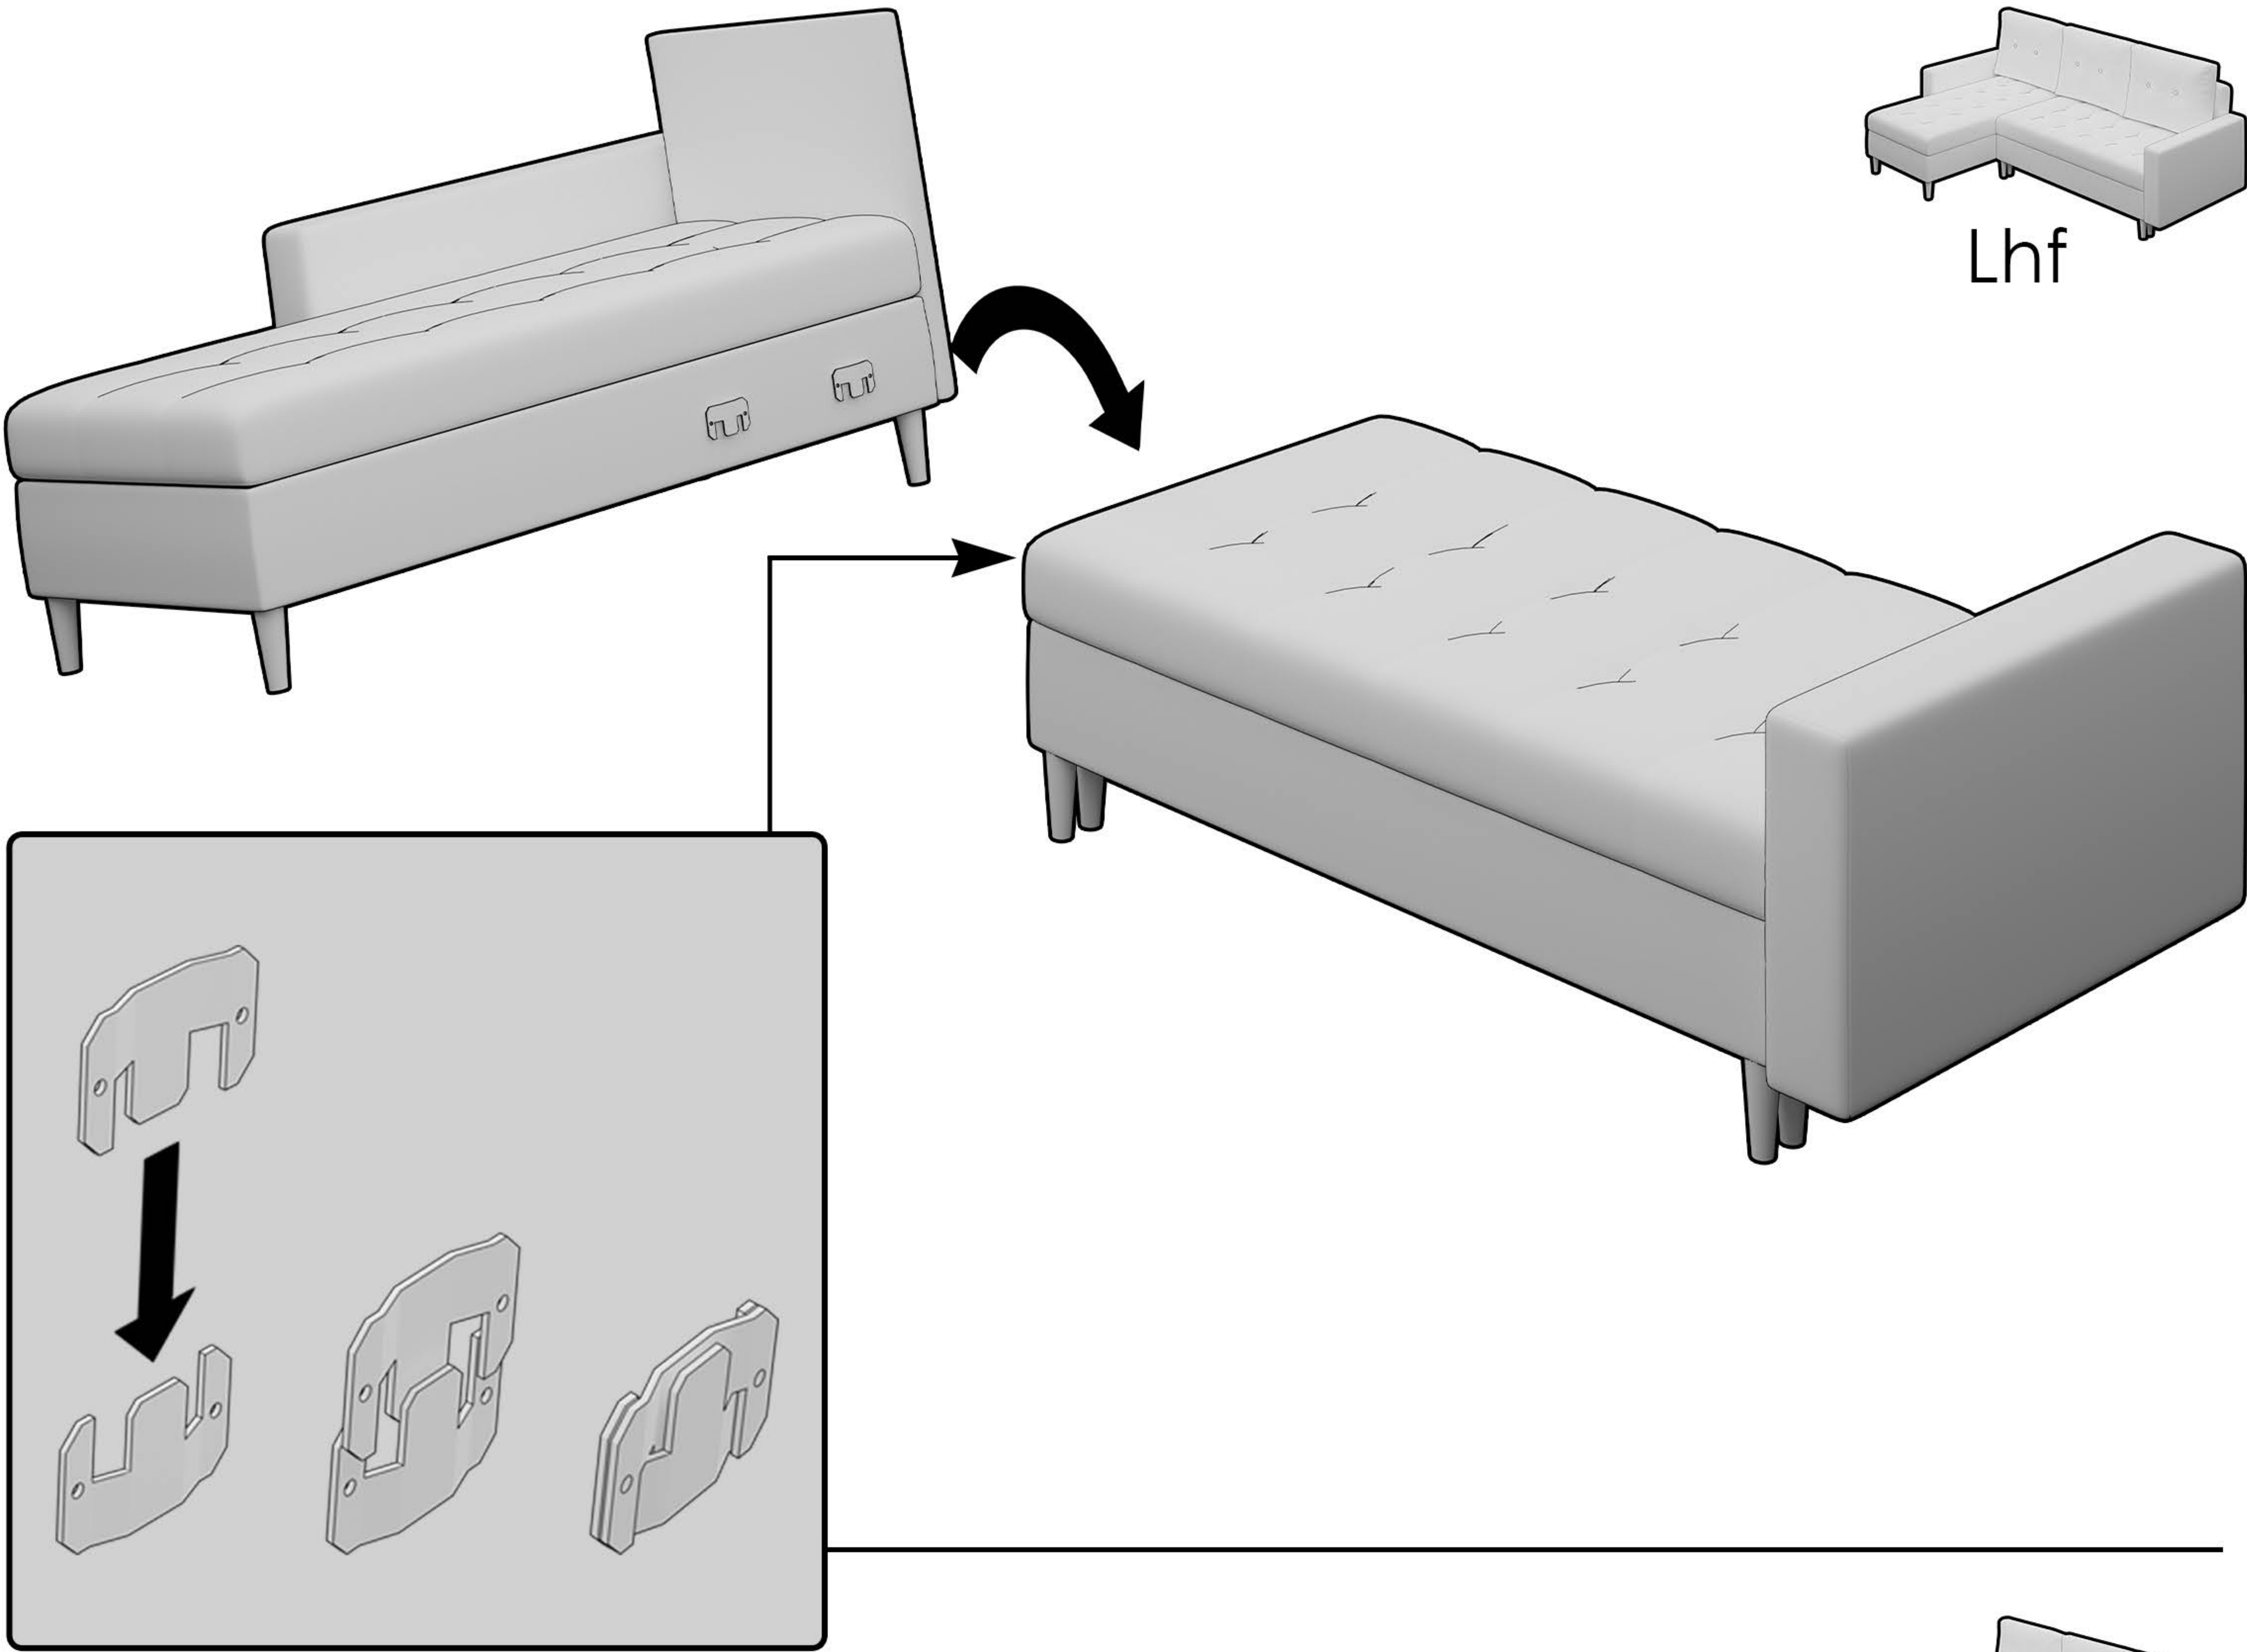



Lhf

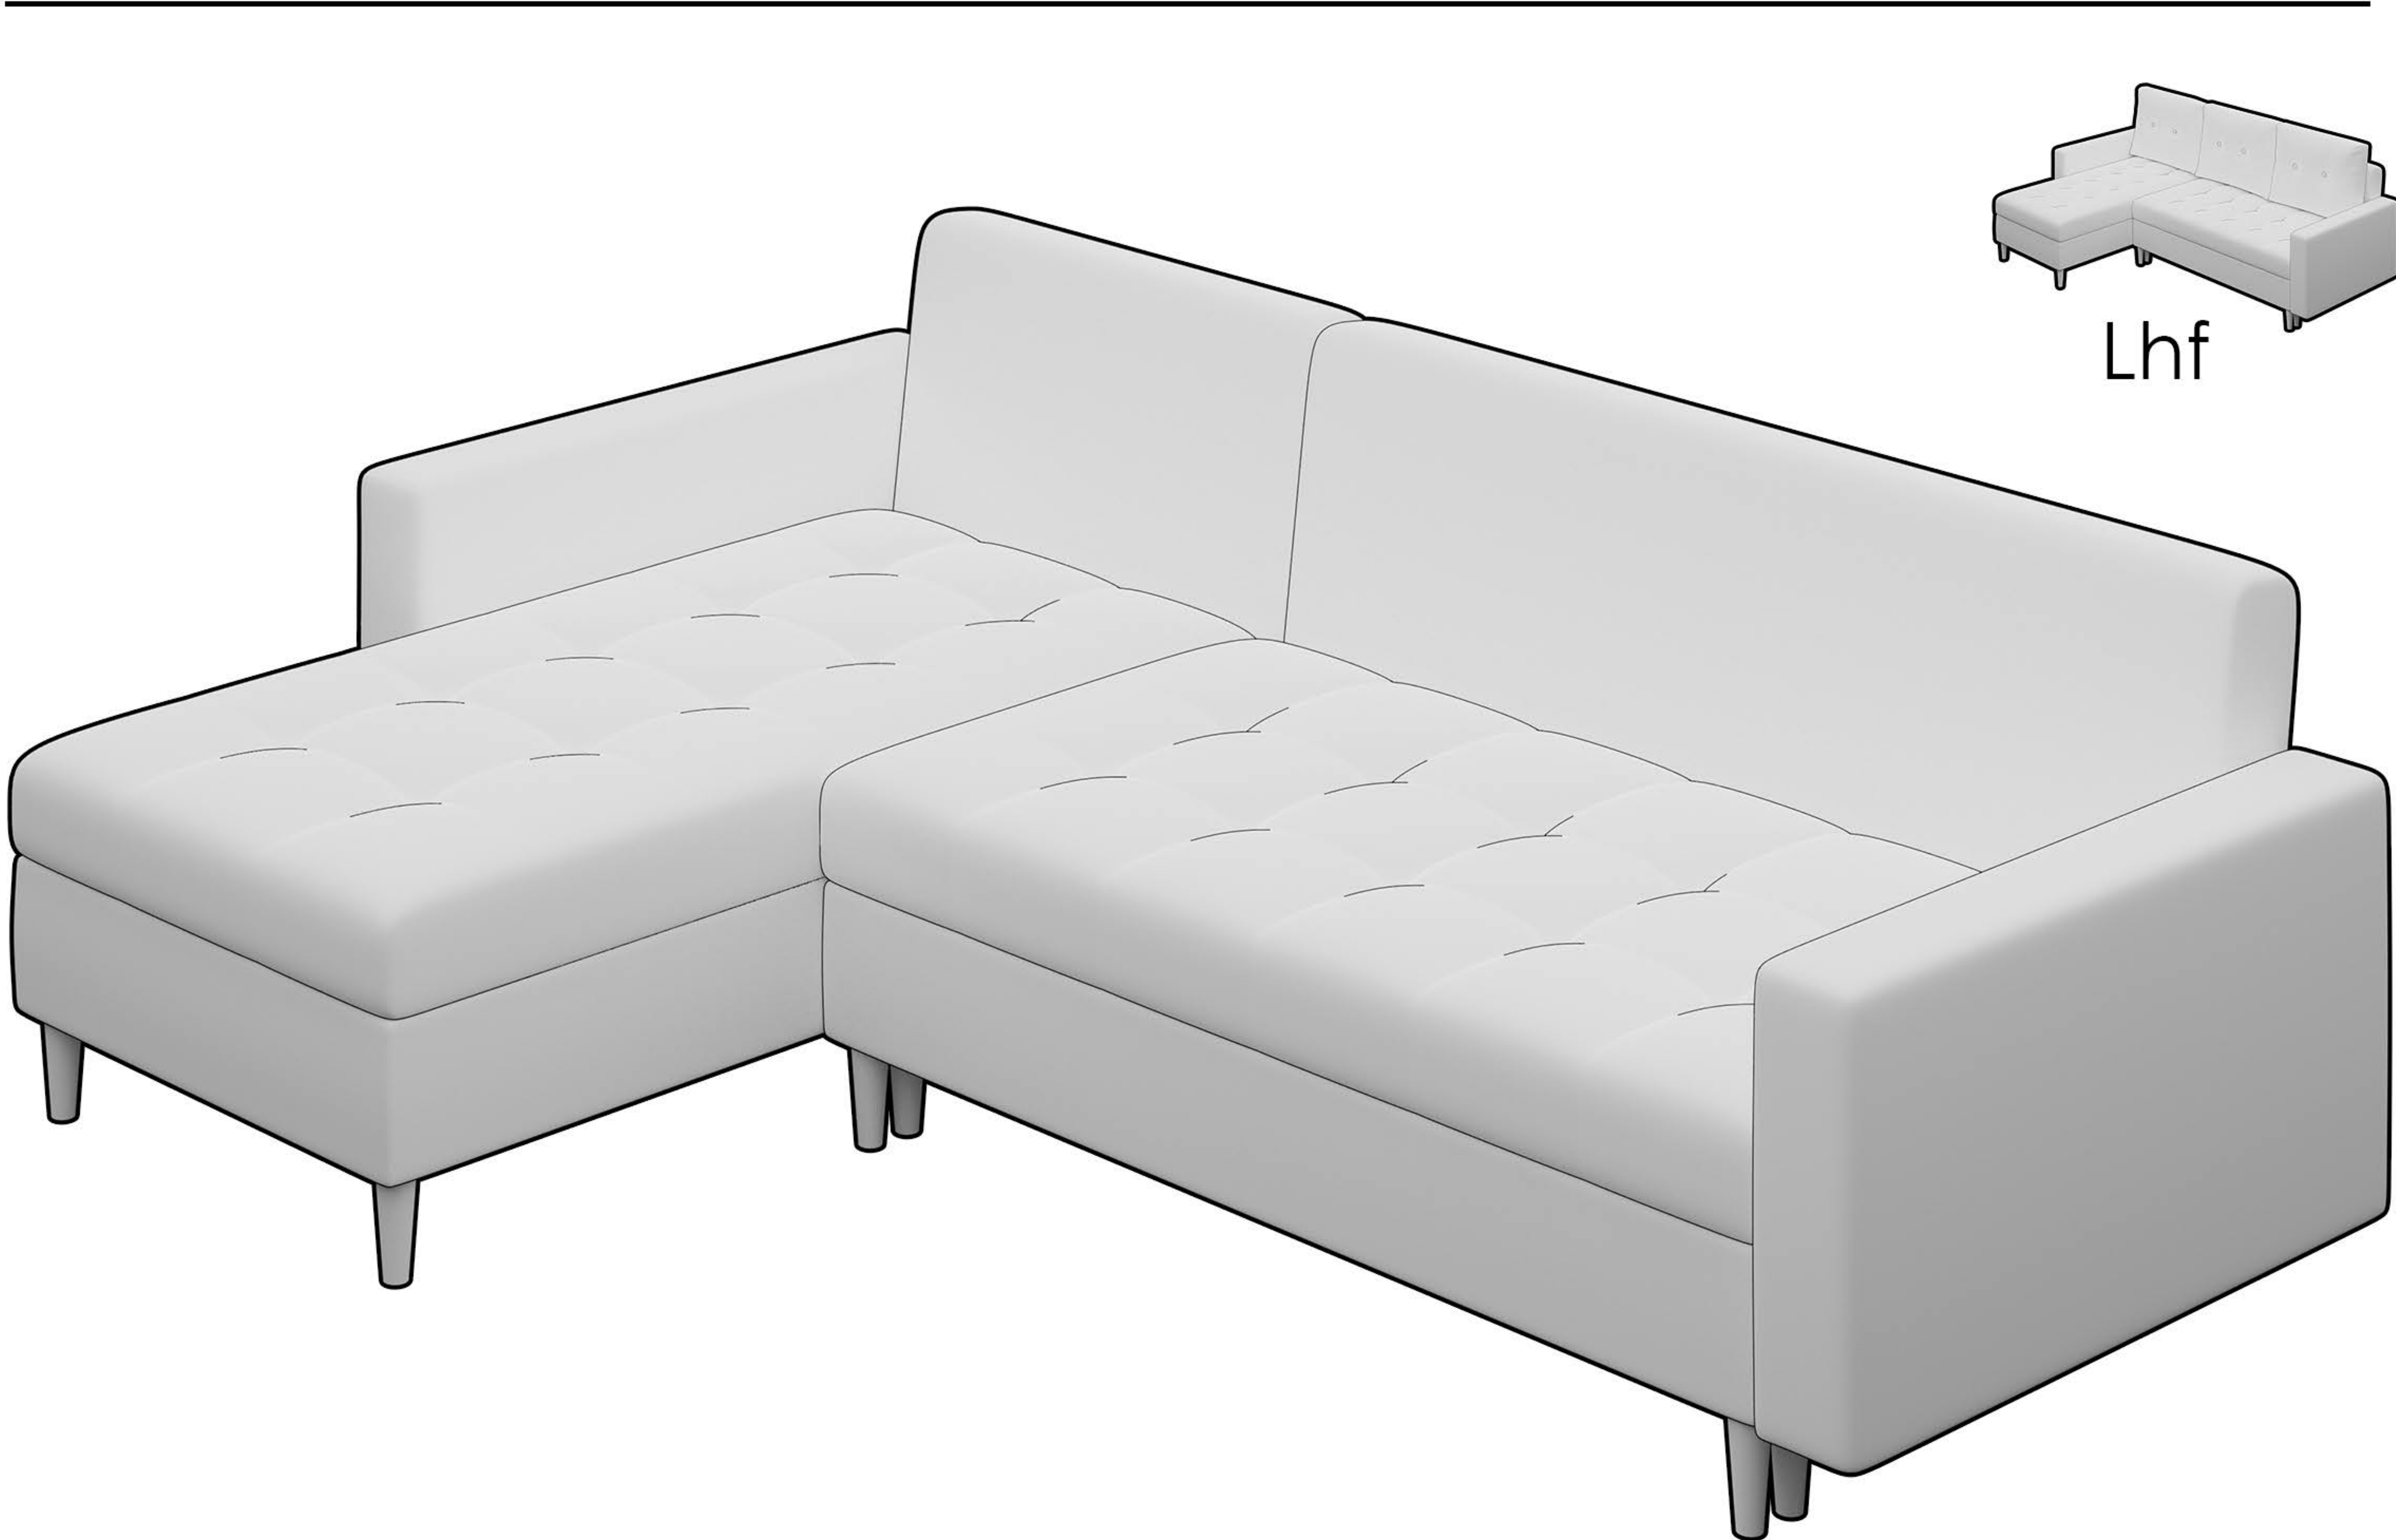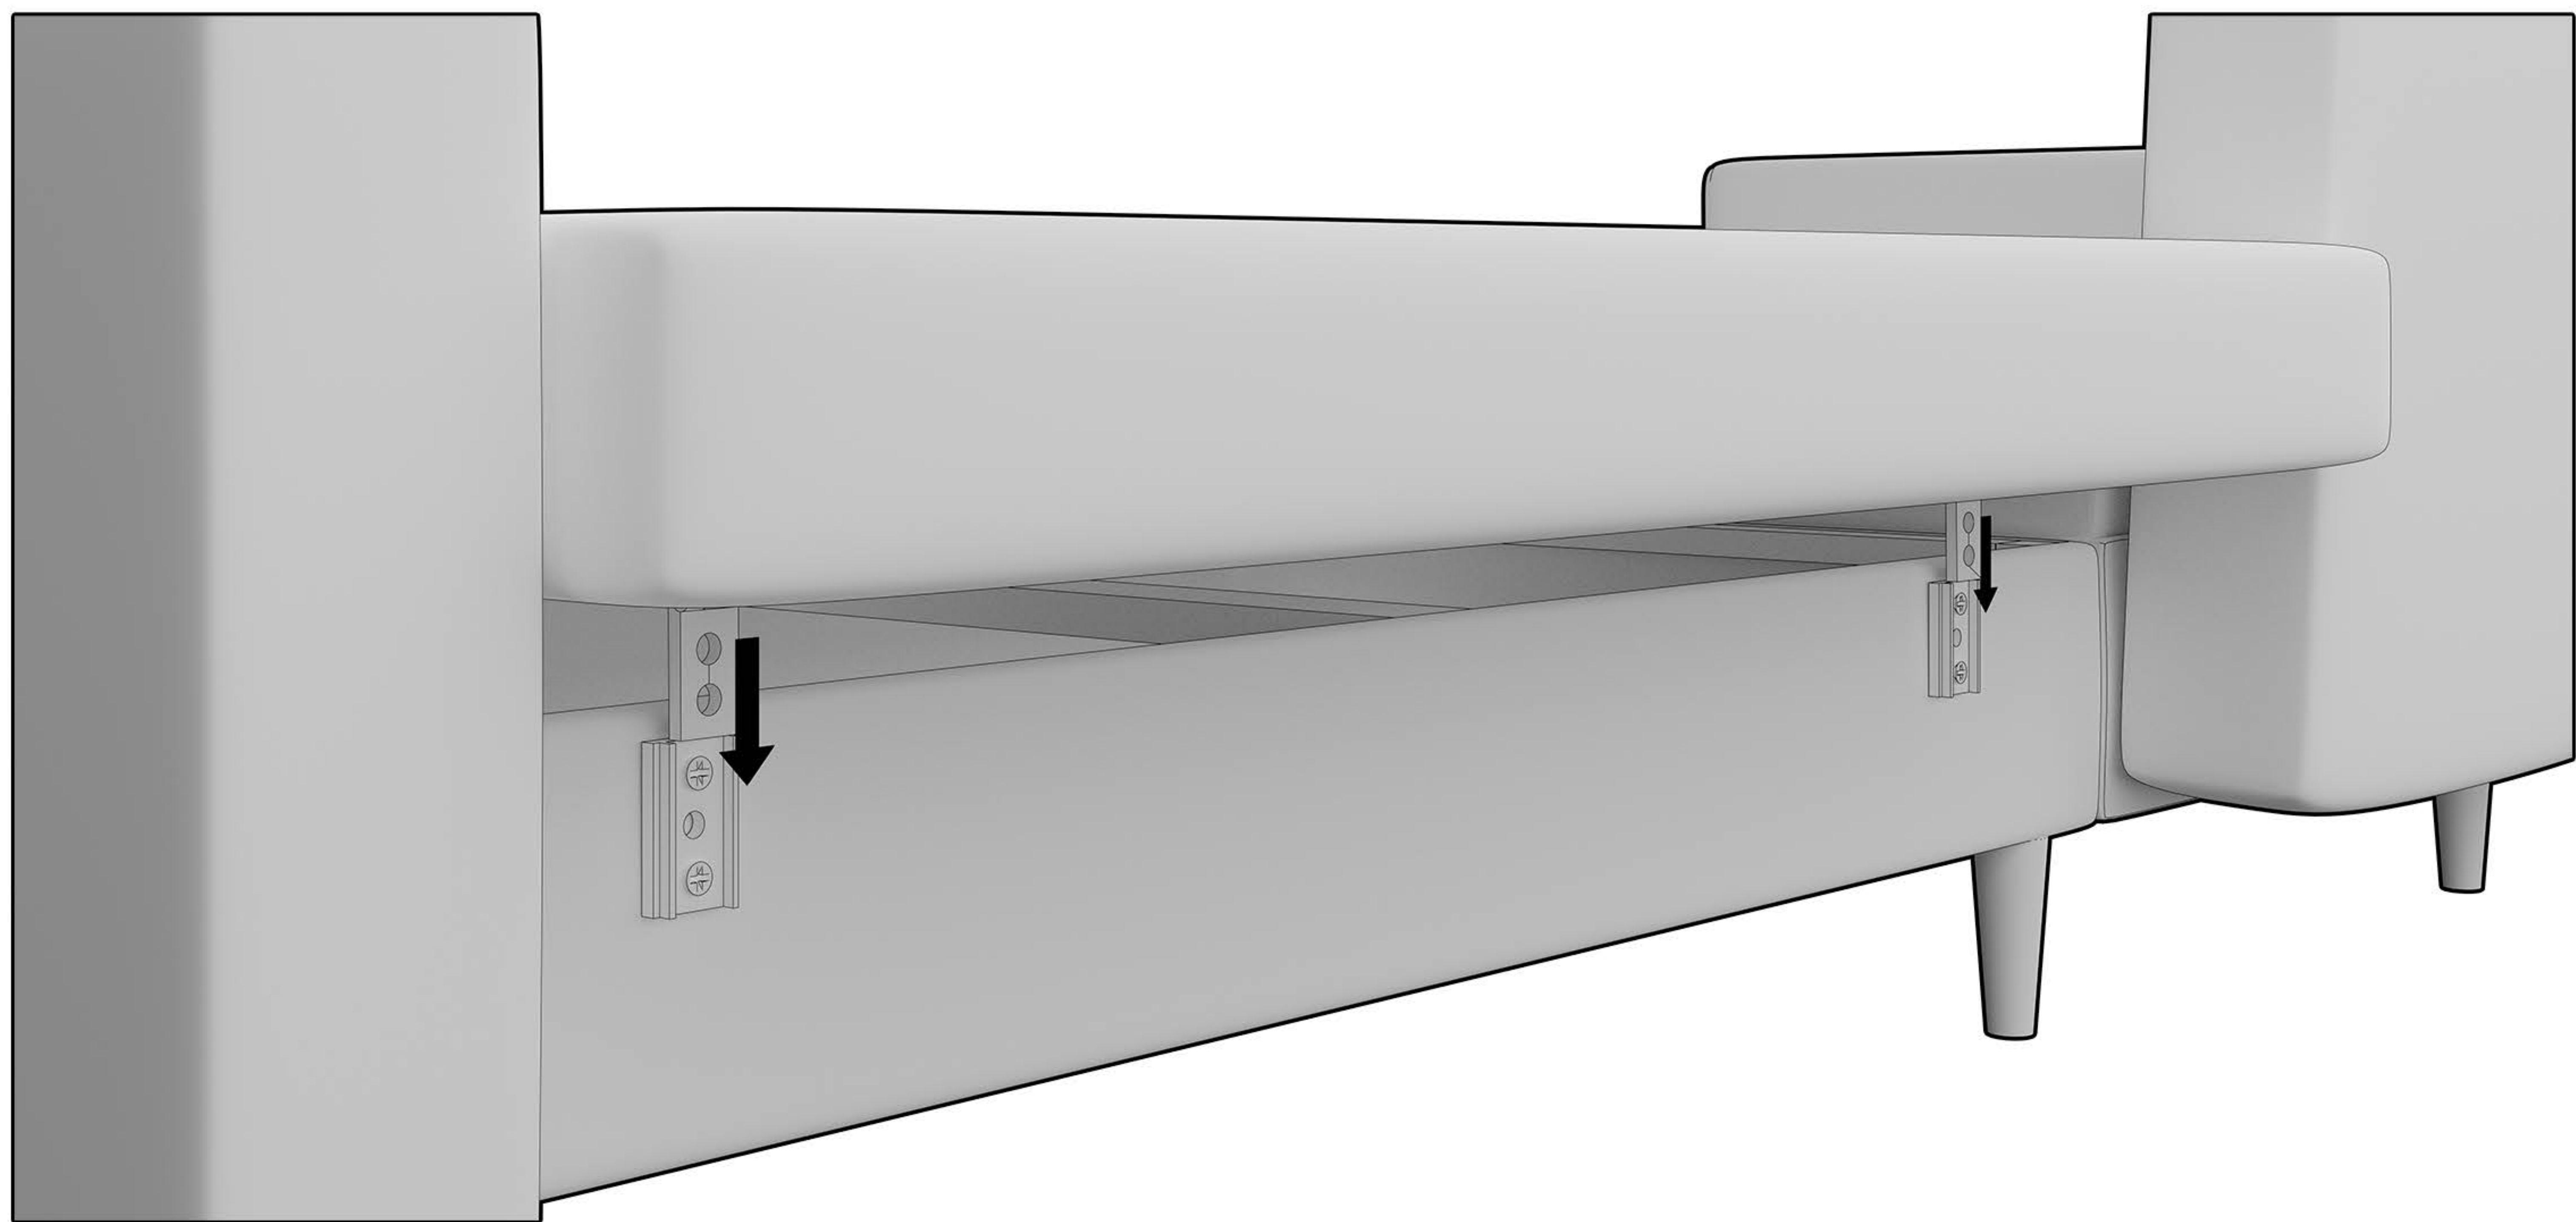

Lhf



Lhf

