


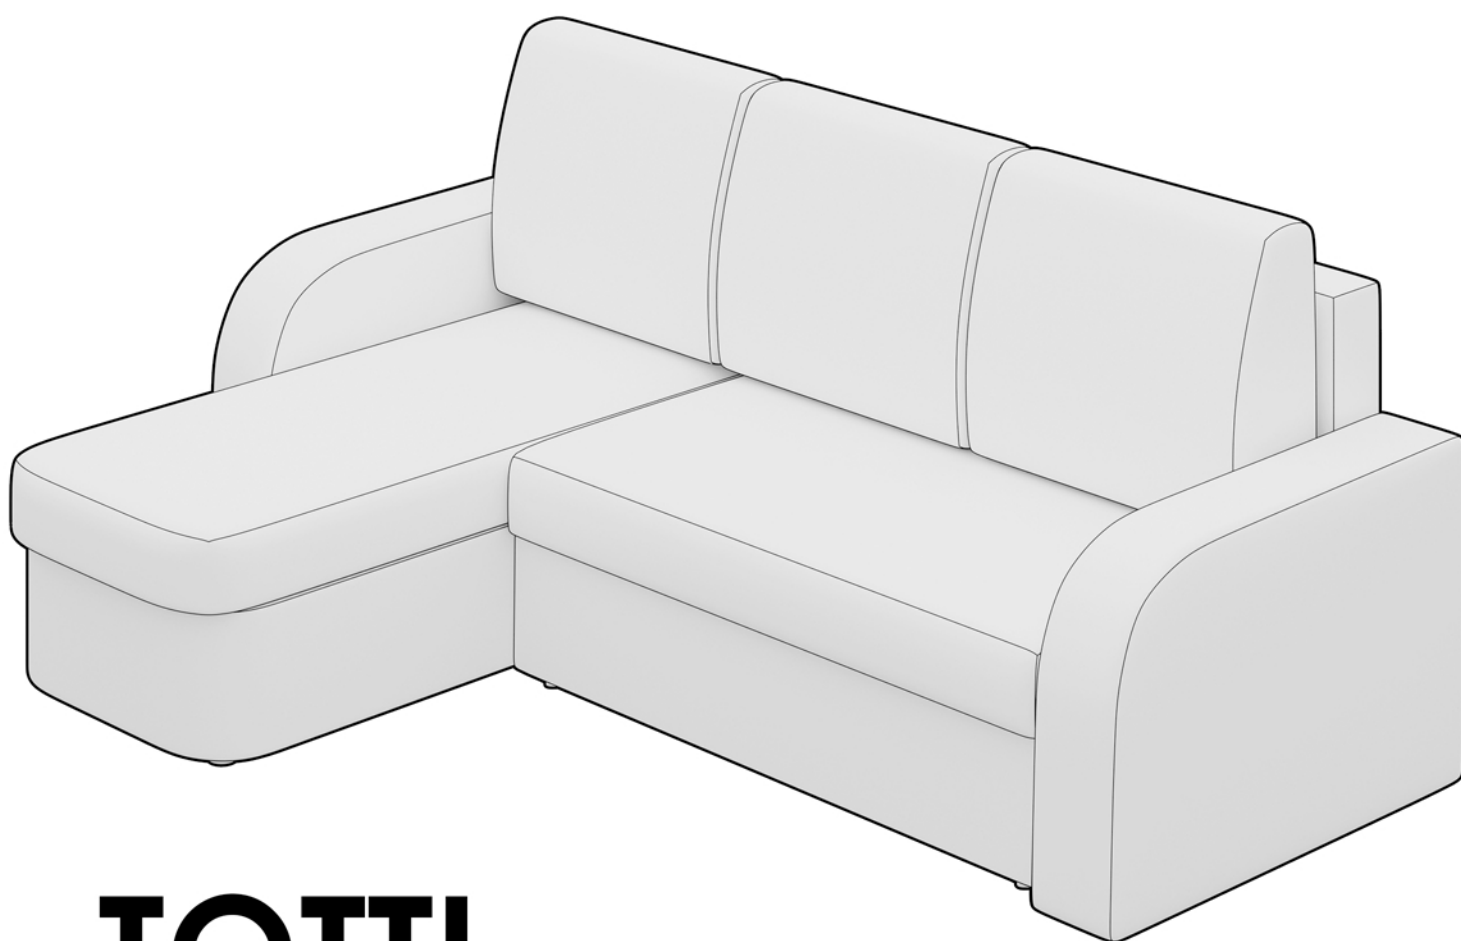

TOTTI





ASSEMBLING INSTRUCTIONS

MONTAGEANLEITUNG
INSTRUKCJA MONTAŻU



HIDDEN ELEMENTS
VERSTECKTE ELEMENTE
UKRYTE ELEMENTY




(P)		
A		x6
B		x6
C		x4
D		x8

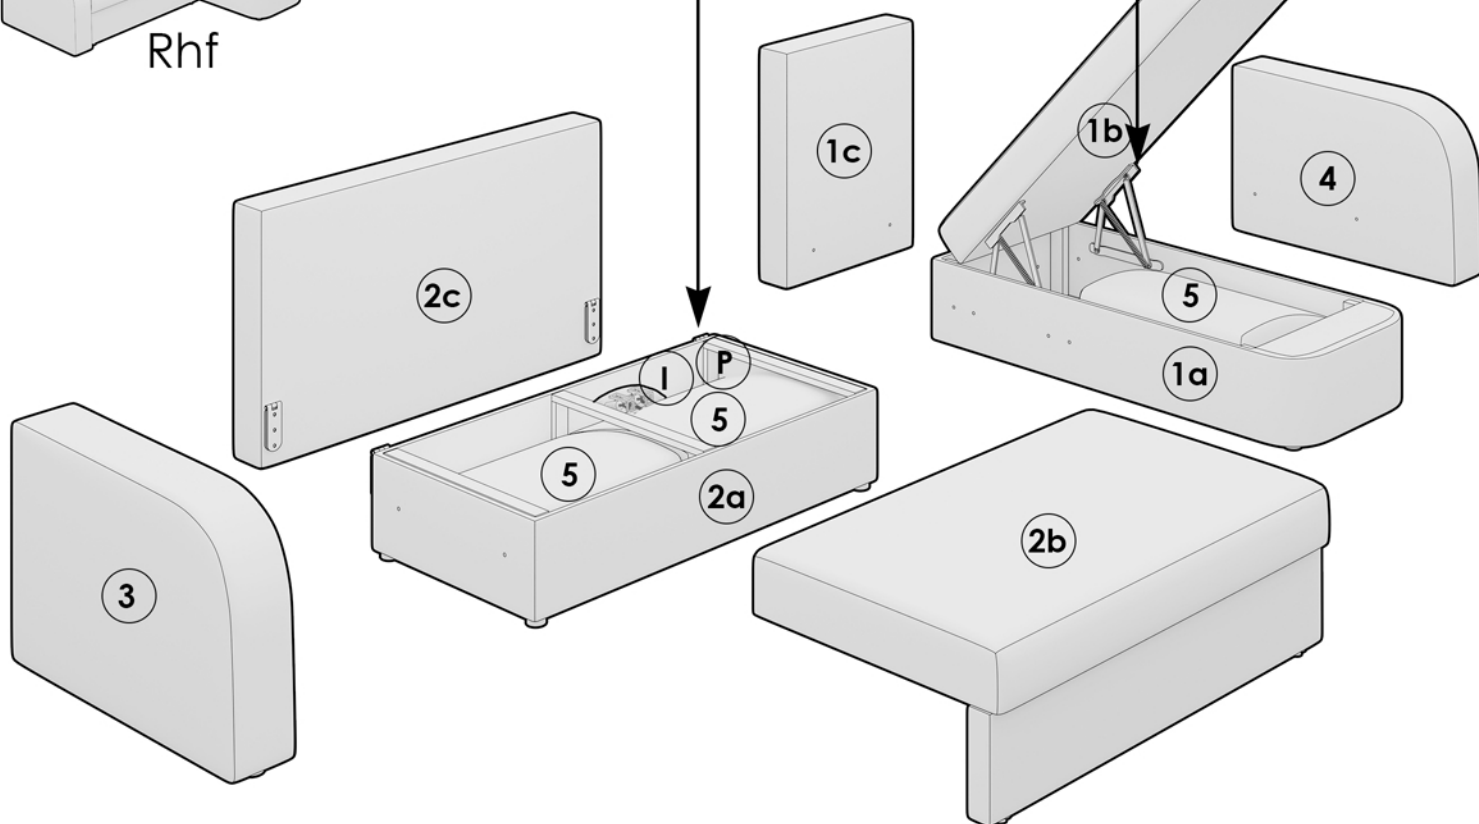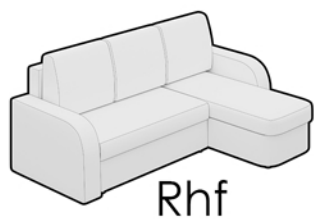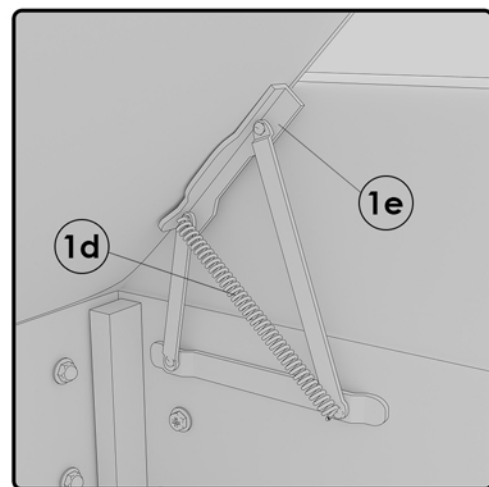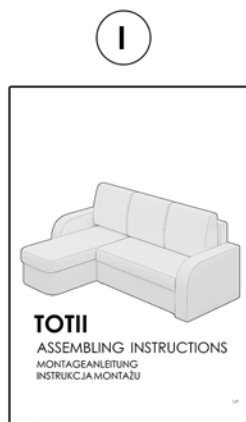



HIDDEN ELEMENTS
VERSTECKTE ELEMENTE
UKRYTE ELEMENTY

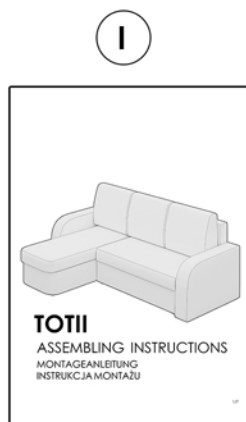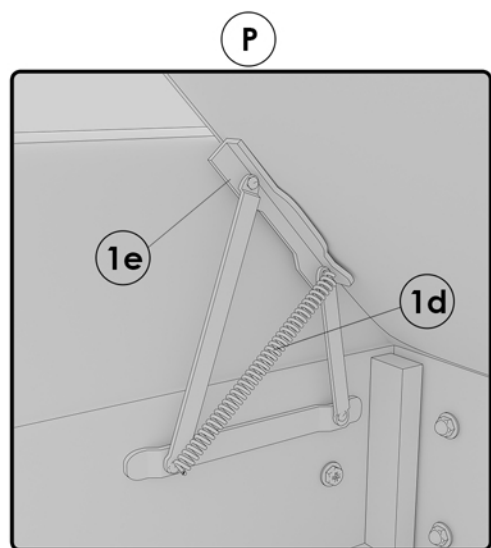




A		x6
B		x6
C		x4
E		x8

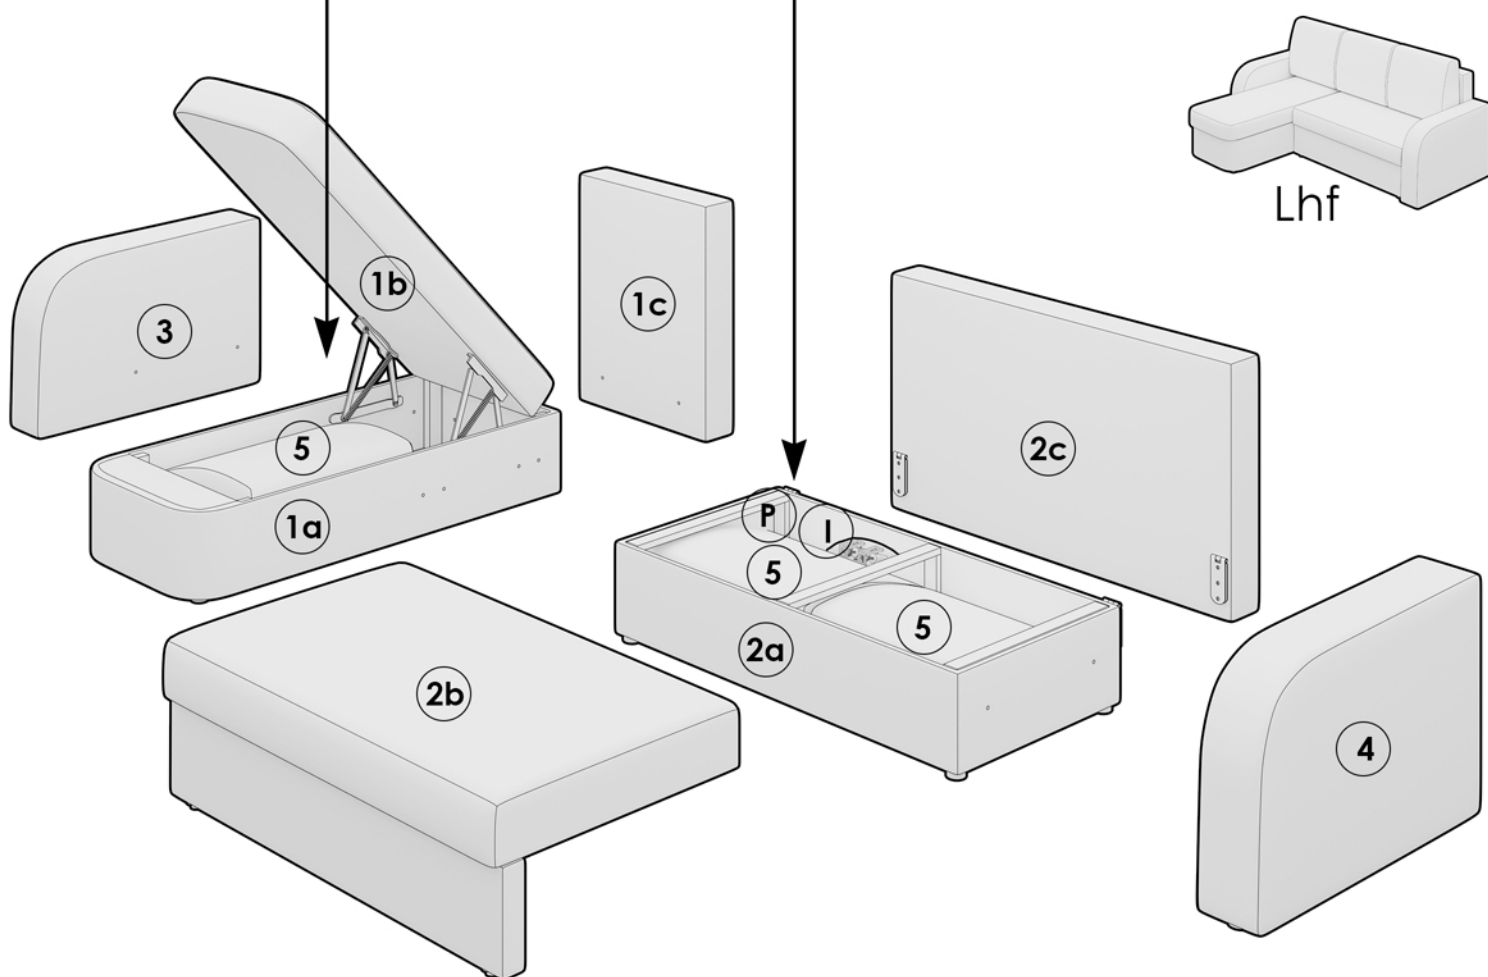


I.

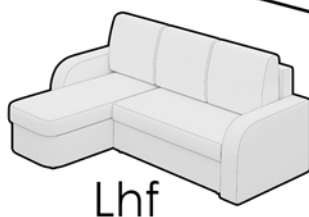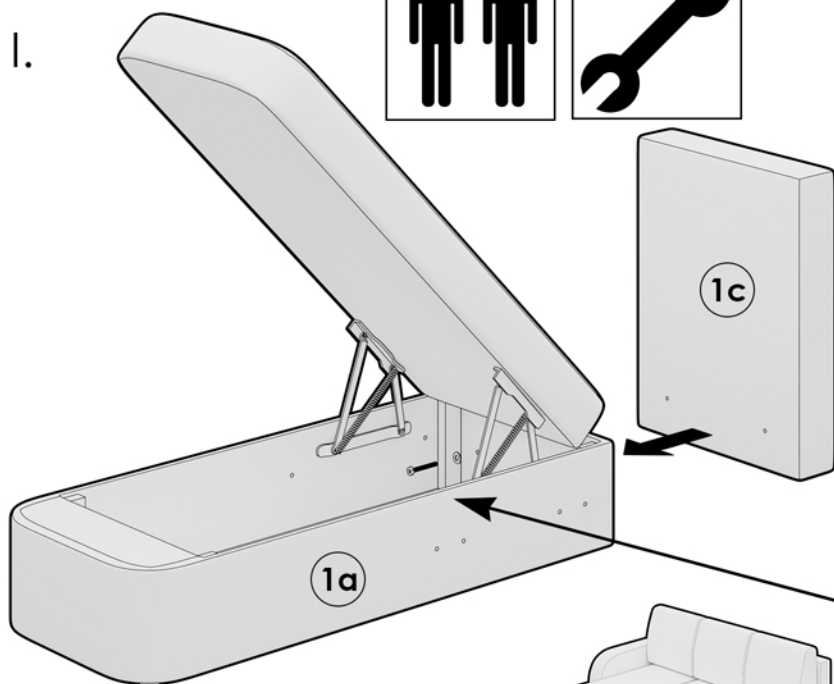






A		x2
B		x2

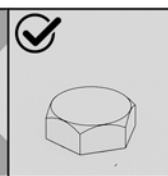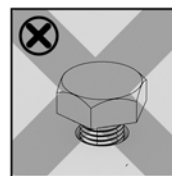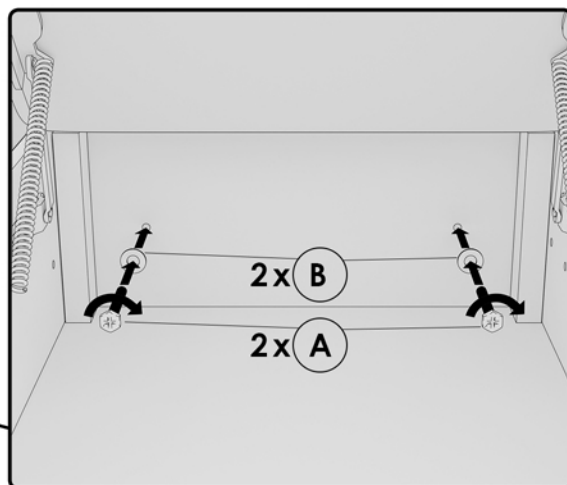


II.

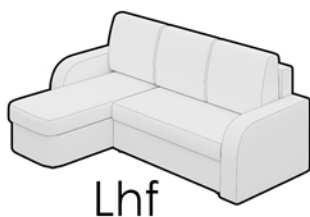





C		x2
D		x4

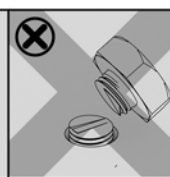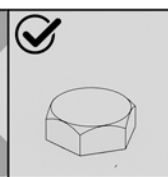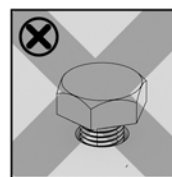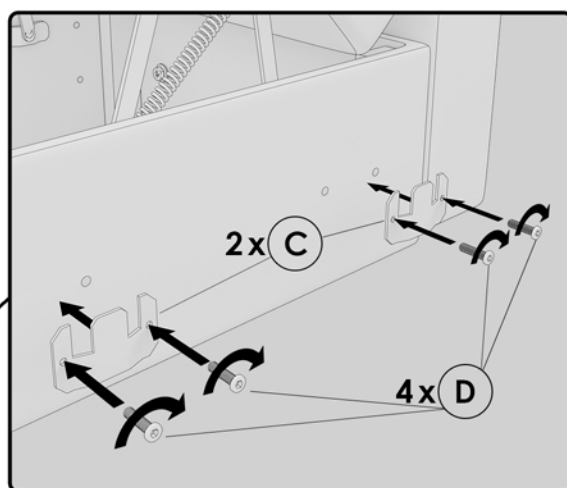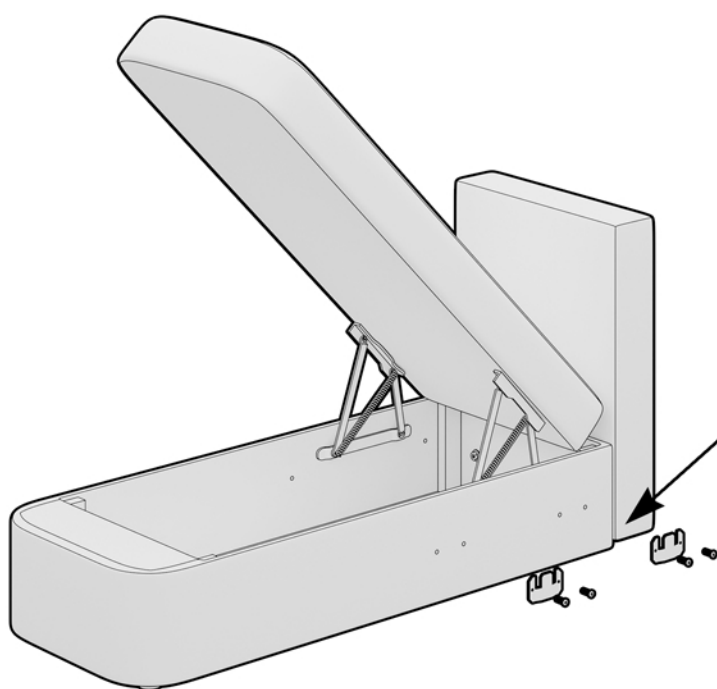




III.

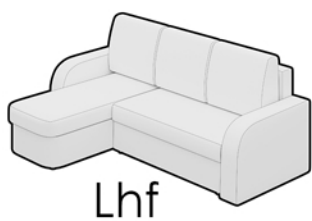


C		x2
D		x4

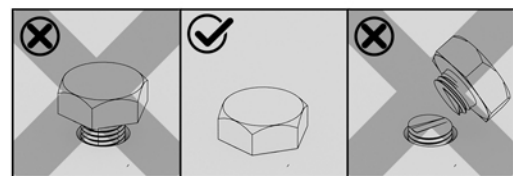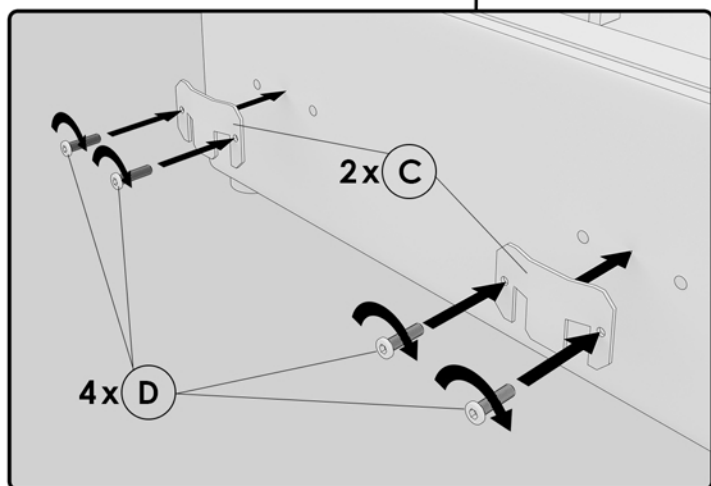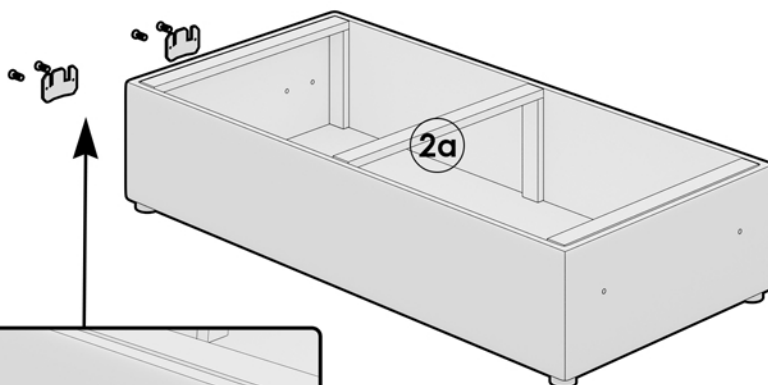


IV.

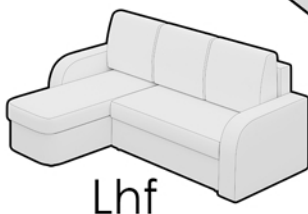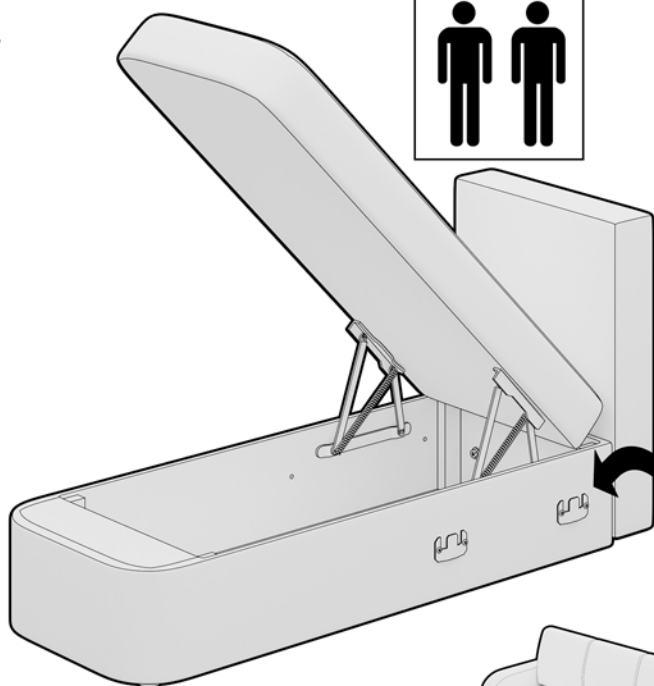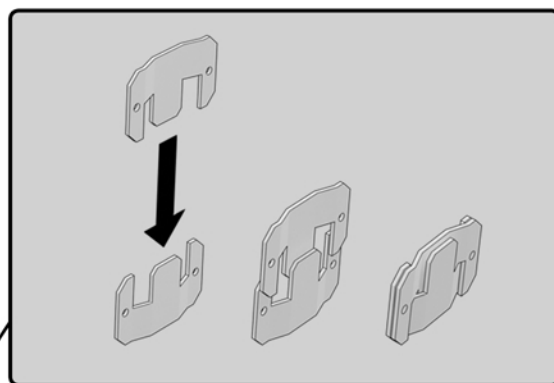


V.

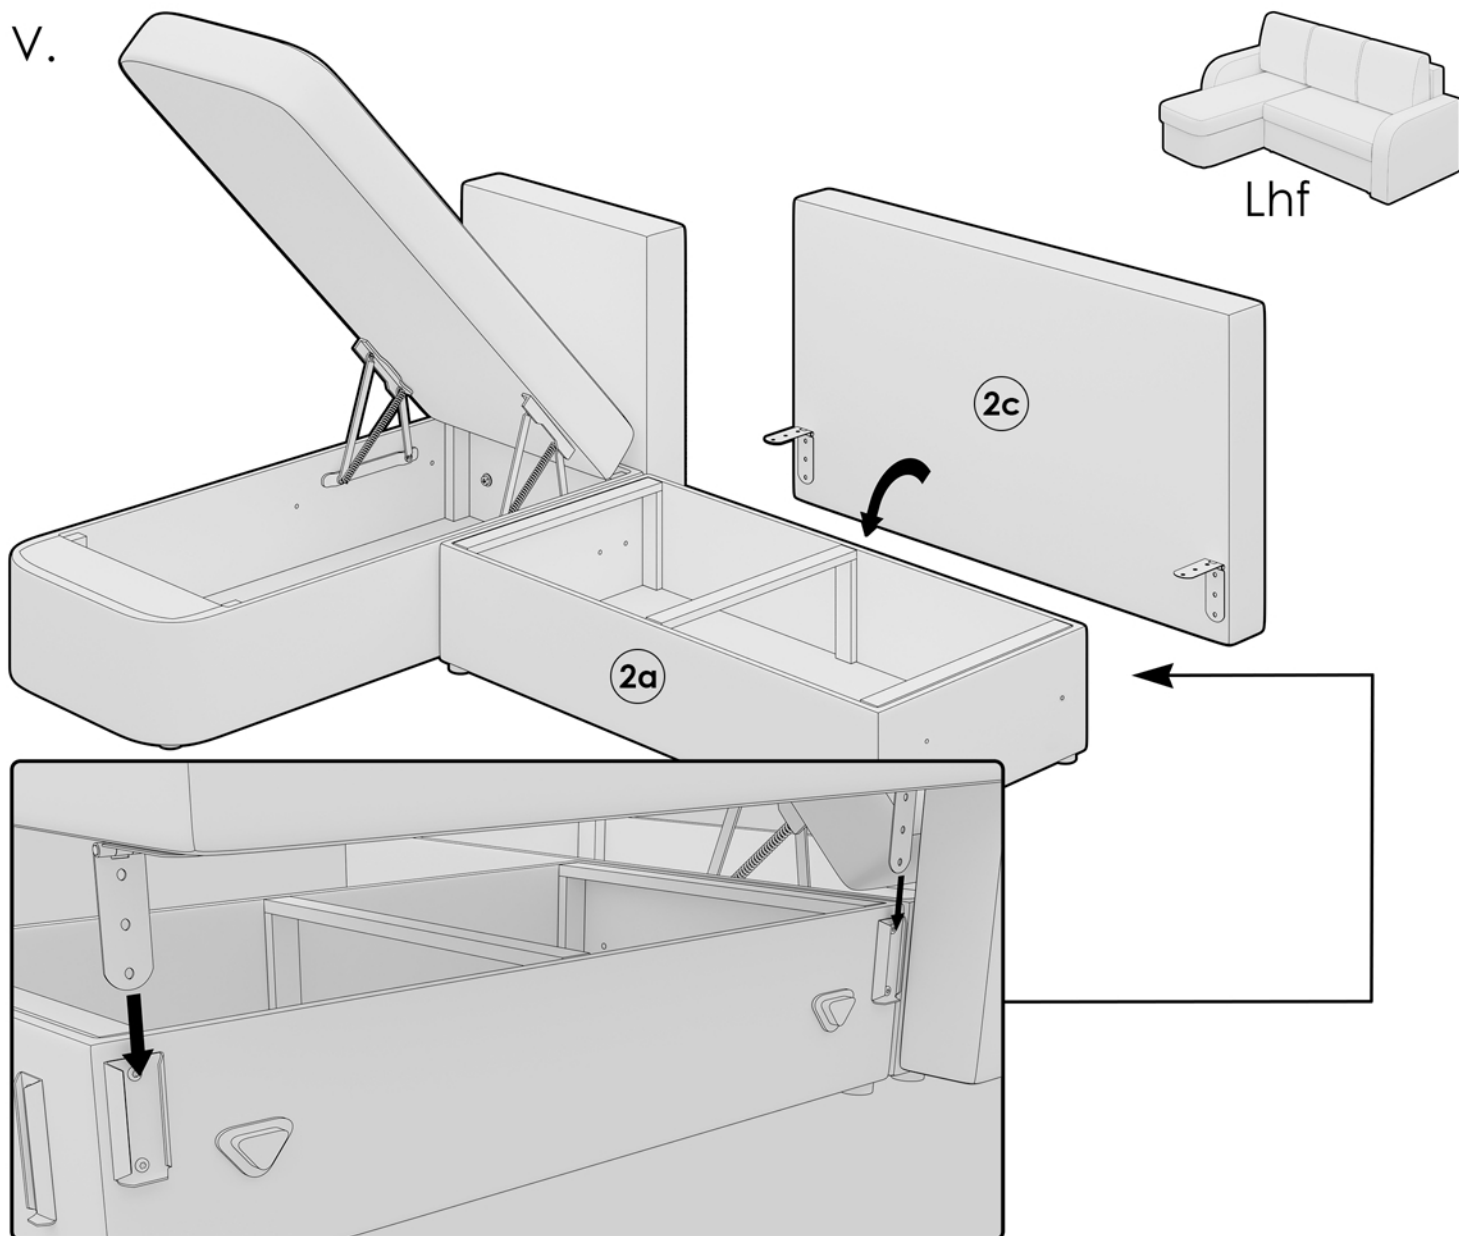





VI.

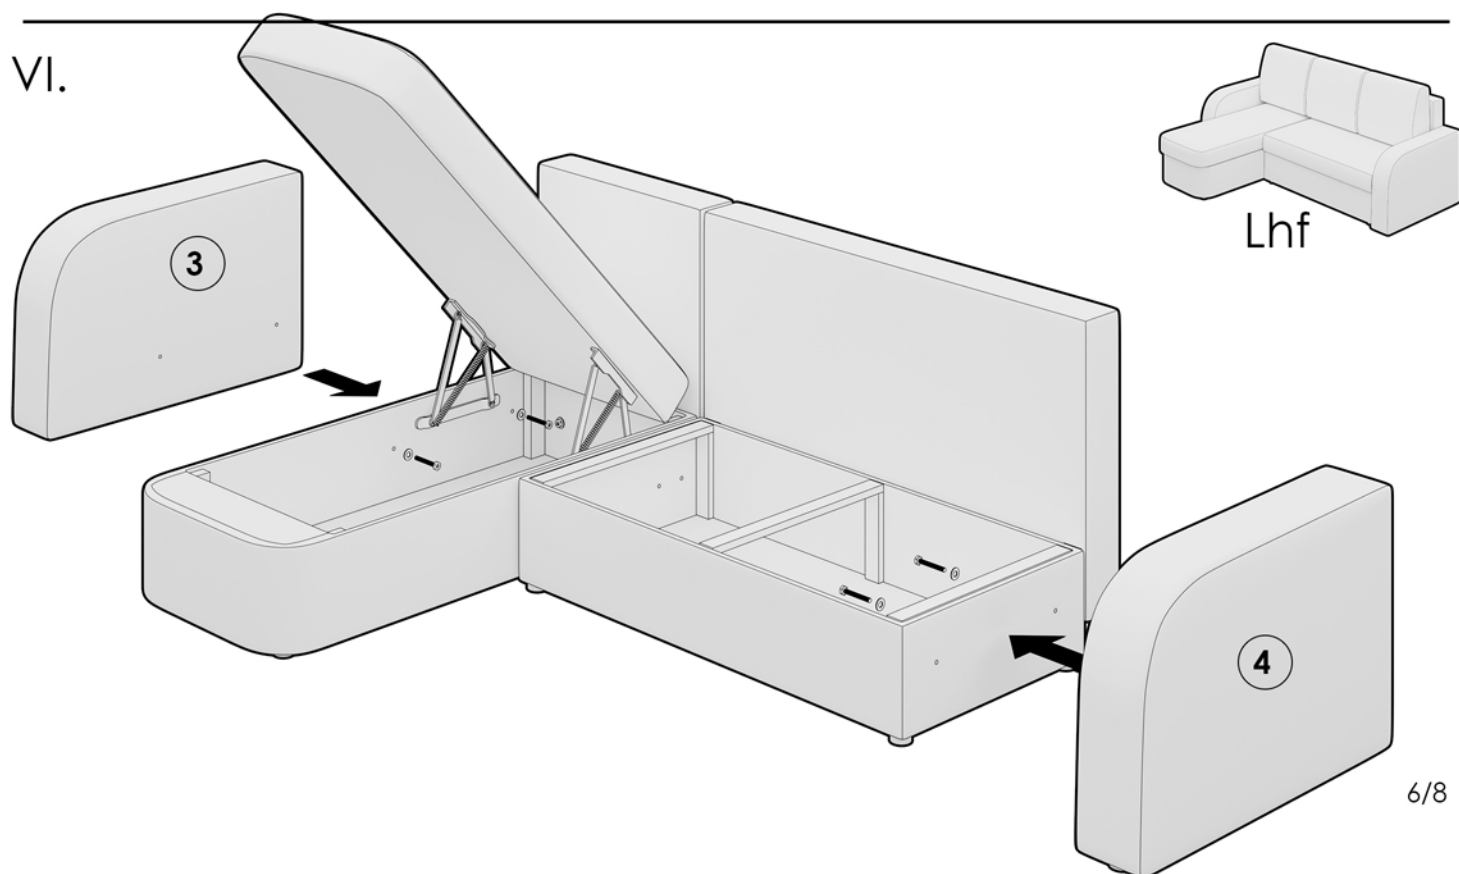



VII.

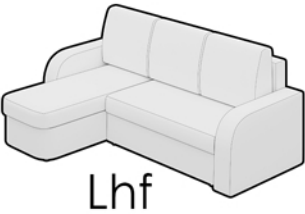


A		x4
B		x4

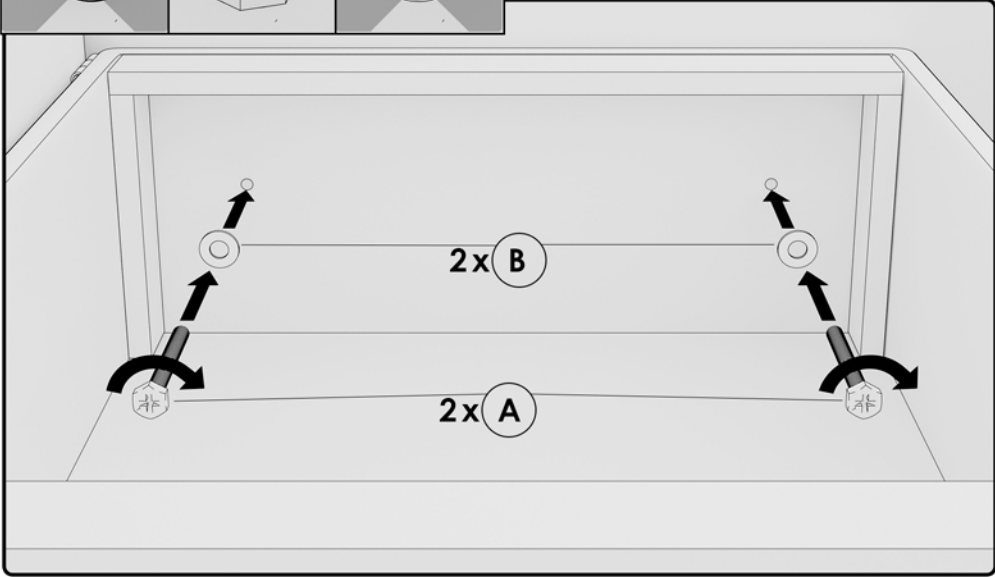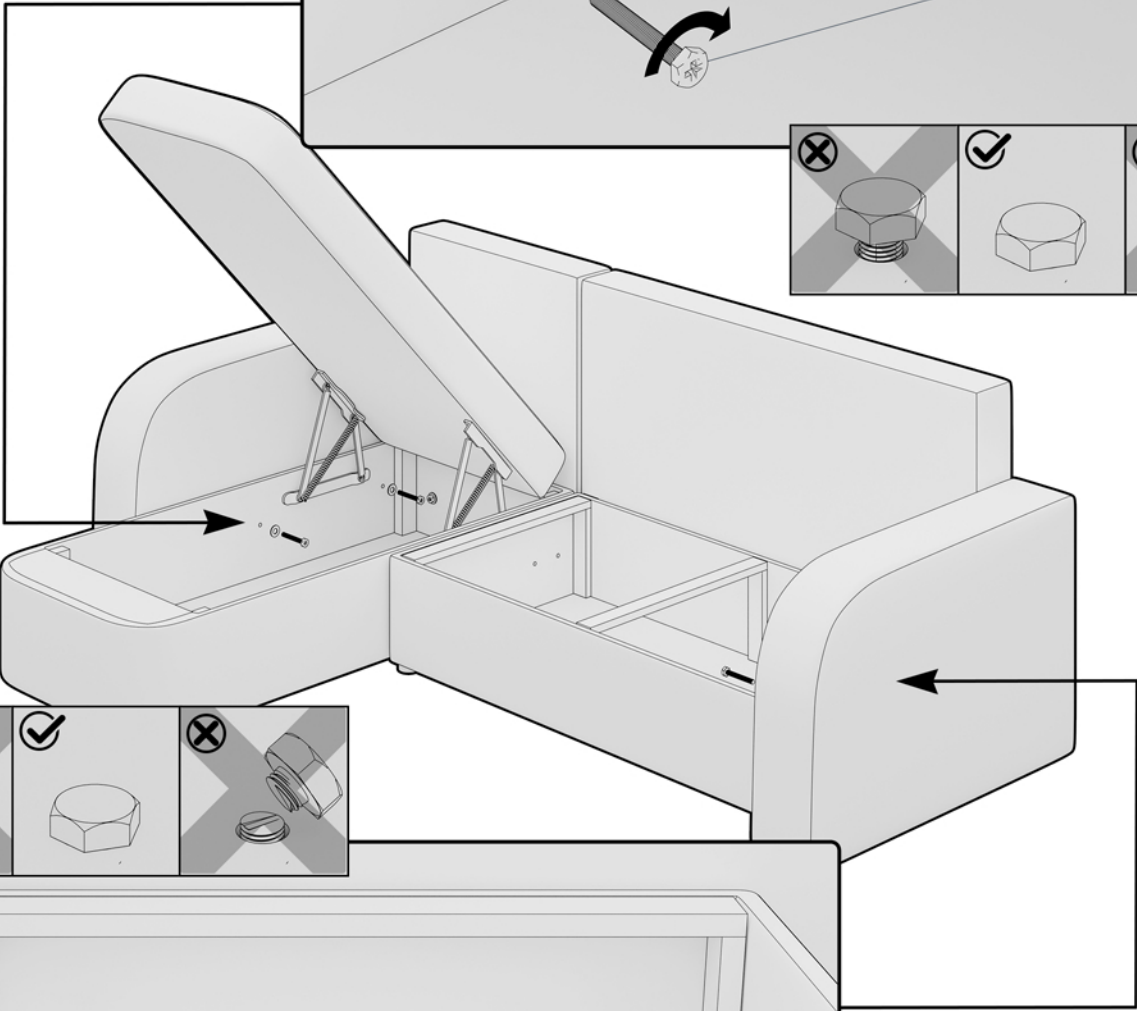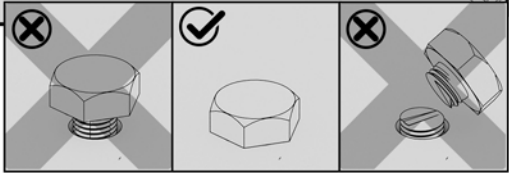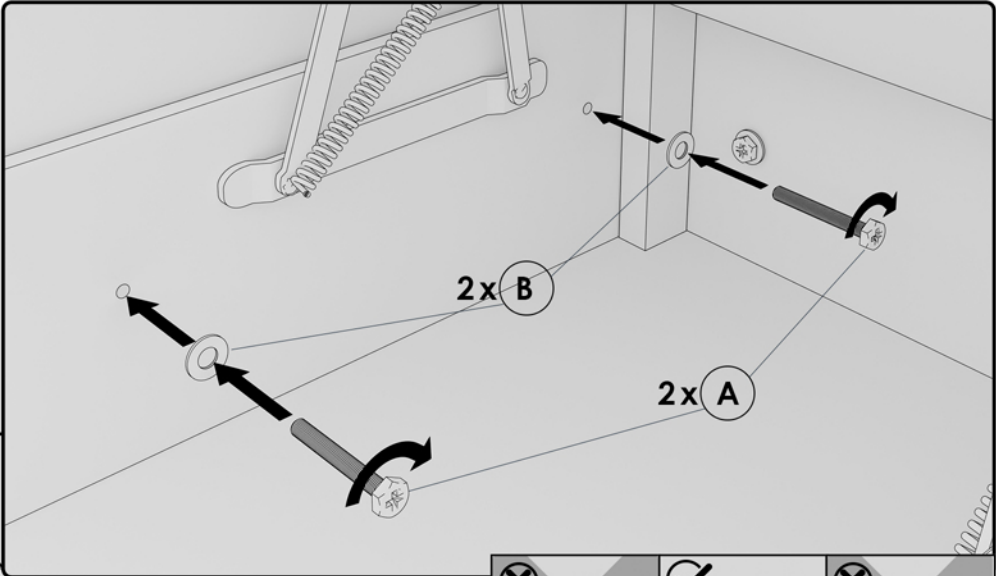

VIII.

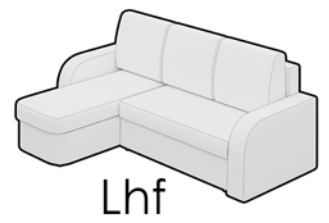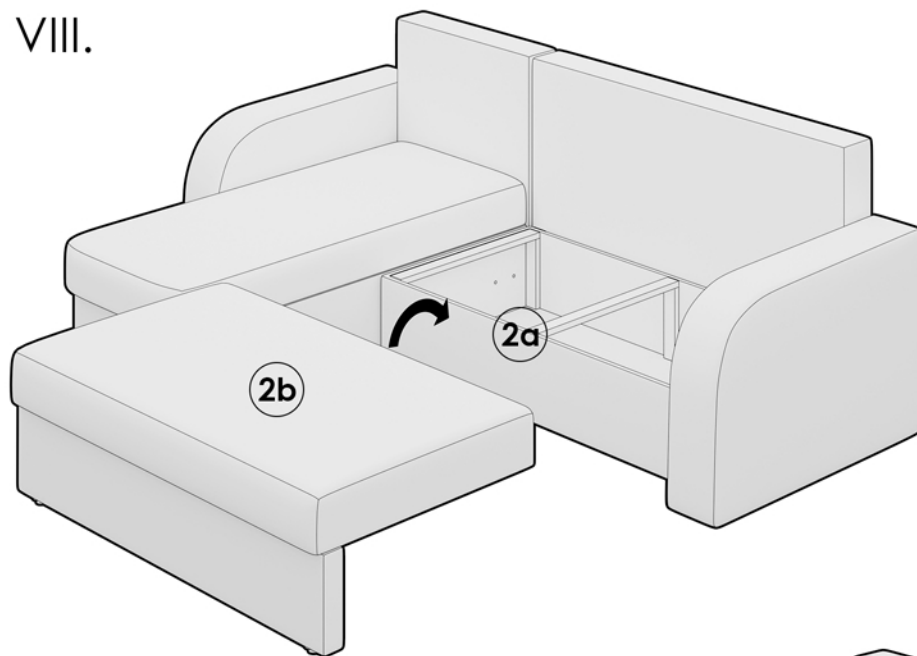

IXA.

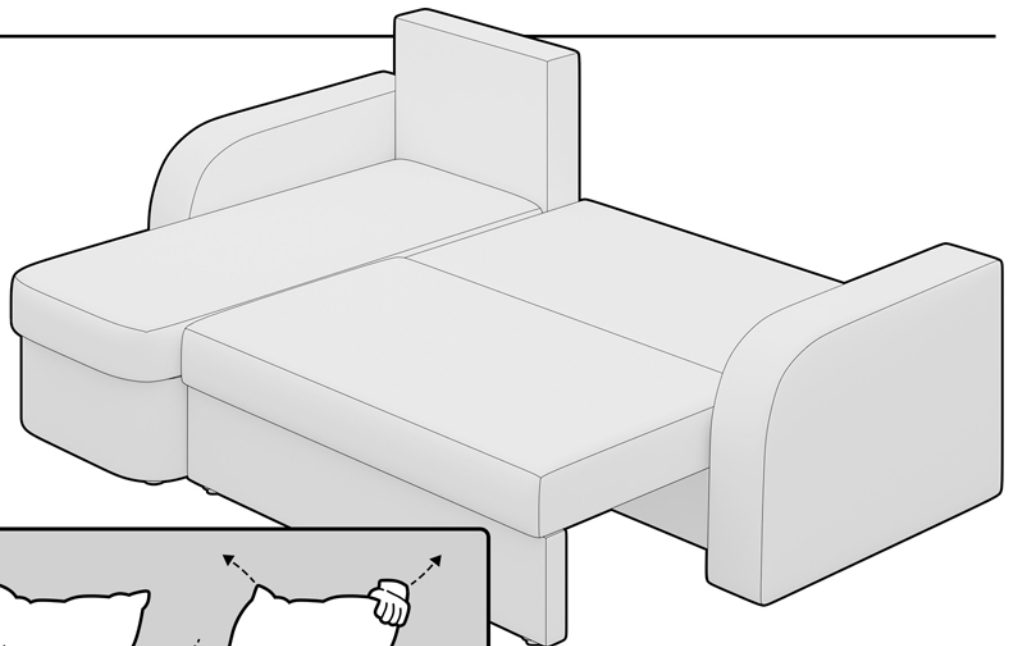

IXB.

