
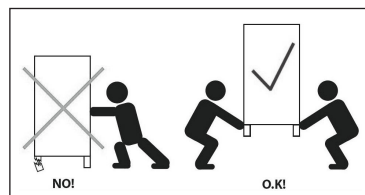




REST R06

Biurko

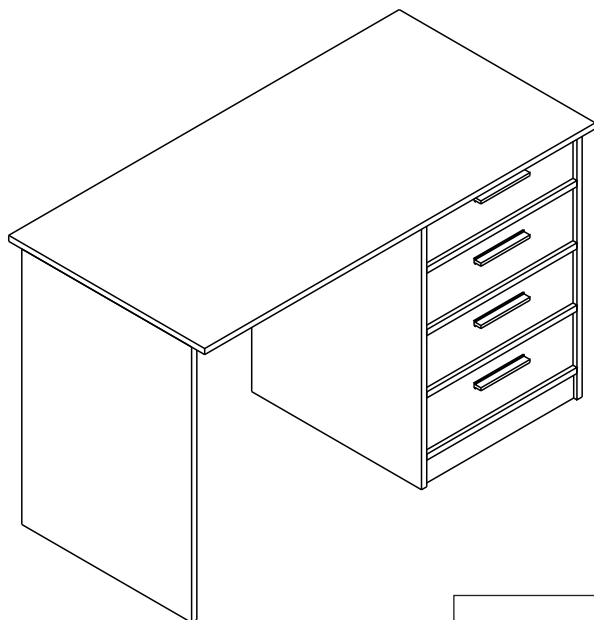


- (D)** Montageanleitung
(FR) Notice de montage
(NL) Handleiding voor de montage
(CZ) Montážní návod
(HU) Szerelési útmutató
(TR) Montaj talimatı

- (GB)** Assembly instructions
(IT) Istruzioni di montaggio
(PL) Instrukcja montażu
(SK) Návod na montáž
(RO) Instrucțiuni de montaj
(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

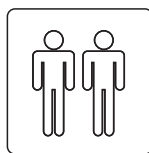



2 - 2,5





1















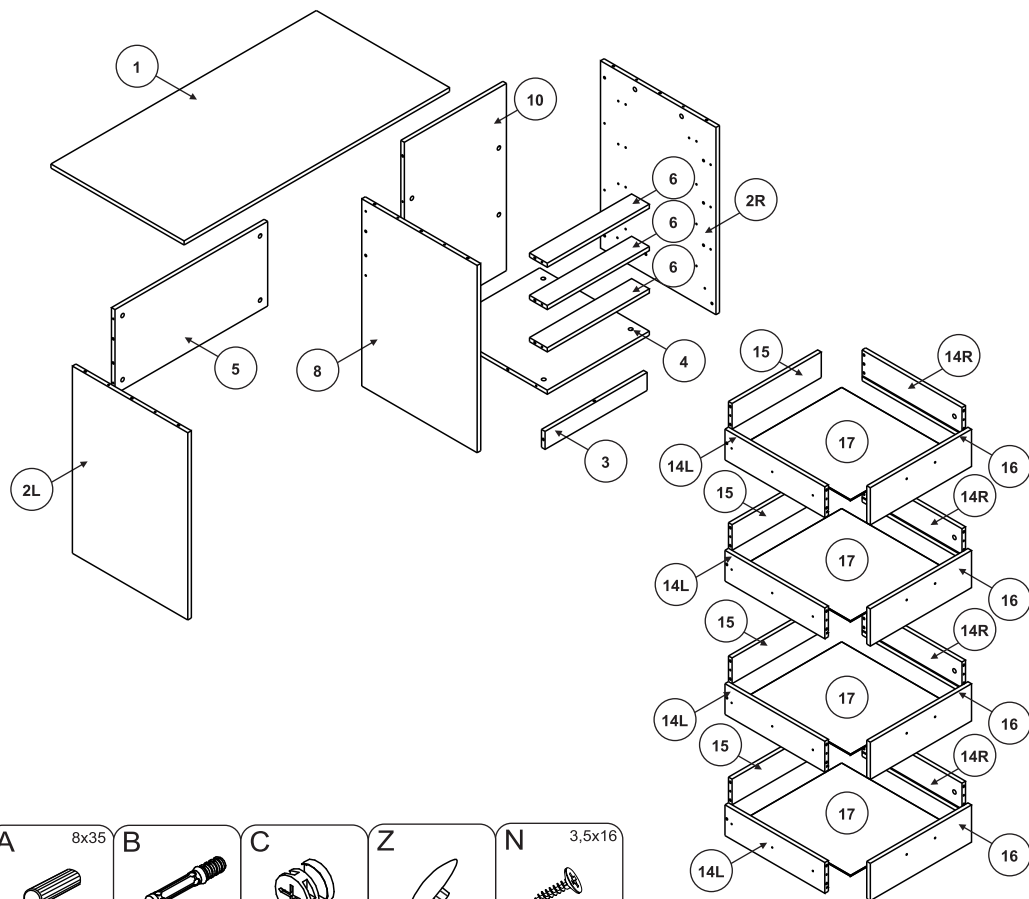



A 8x35  x62	B  x32	C  x32	Z  x32	N 3,5x16  x56	 14L
OA L=150  x4	Y 7x50  x8	X  x28	F L=450  x8	SB  x1	

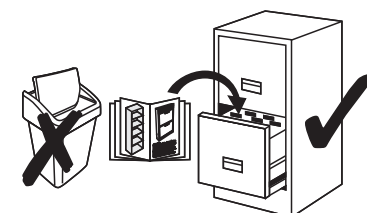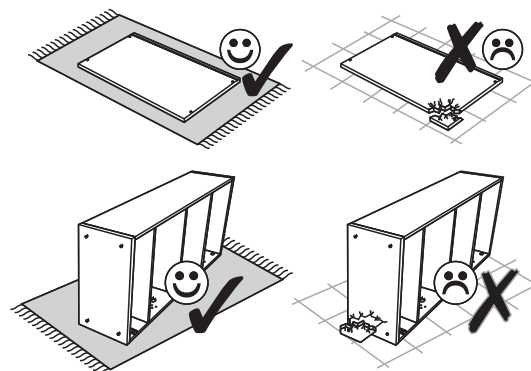




2

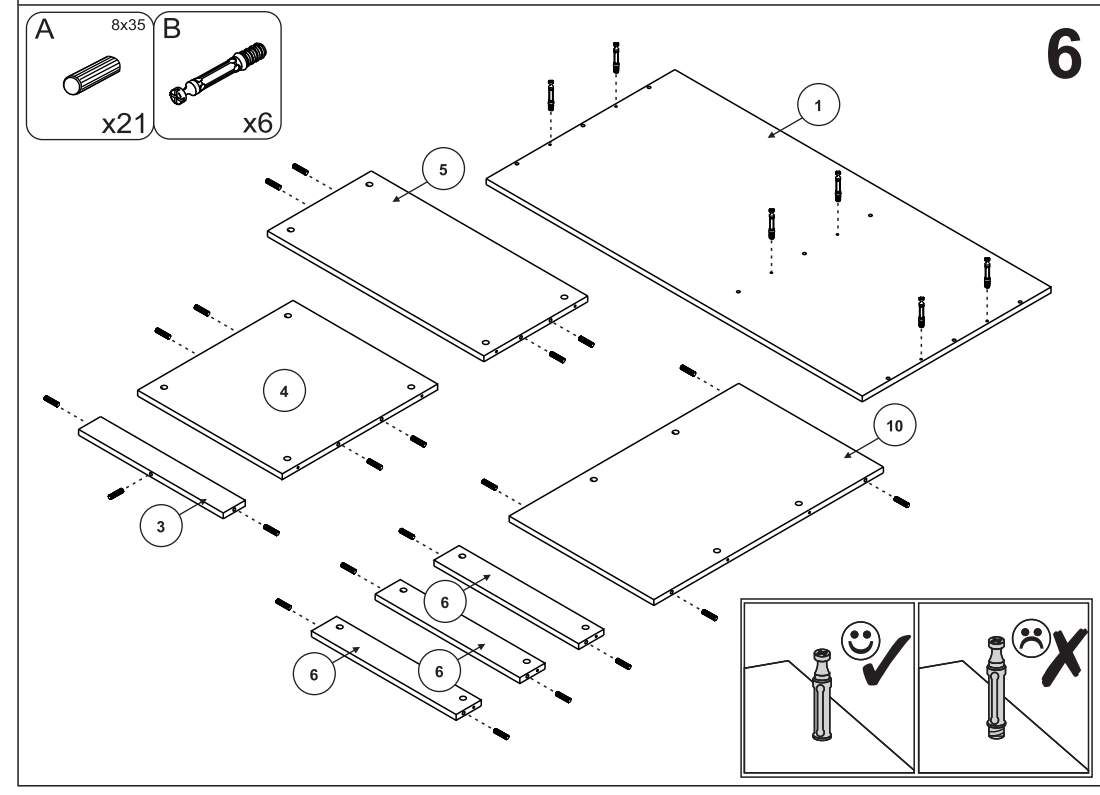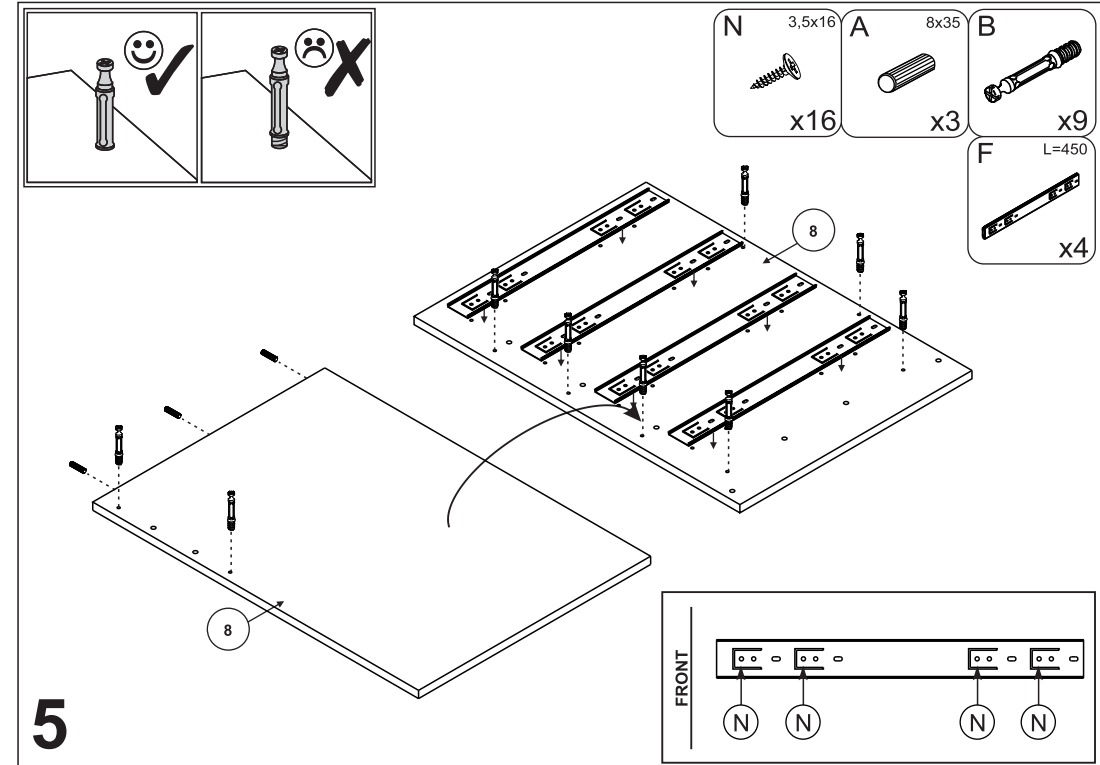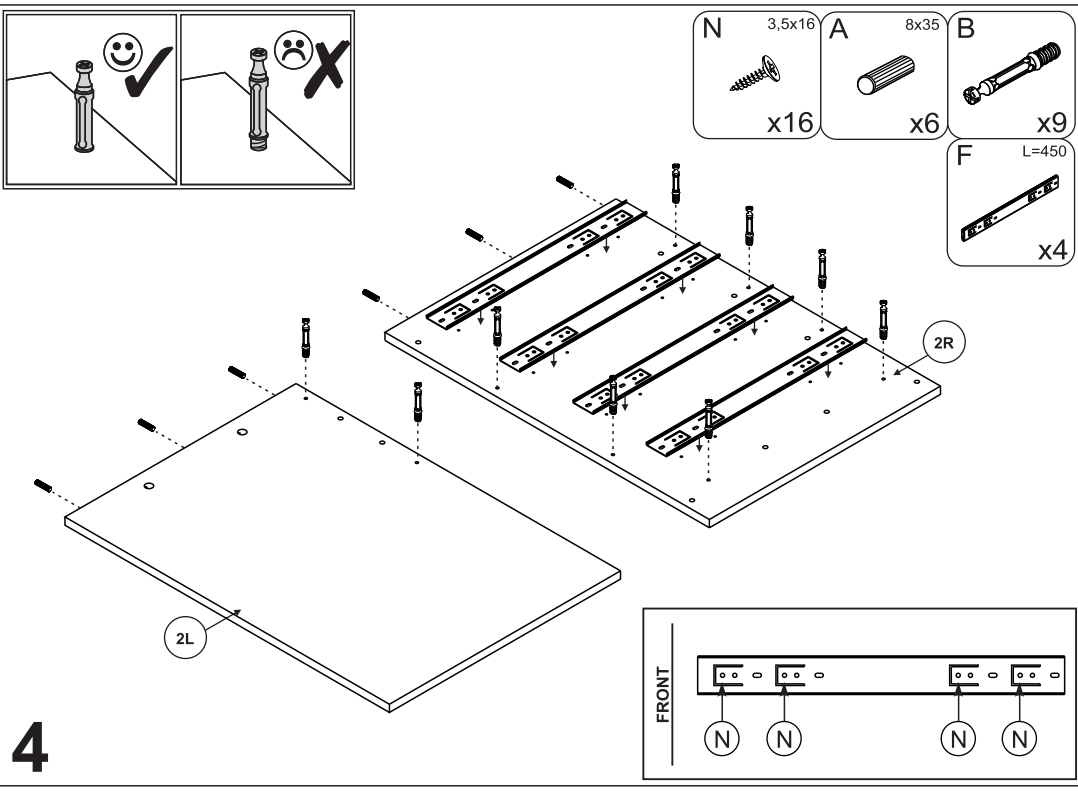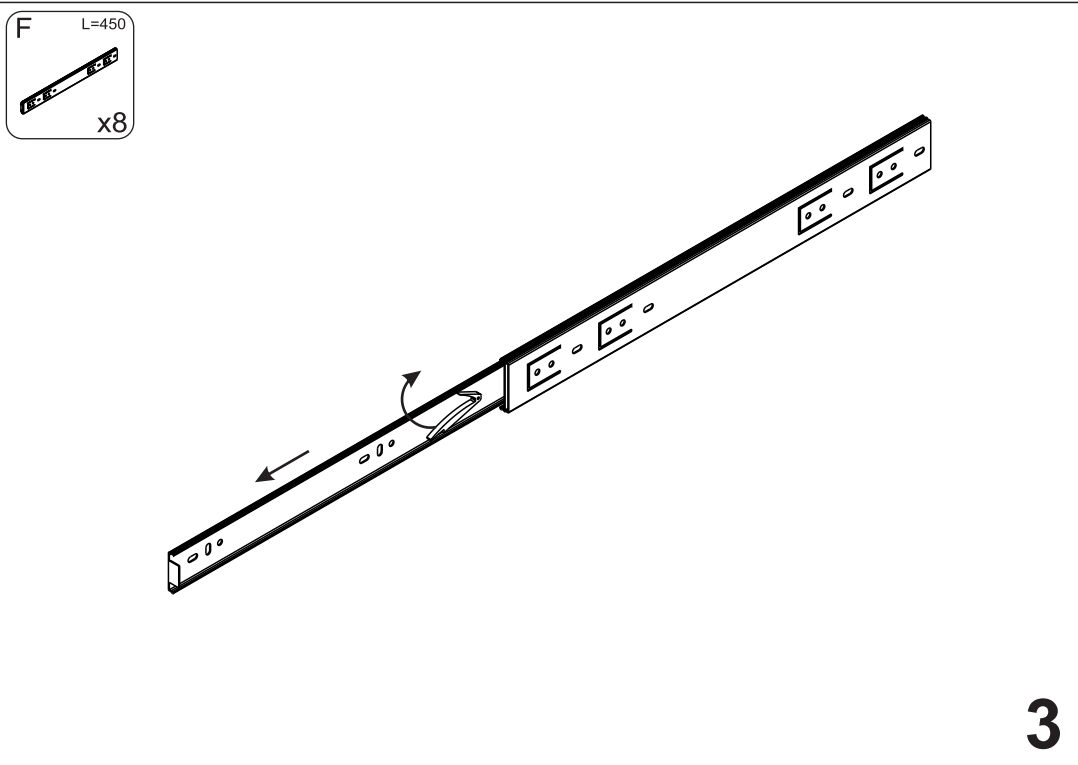

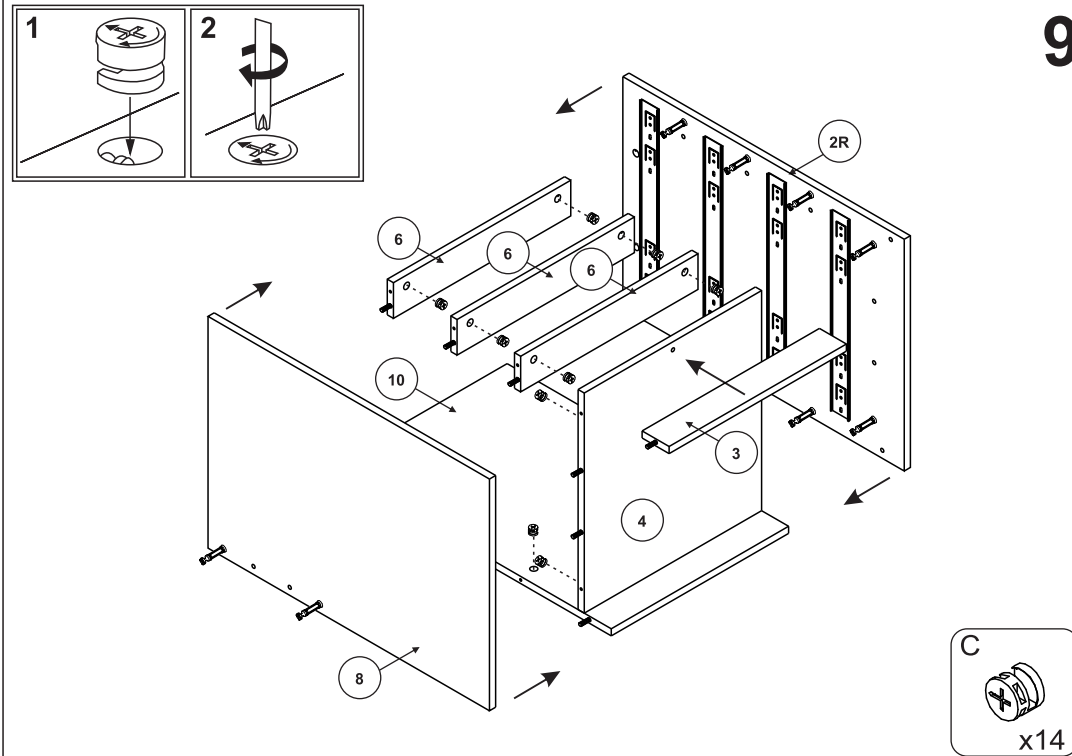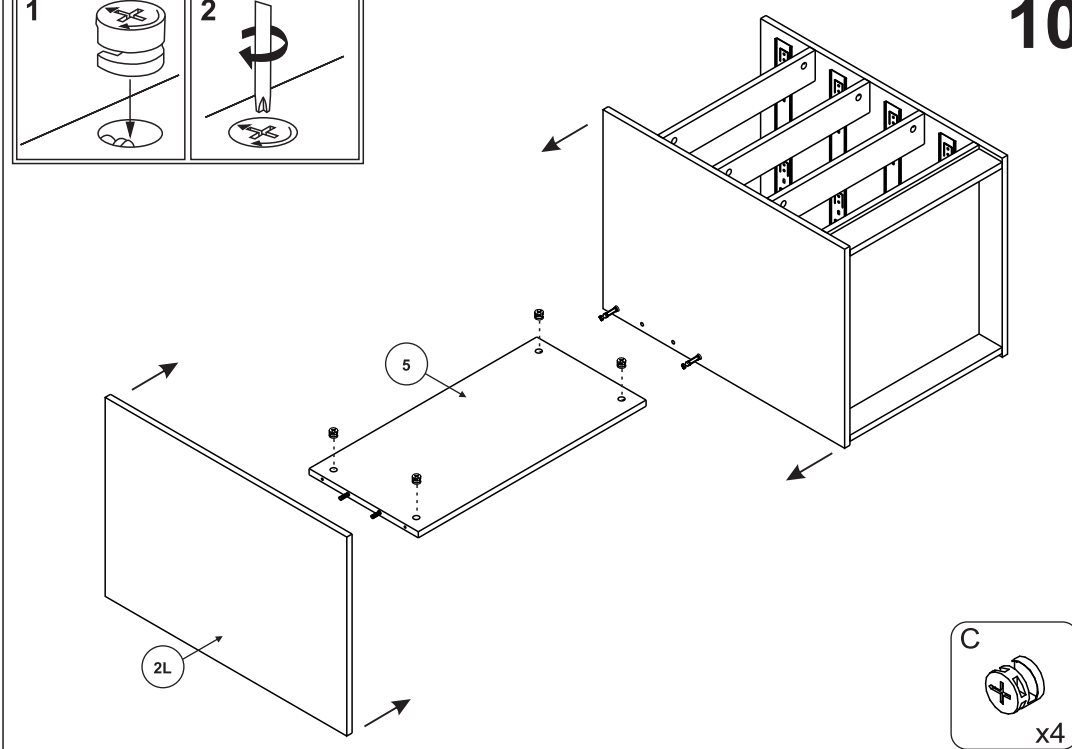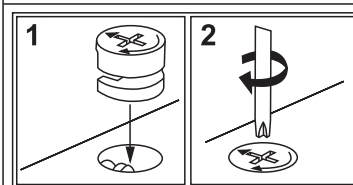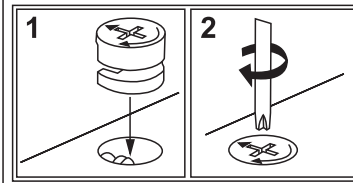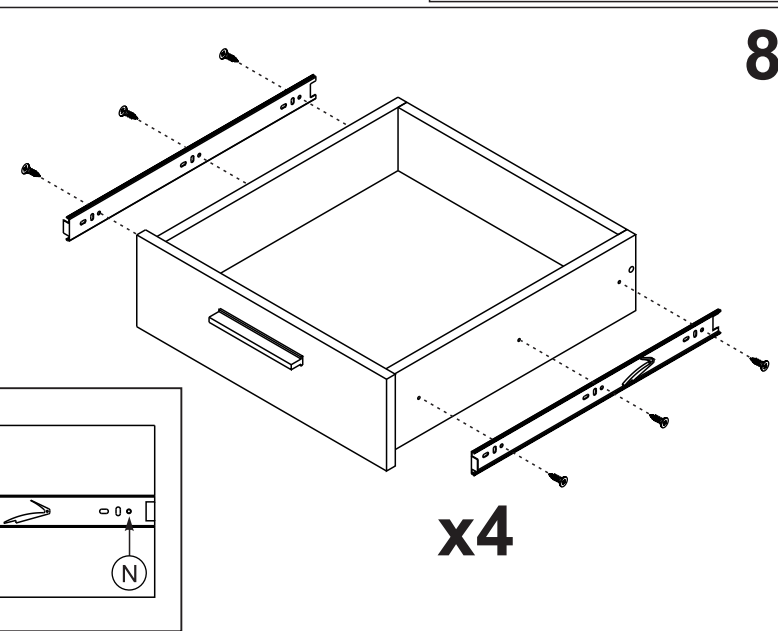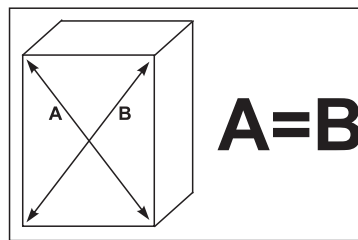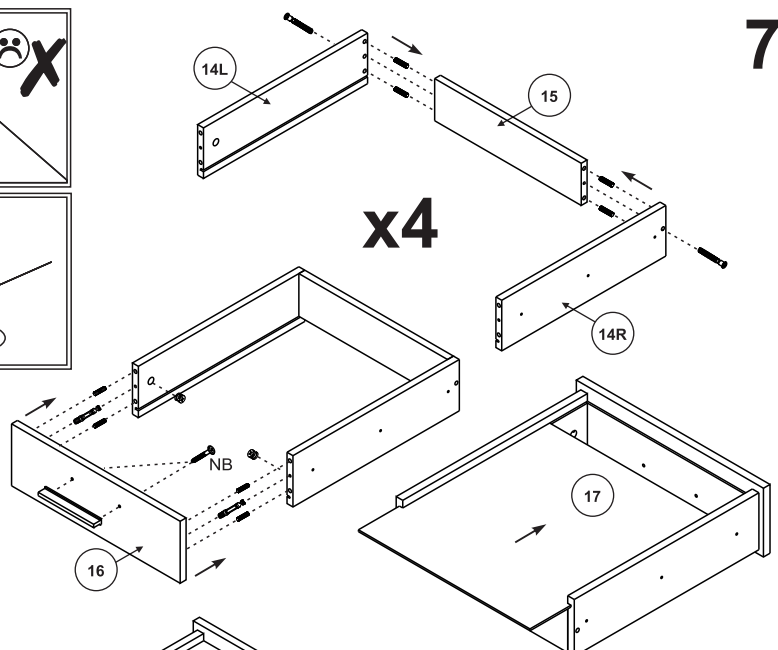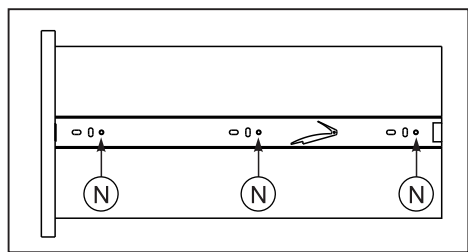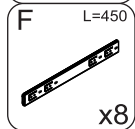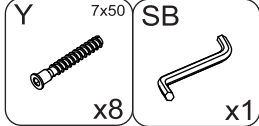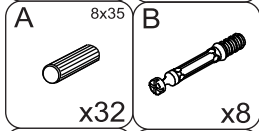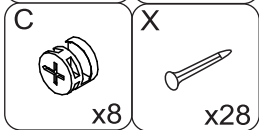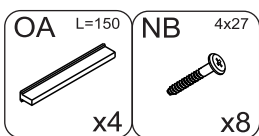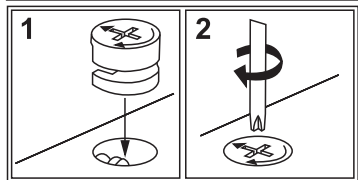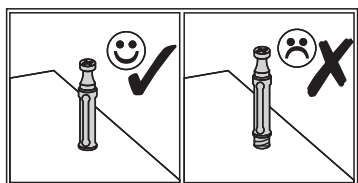

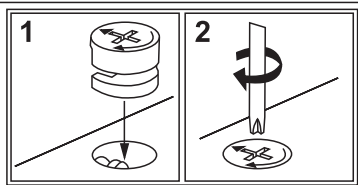

11

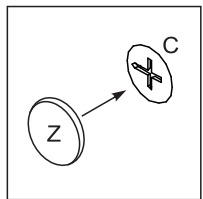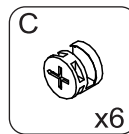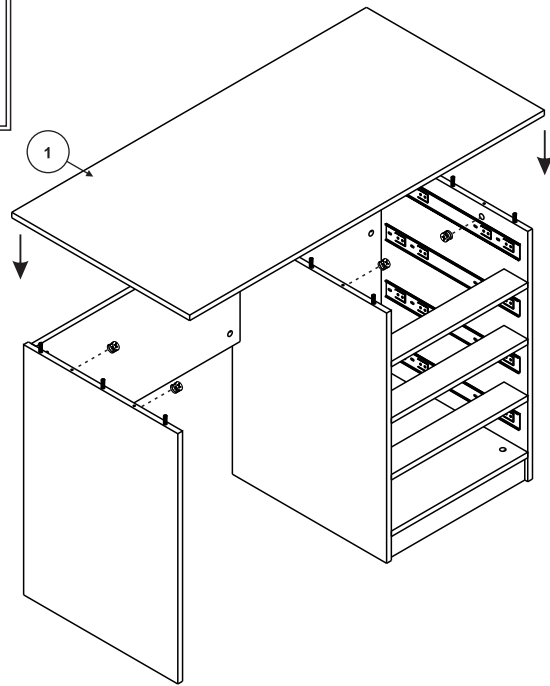

12

