

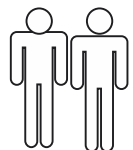
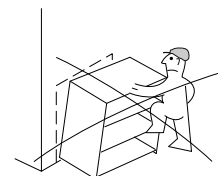
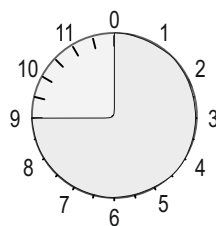
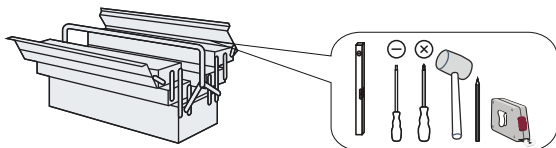
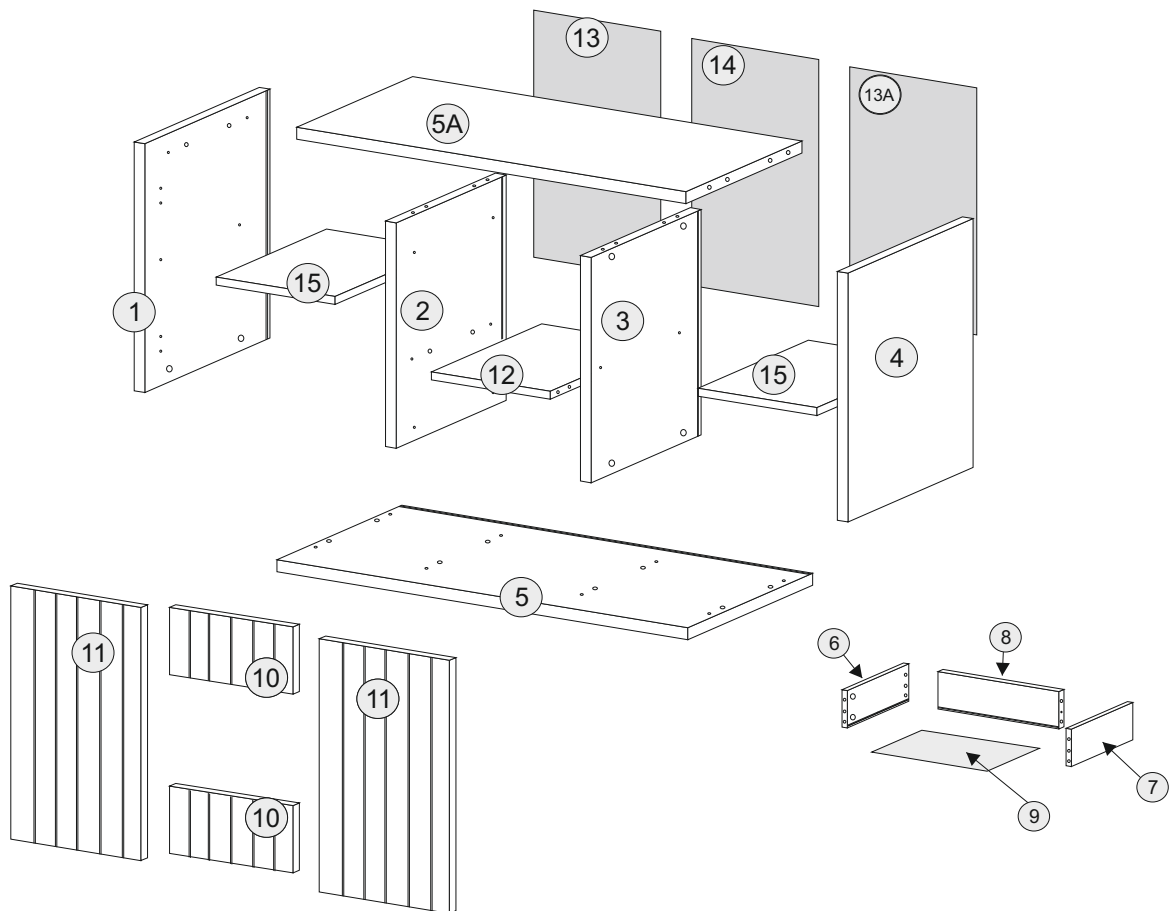
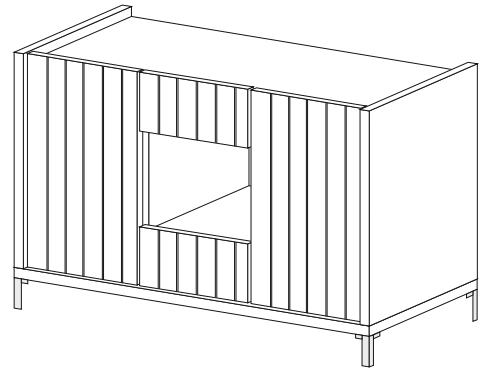
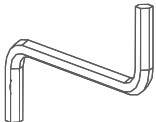









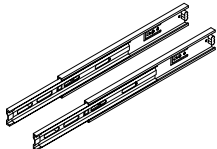

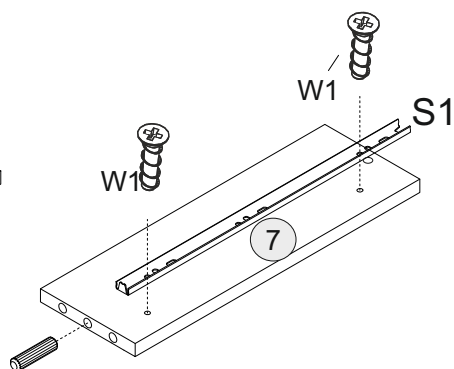
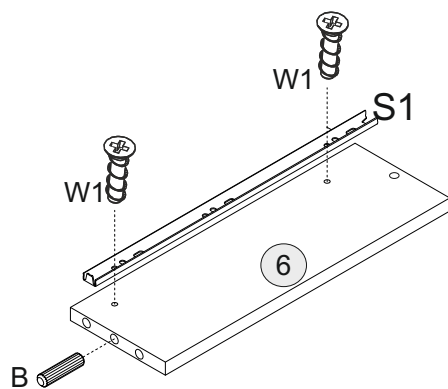
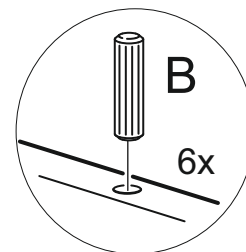








LANDO 3















Instrukcja montażu


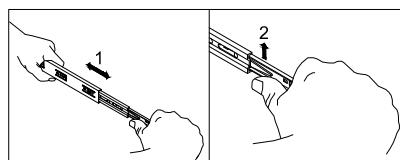


A  x1	B  x32	C  x28	D  x28
D1  x28	W4 4x16  x28	S  x12	J  x8
E1  x4	E2  x4	W1 5,3x13  x16	T  x4
T1  x1	S  x2	L  x4	

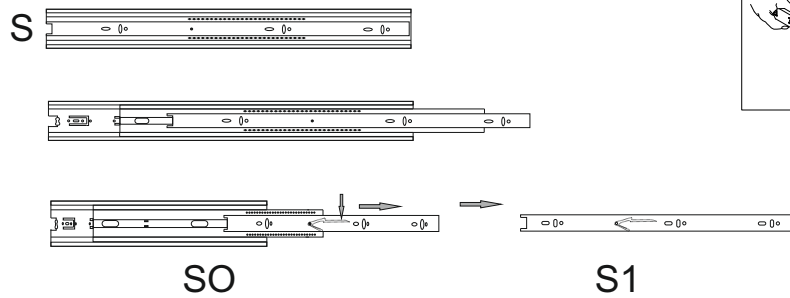

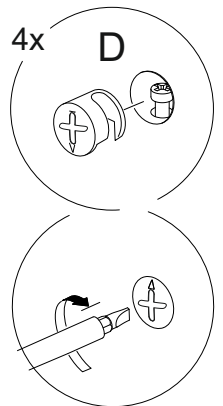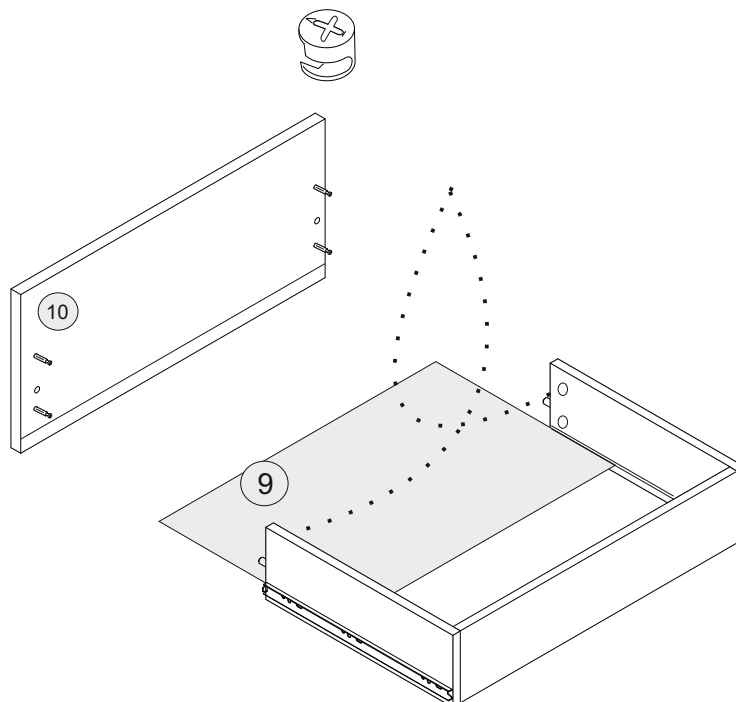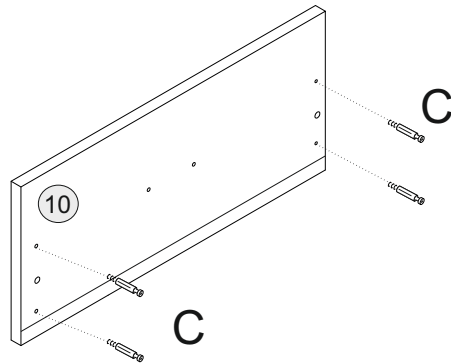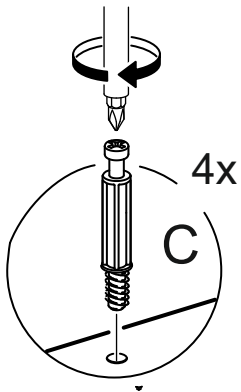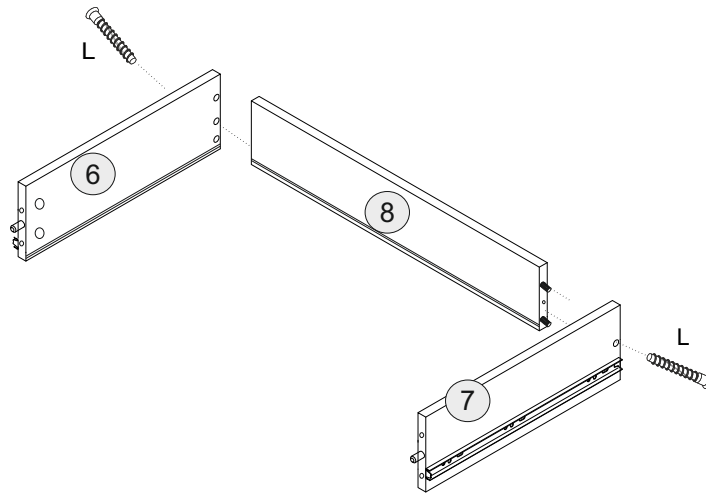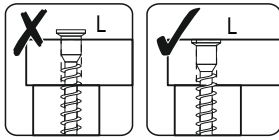

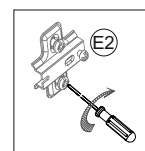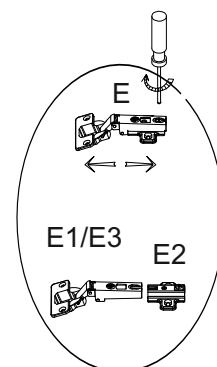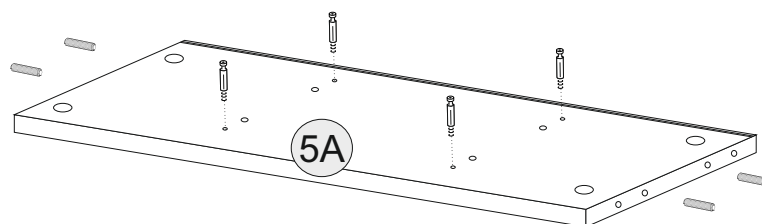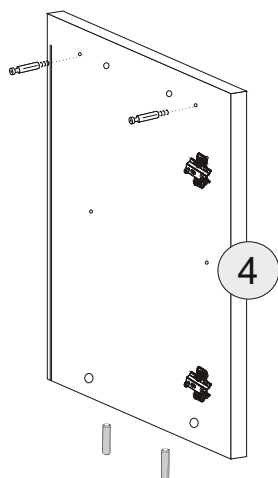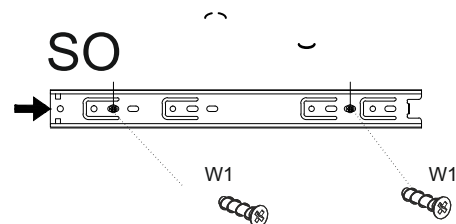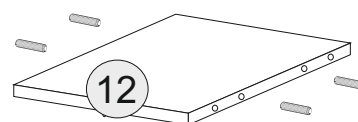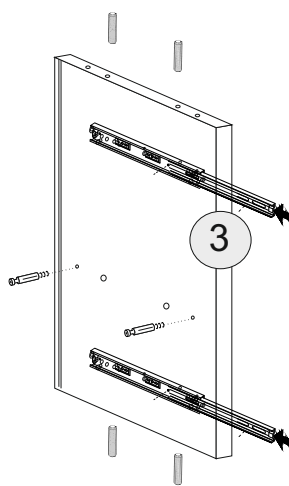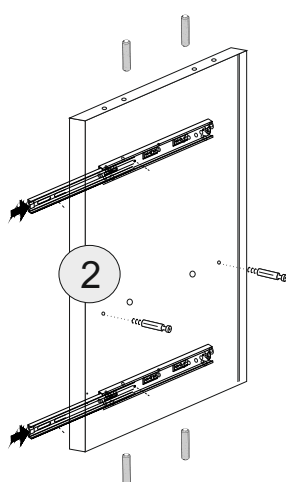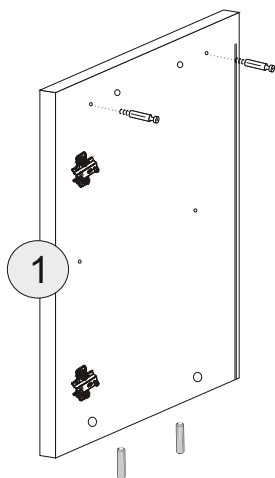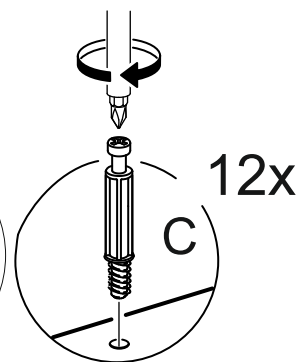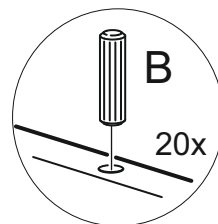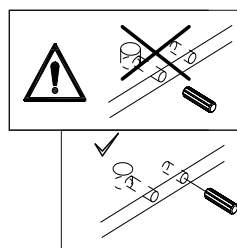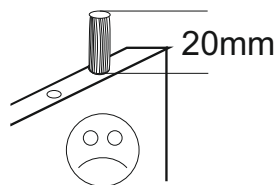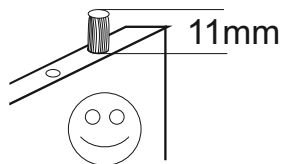

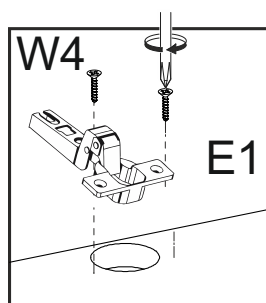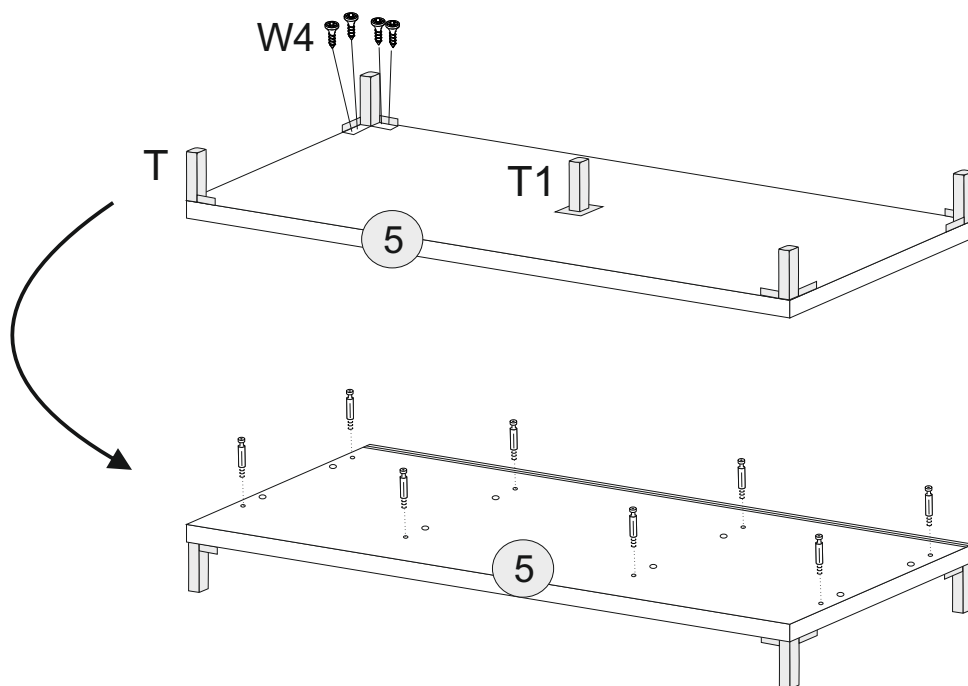

x2

