

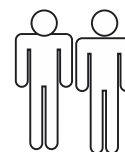
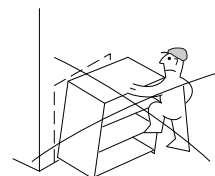
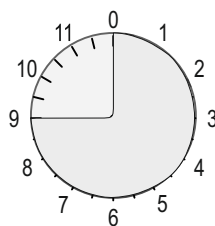
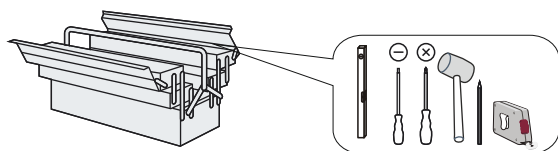
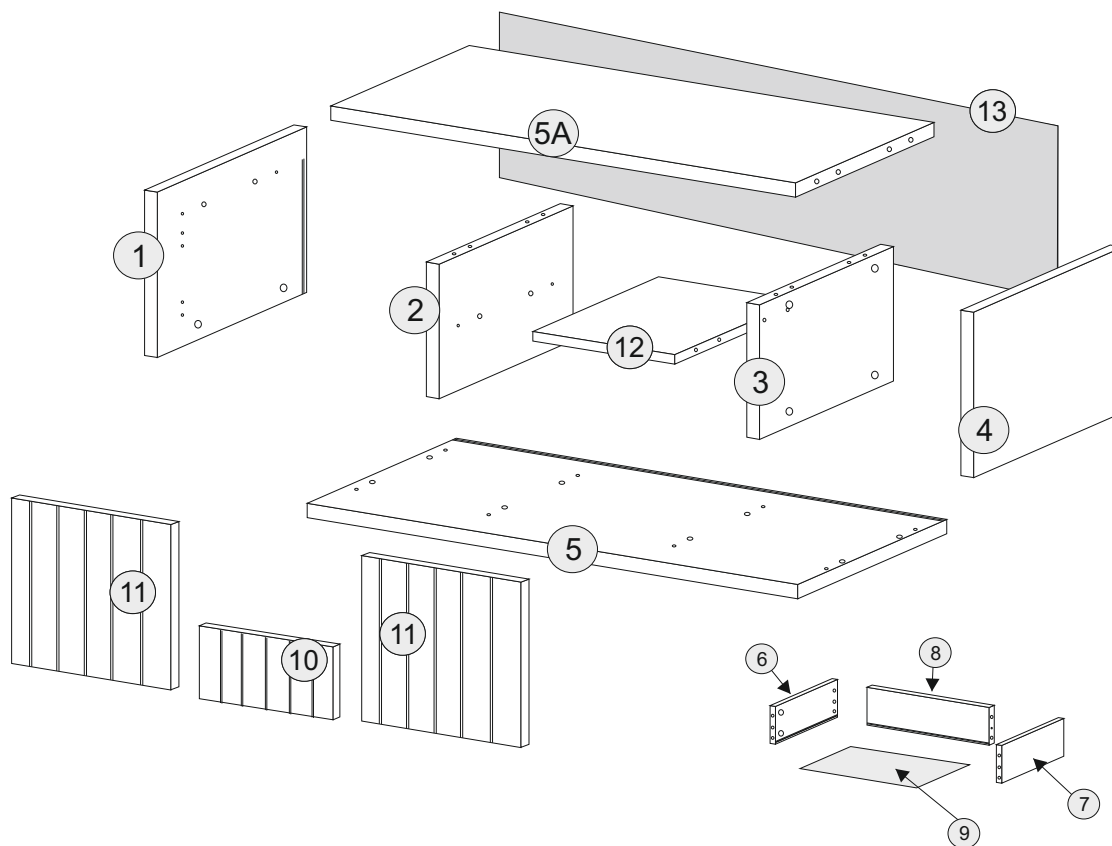
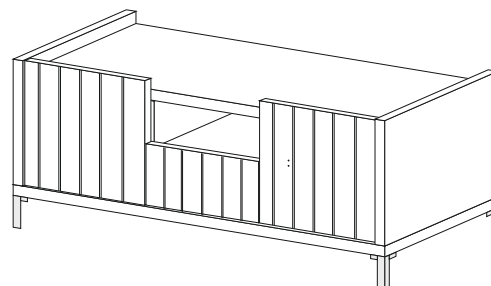
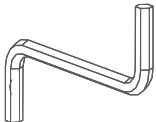








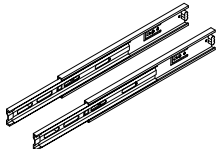
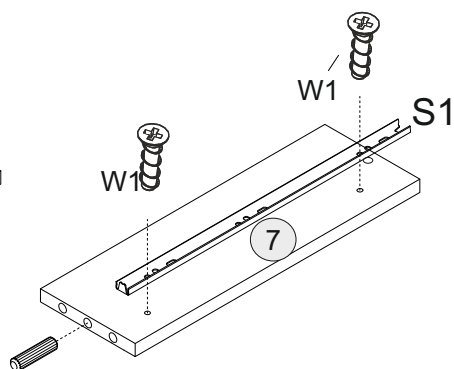
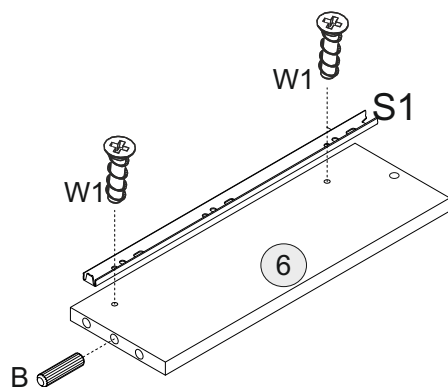
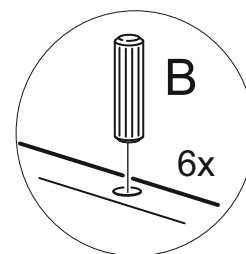








LANDO 4












Instrukcja montażu

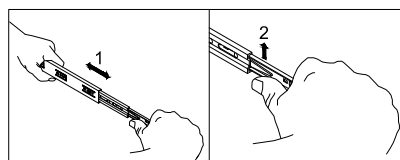

A  x1	B  x26	C  x24	D  x24
D1  x24	W4 4x16  x28	S  x8	L  x2
E1  x4	E2  x4	W1 5,3x13  x8	T  x4
T1  x1	S  x2		

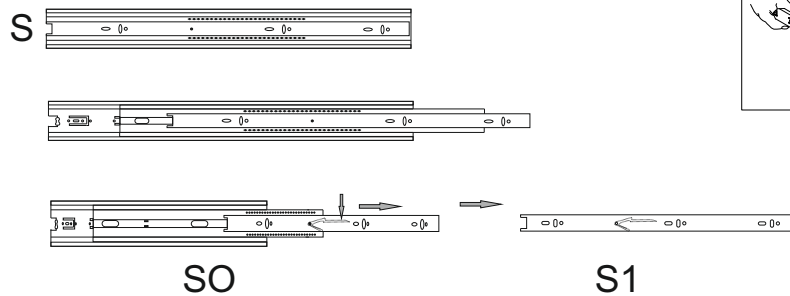

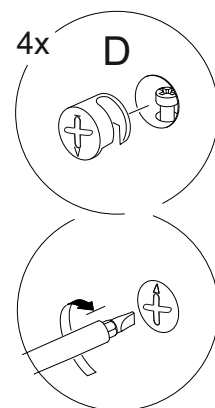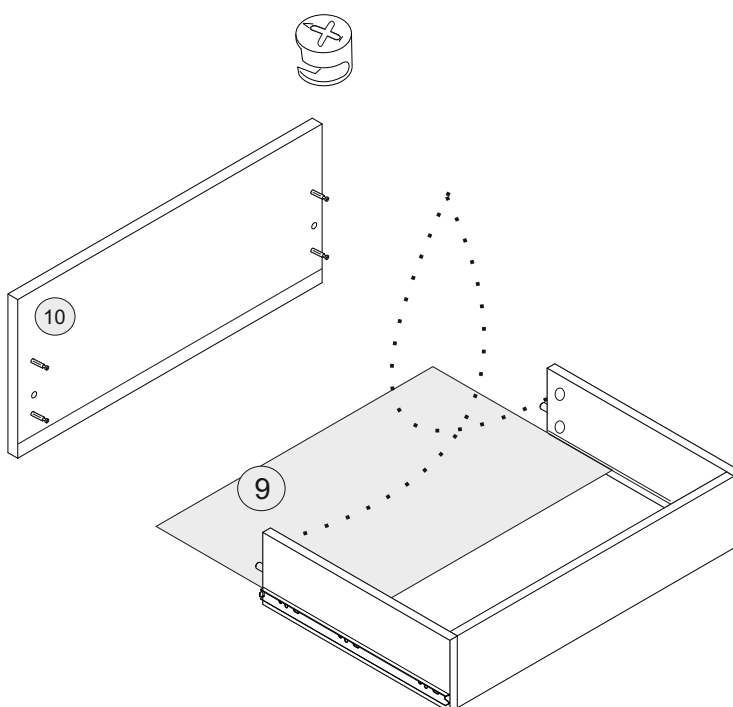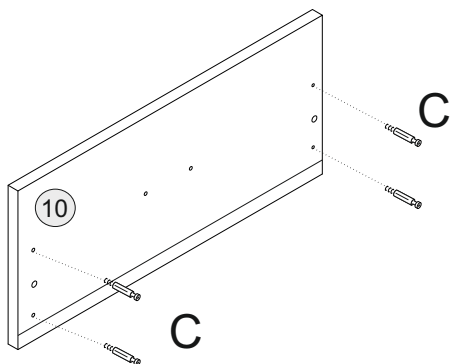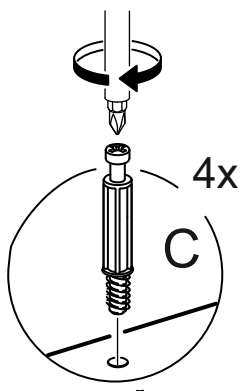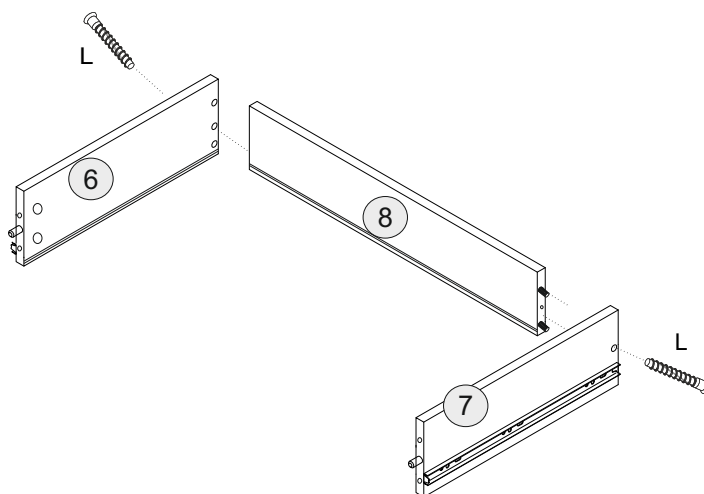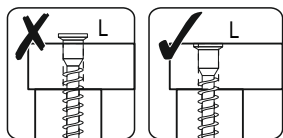

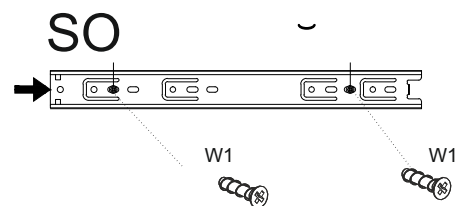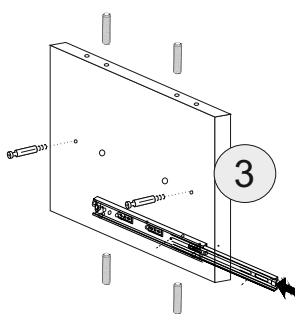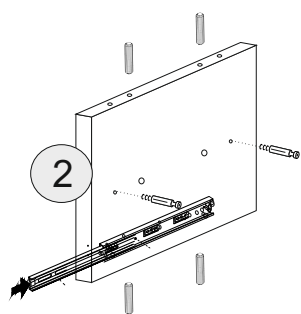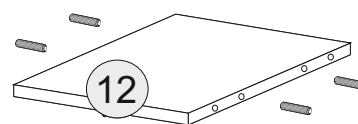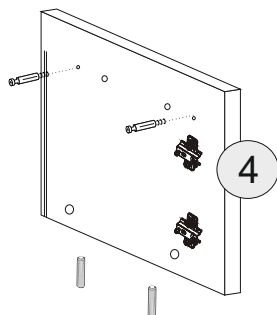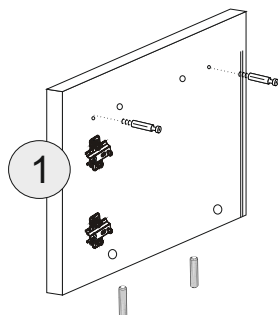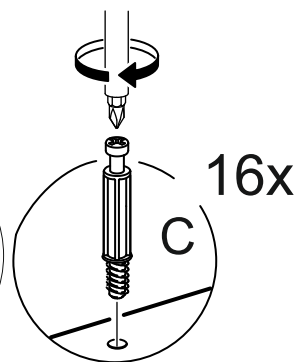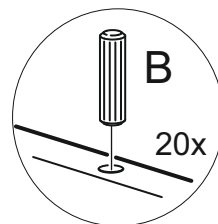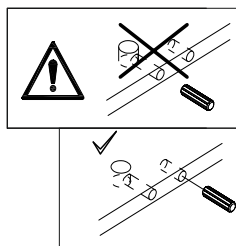
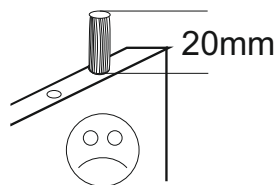
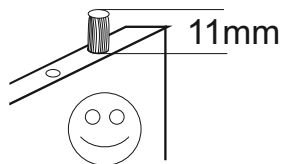




W4

T

T1

5

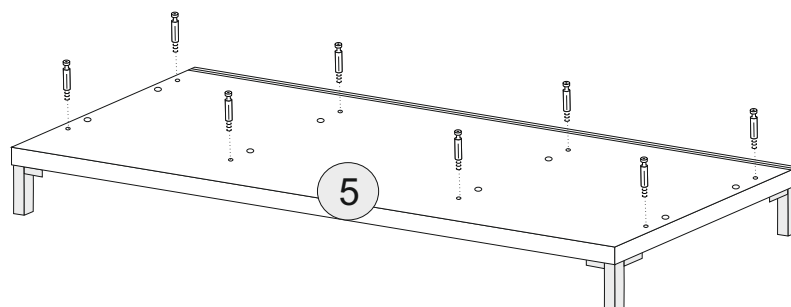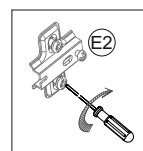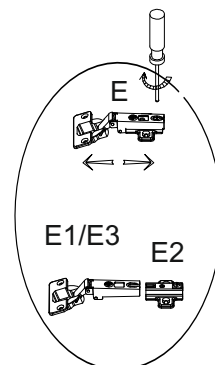

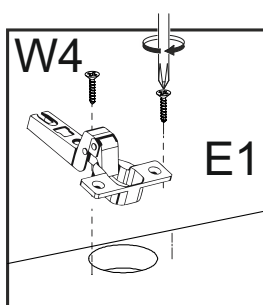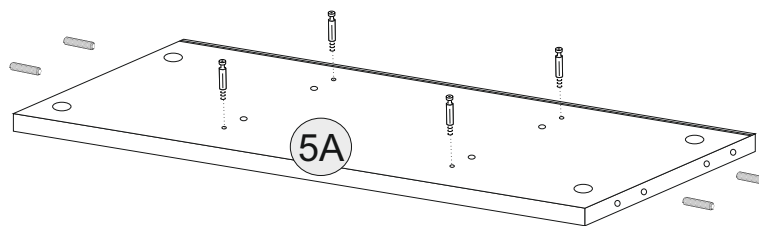

x2

