


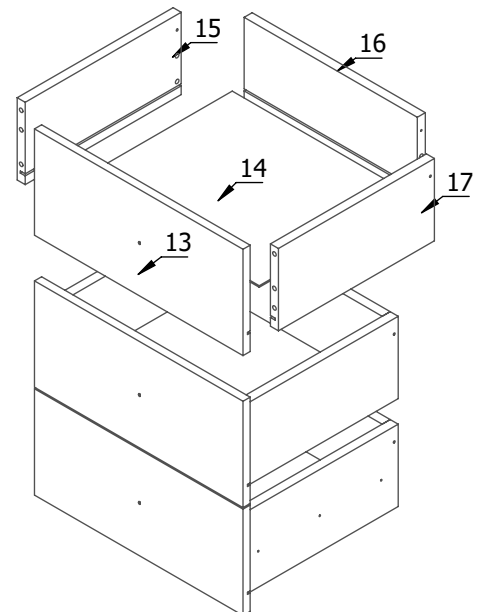
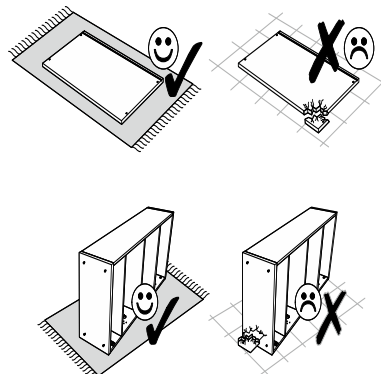
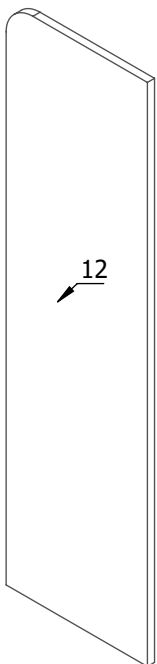
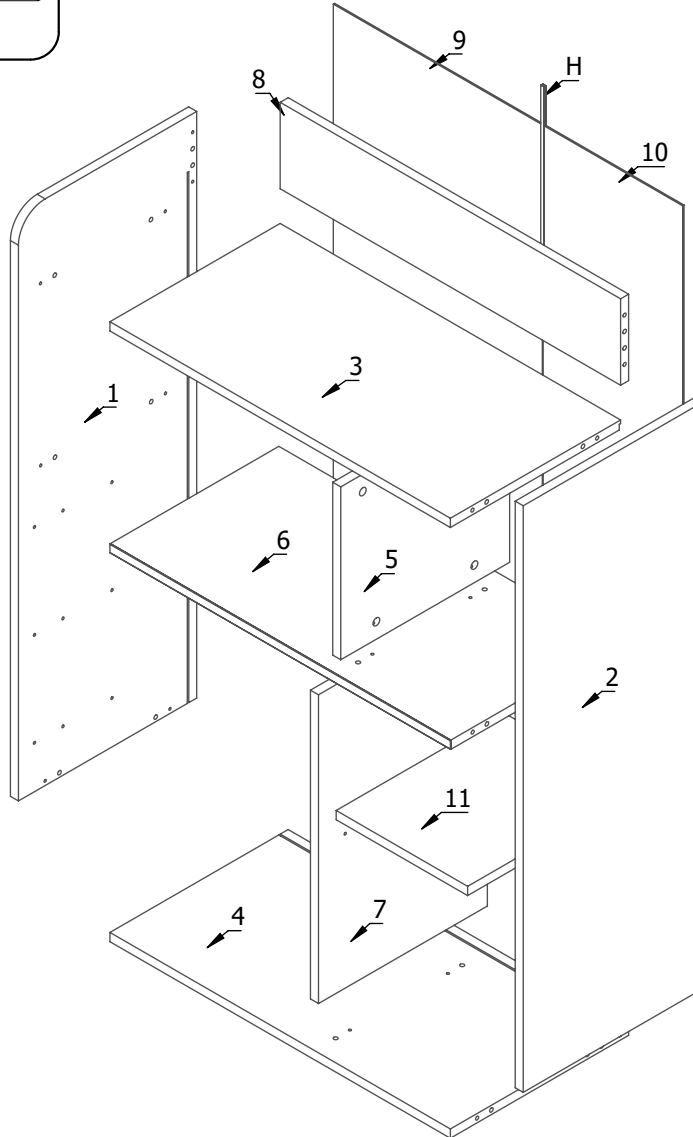
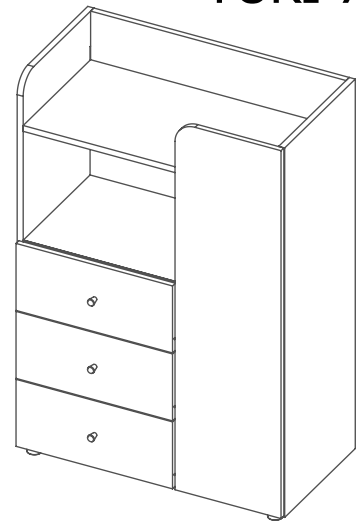
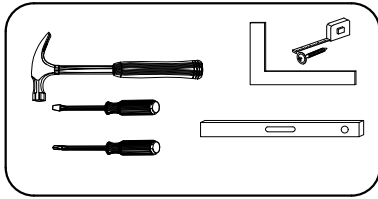
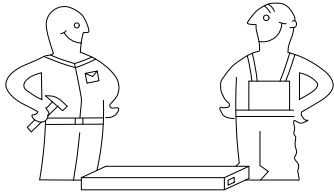
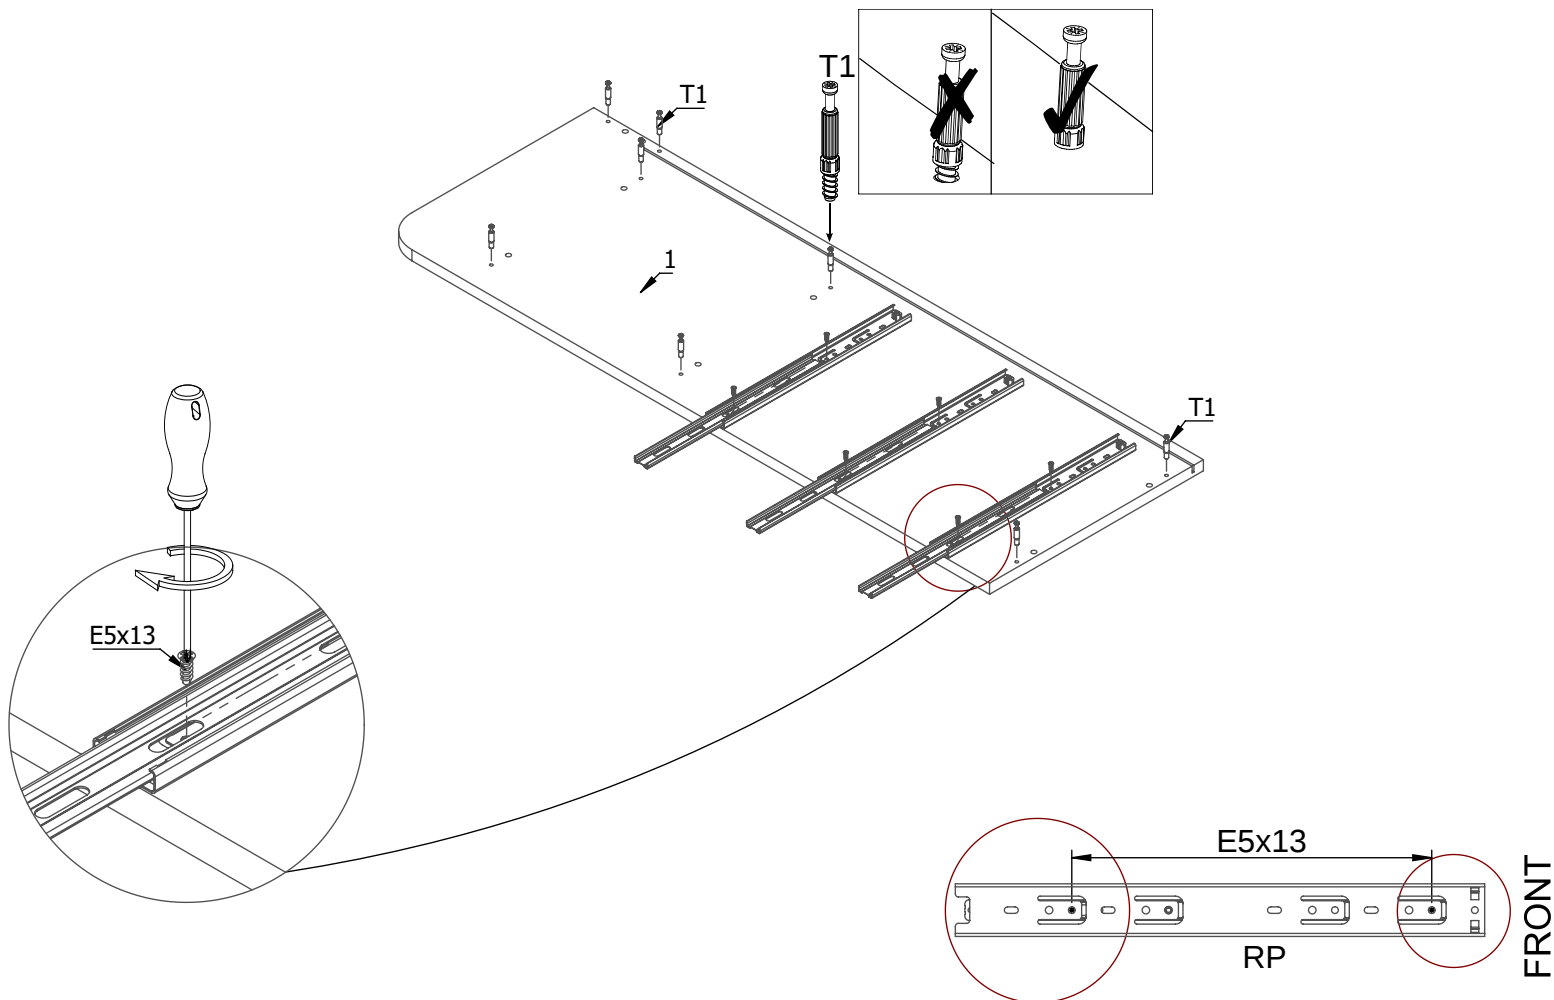
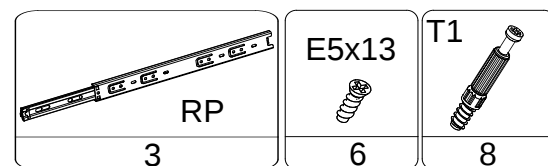
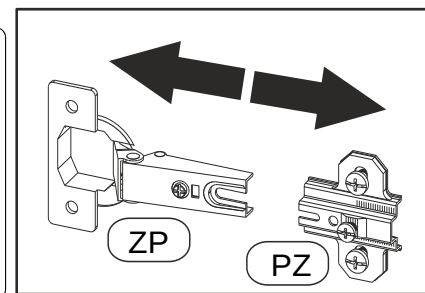
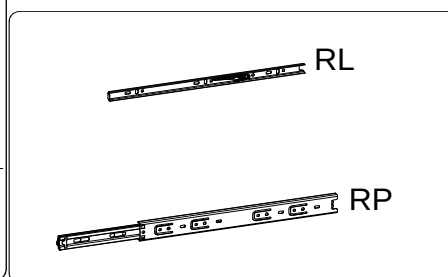


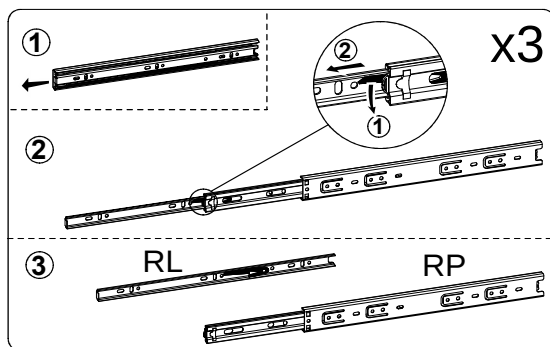




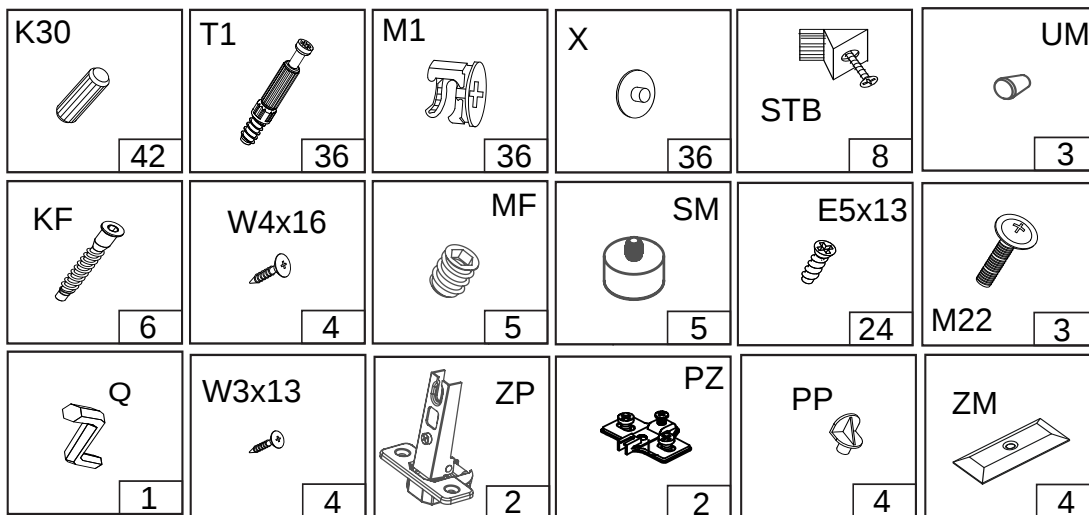


FRONT









T1	PZ
	
8	2

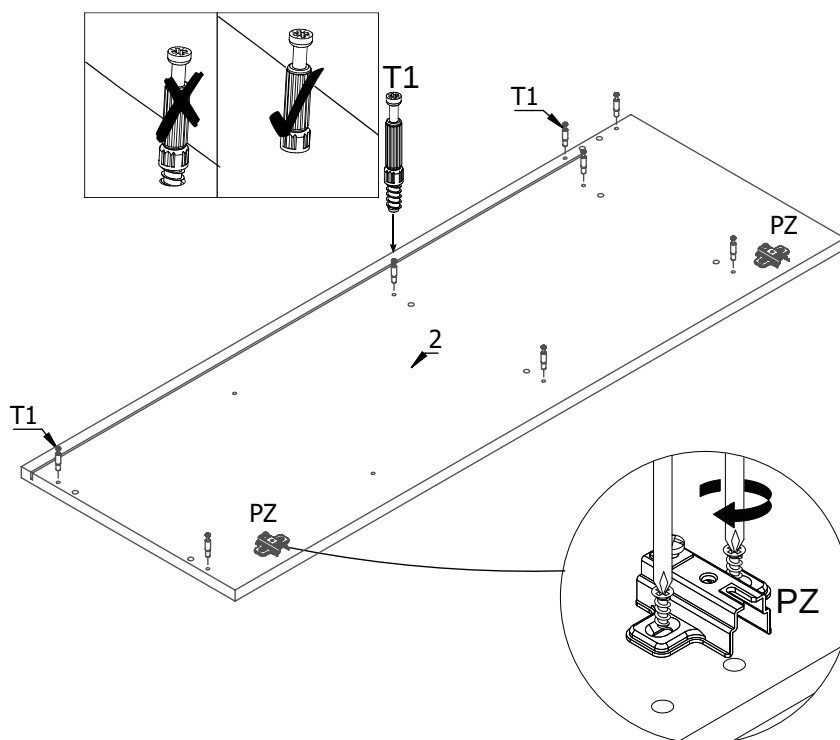


	E5x13	M1	K30
RP			
3	6	8	8

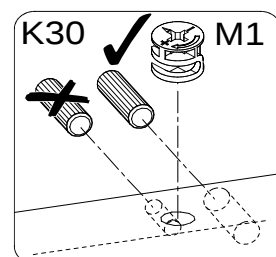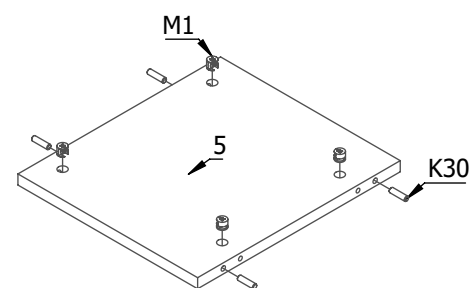
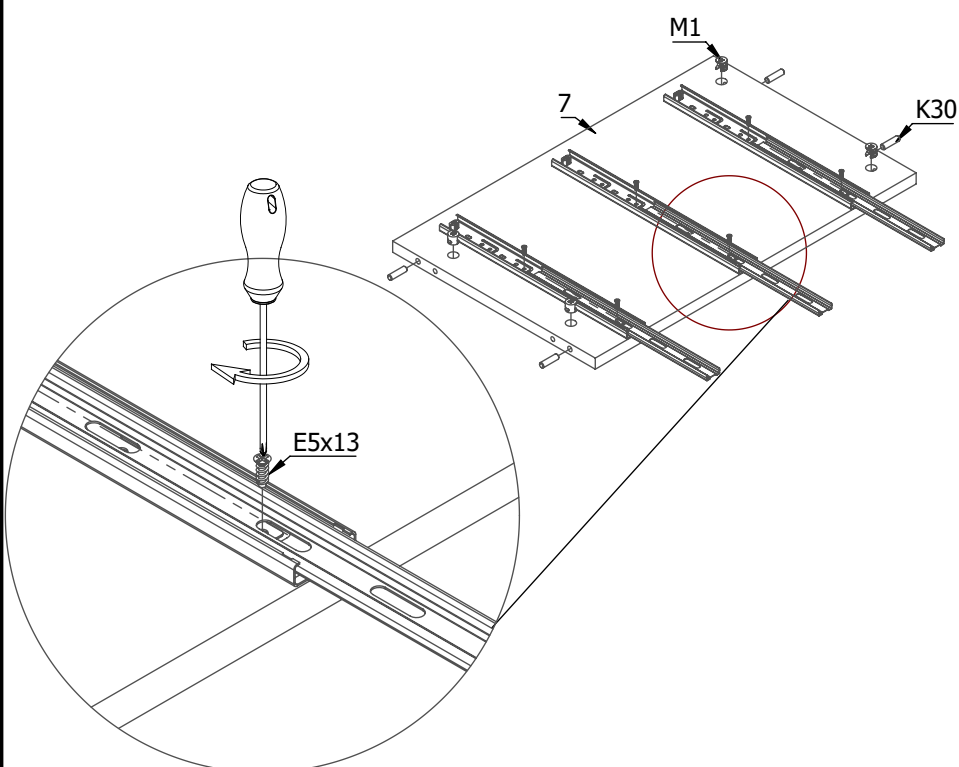


T1	M1	K30	MF
			
4	12	12	4

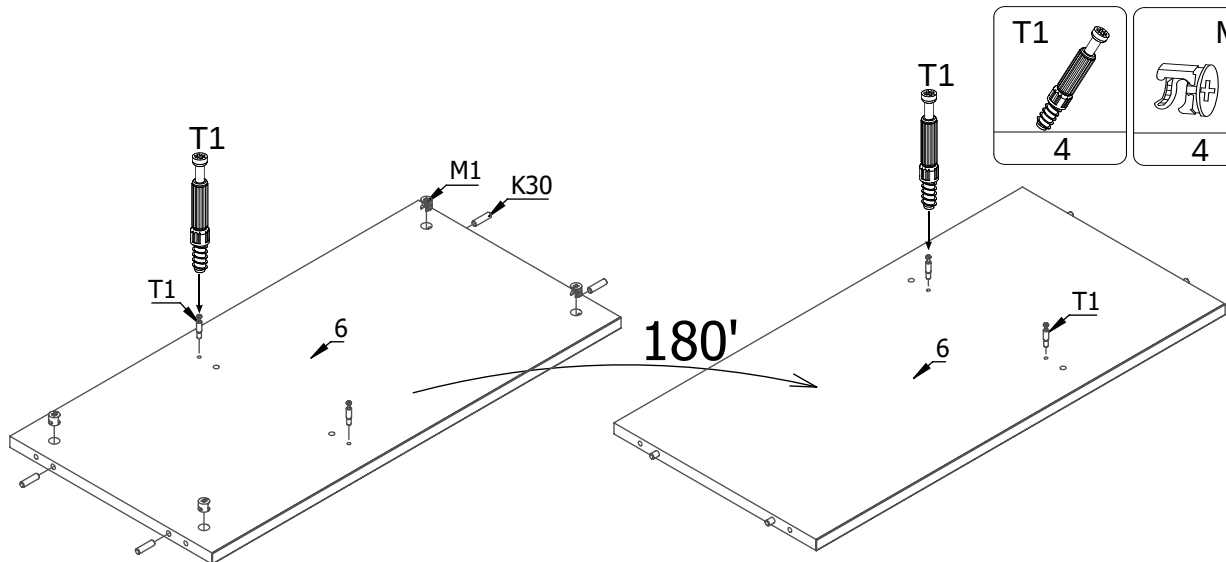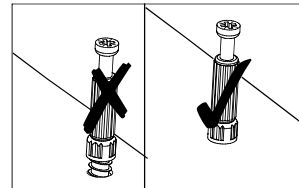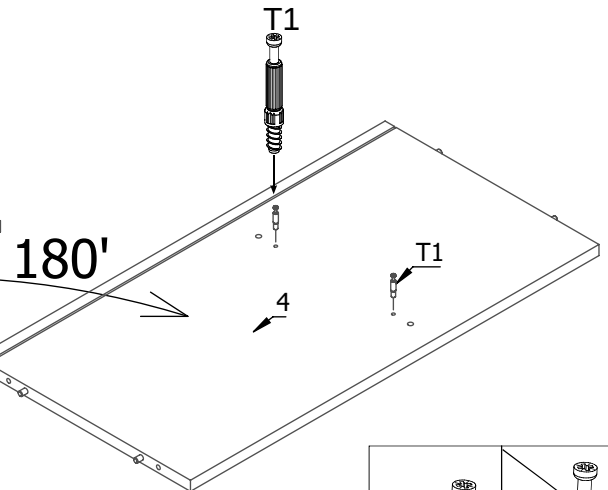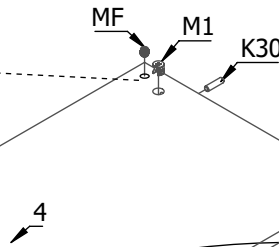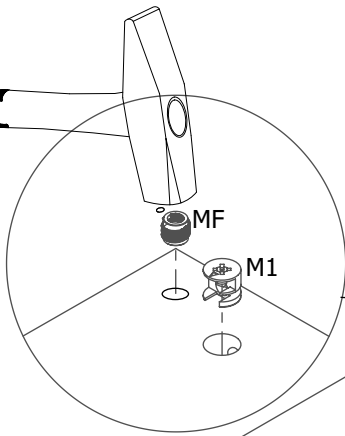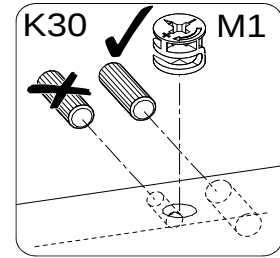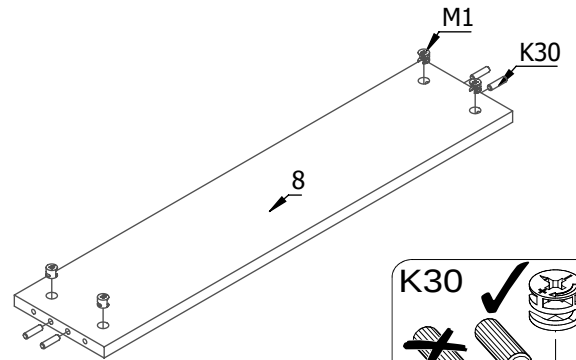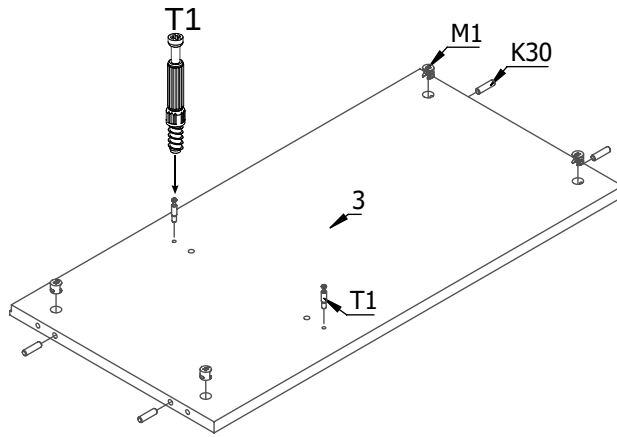


T1	M1	K30
		
4	4	4




ZP	W4x16
	
2	4

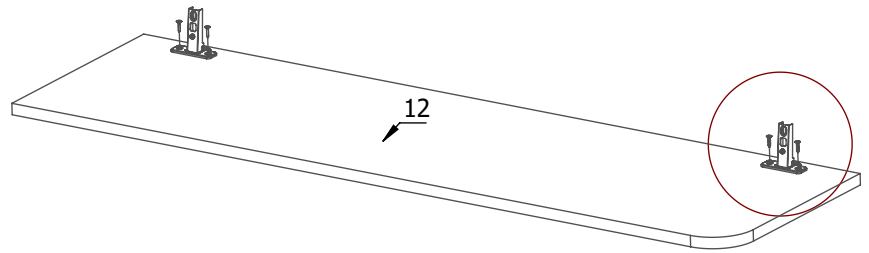
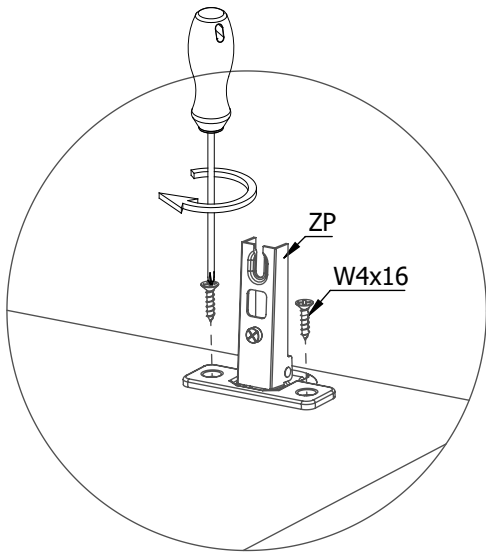


M1	K30	T1	E5x13	KF	Q	RL
						
12	18	12	12	6	1	6

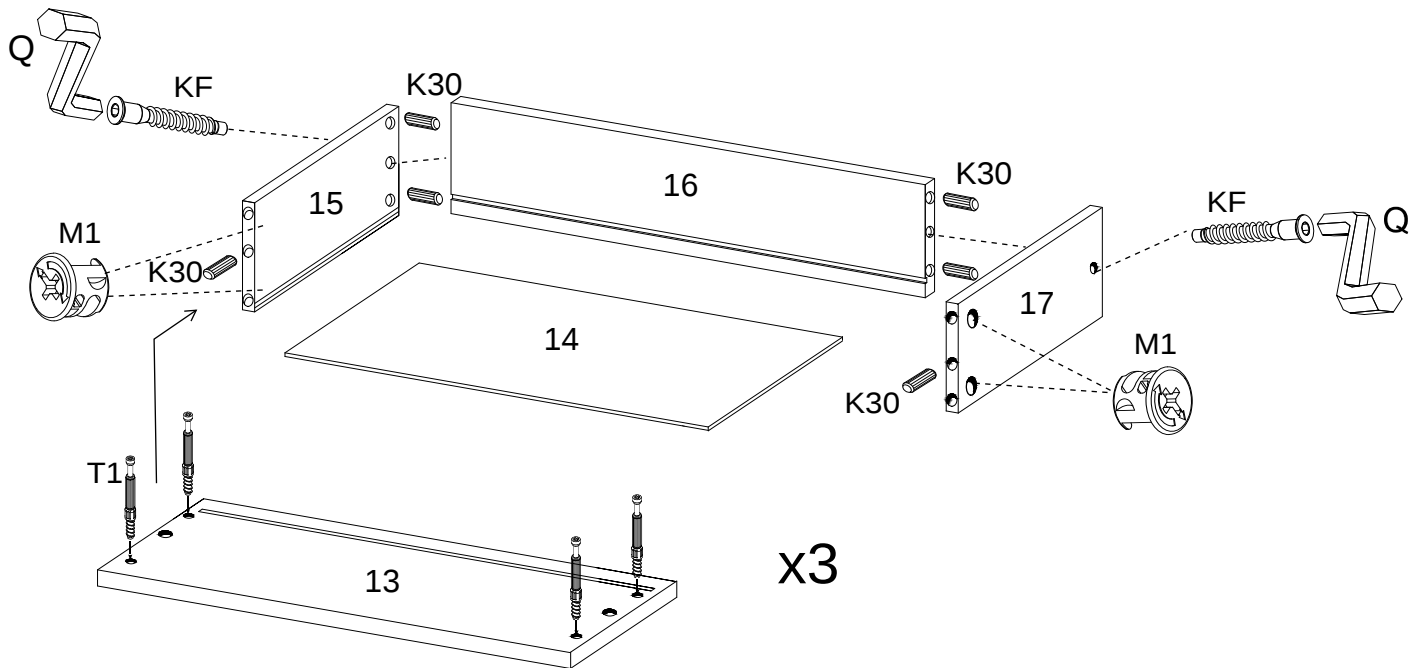


x3

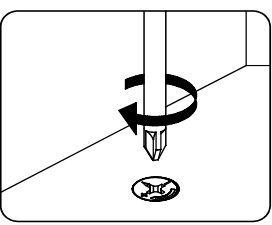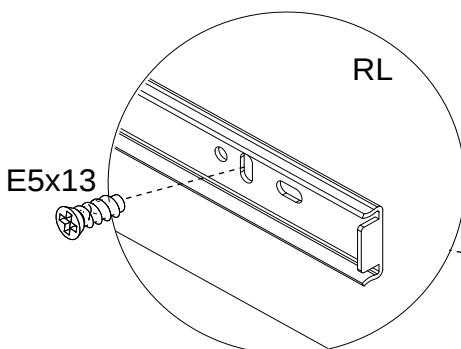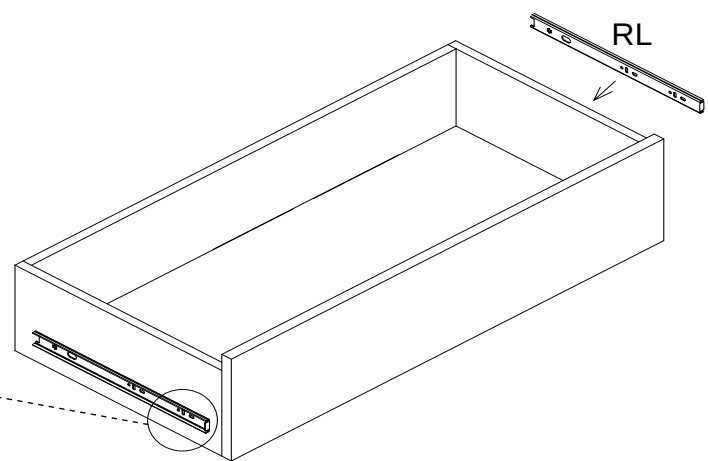


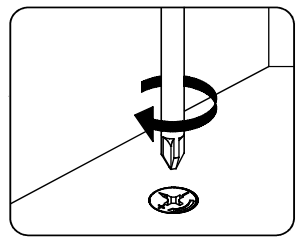


1







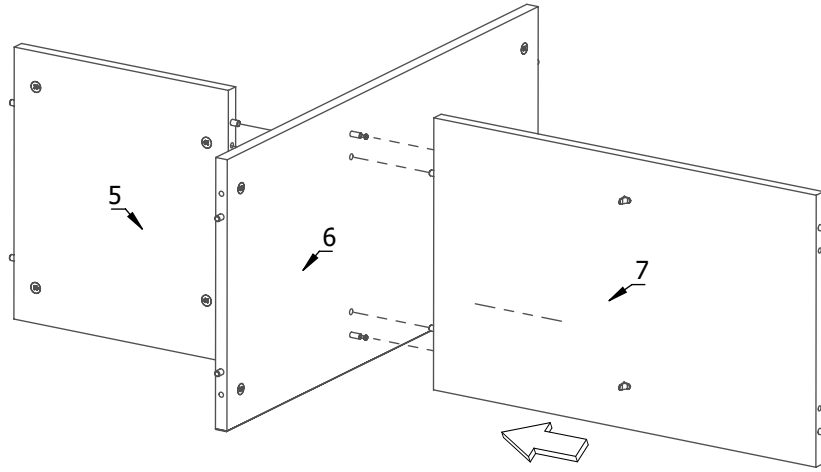


2

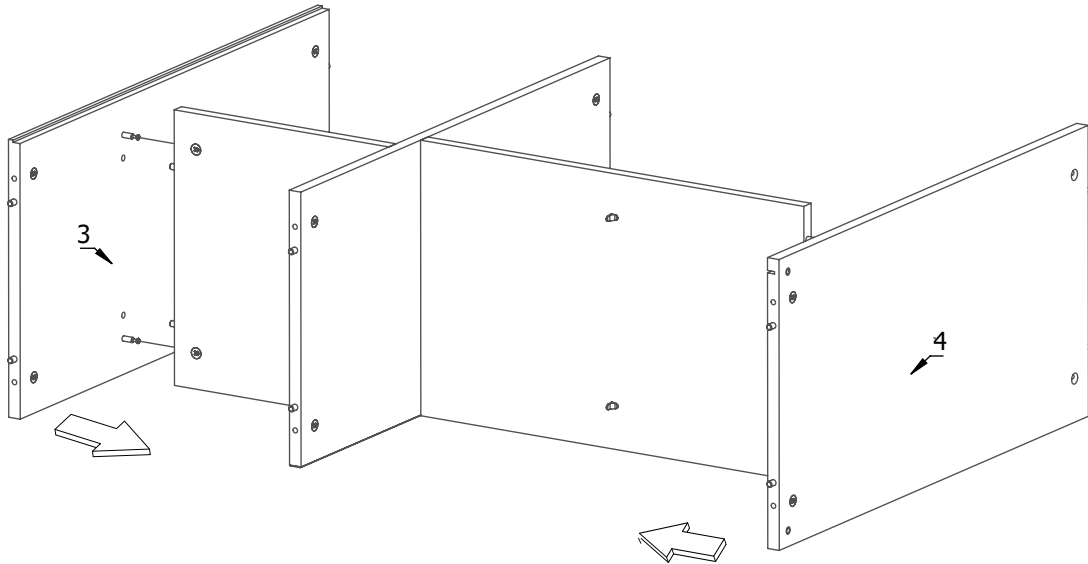


3

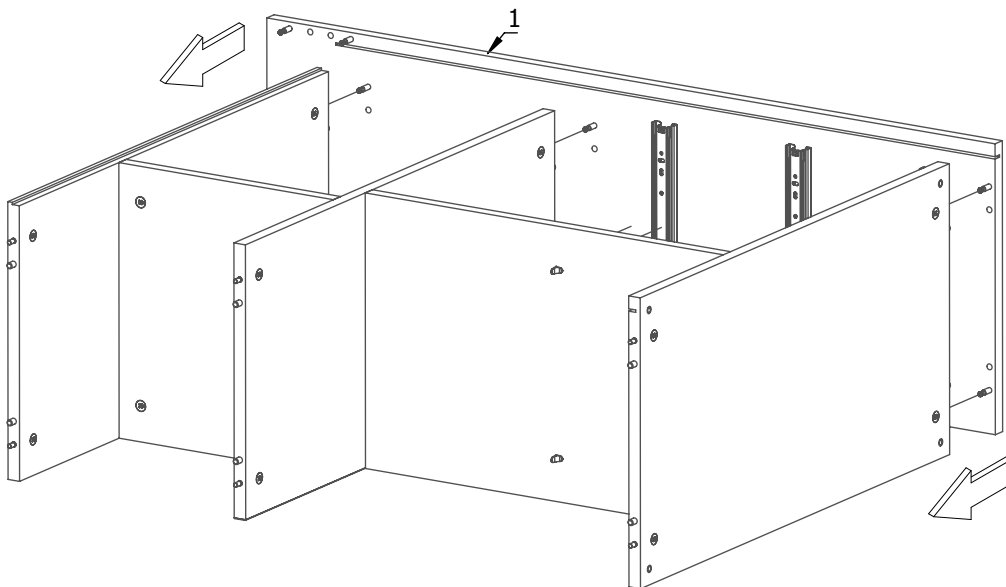


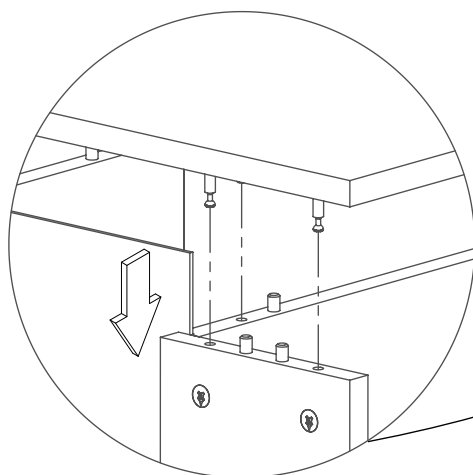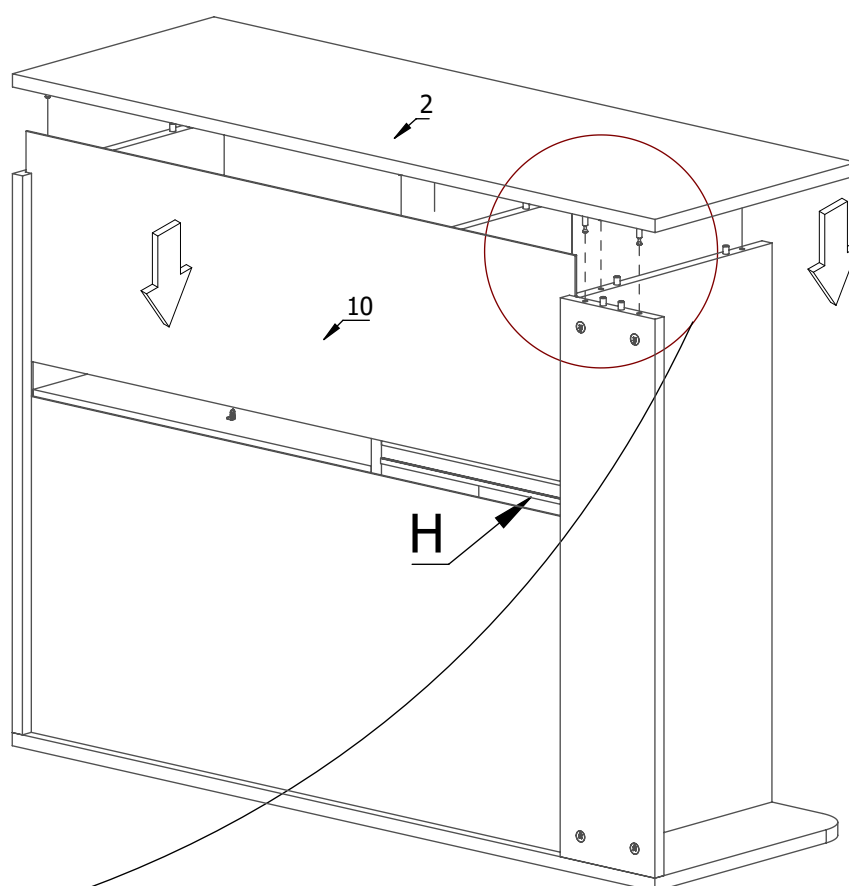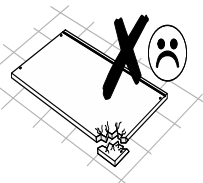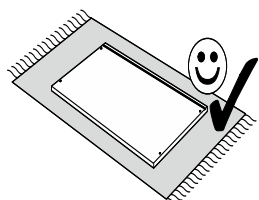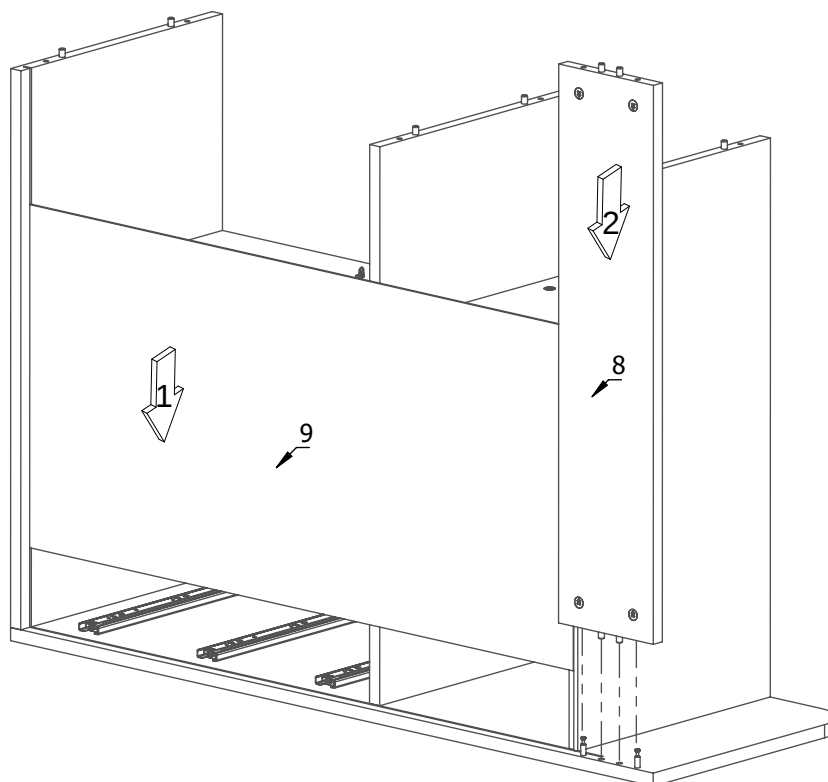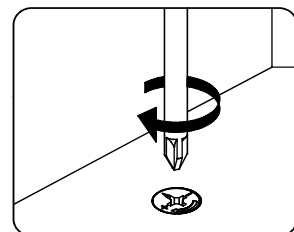

A=B

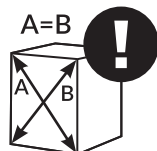

90°

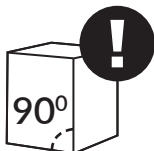

STB	SM	W3x13	ZM
8	4	4	4

A=B

W3x13

ZM

STB

SM

PP

M22

X

UM

4

3

36

3

Click

Click

12

11

13

UM

M22

PP