

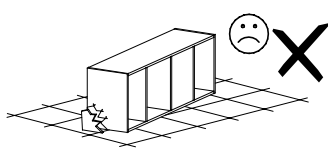
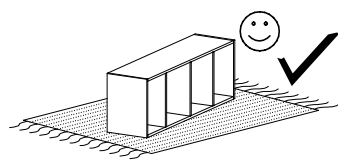


ORLANDO 8

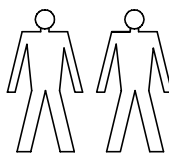


Narzędzia potrzebne do montażu

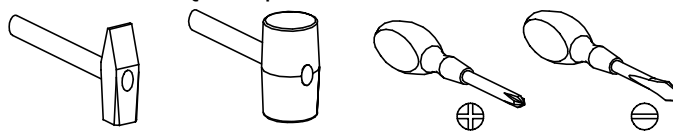

UWAGA !!!

MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI

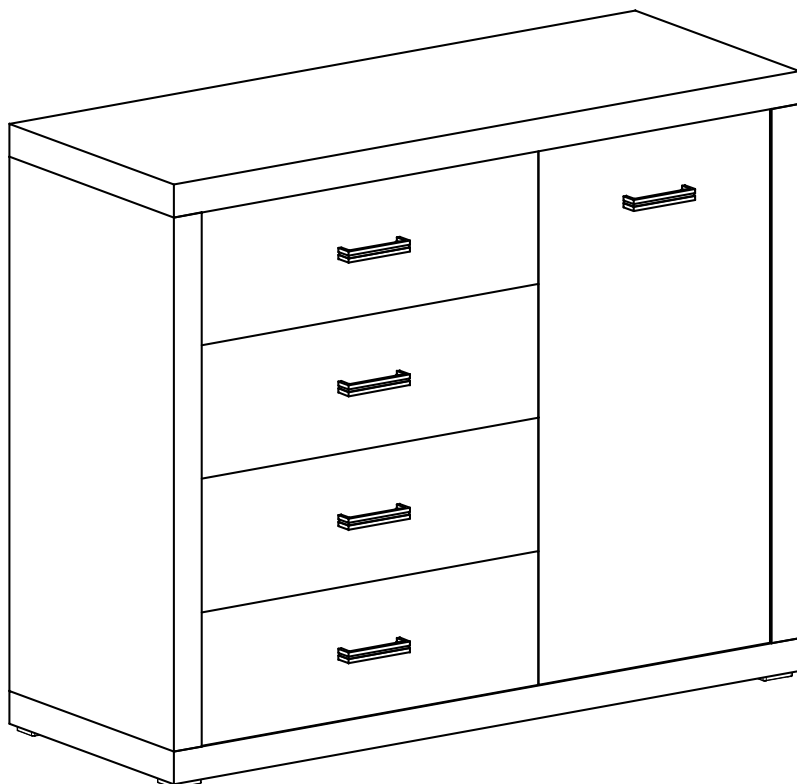


Nr	D[mm]	S[mm]	G[mm]	Ilość
1	1080	405	48	1
2	1080	405	48	1
3	780	405	48	1
4	780	388	16	1
5	780	405	48	1
6	394	320	16	1
7	773	368	16	1
8	1070	834	2,5	1
9	603	190	16	4
10	544	165	16	4
11	350	165	16	4
12	350	165	16	4
13	575	355	2,5	4


W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.




M - 65 St.
3x30 mm

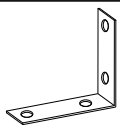


Y - 2 St.




I - 4 St.
3,5x16 mm




Q - 10 St.
3,9x25 mm




W - 5 St.




T - 4 Kpl.



F - 16 St.




P - 4 St.



N - 10 St.
4x25 mm



C1 - 1 St.

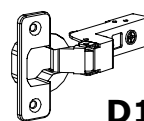

D1 - 1 St.




L - 12 St.




U - 5 St.



G - 4 St.
3,5x16 mm



C2 - 1 St.



D2 - 1 St.




S - 1 St.




E - 60 St.



B - 28 St.



K - 12 St.





Z - 1 St.

















J - 32 St.
5x13 mm

I

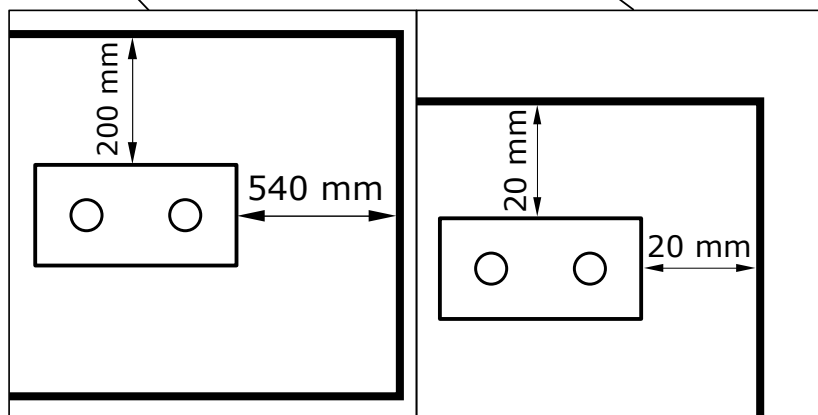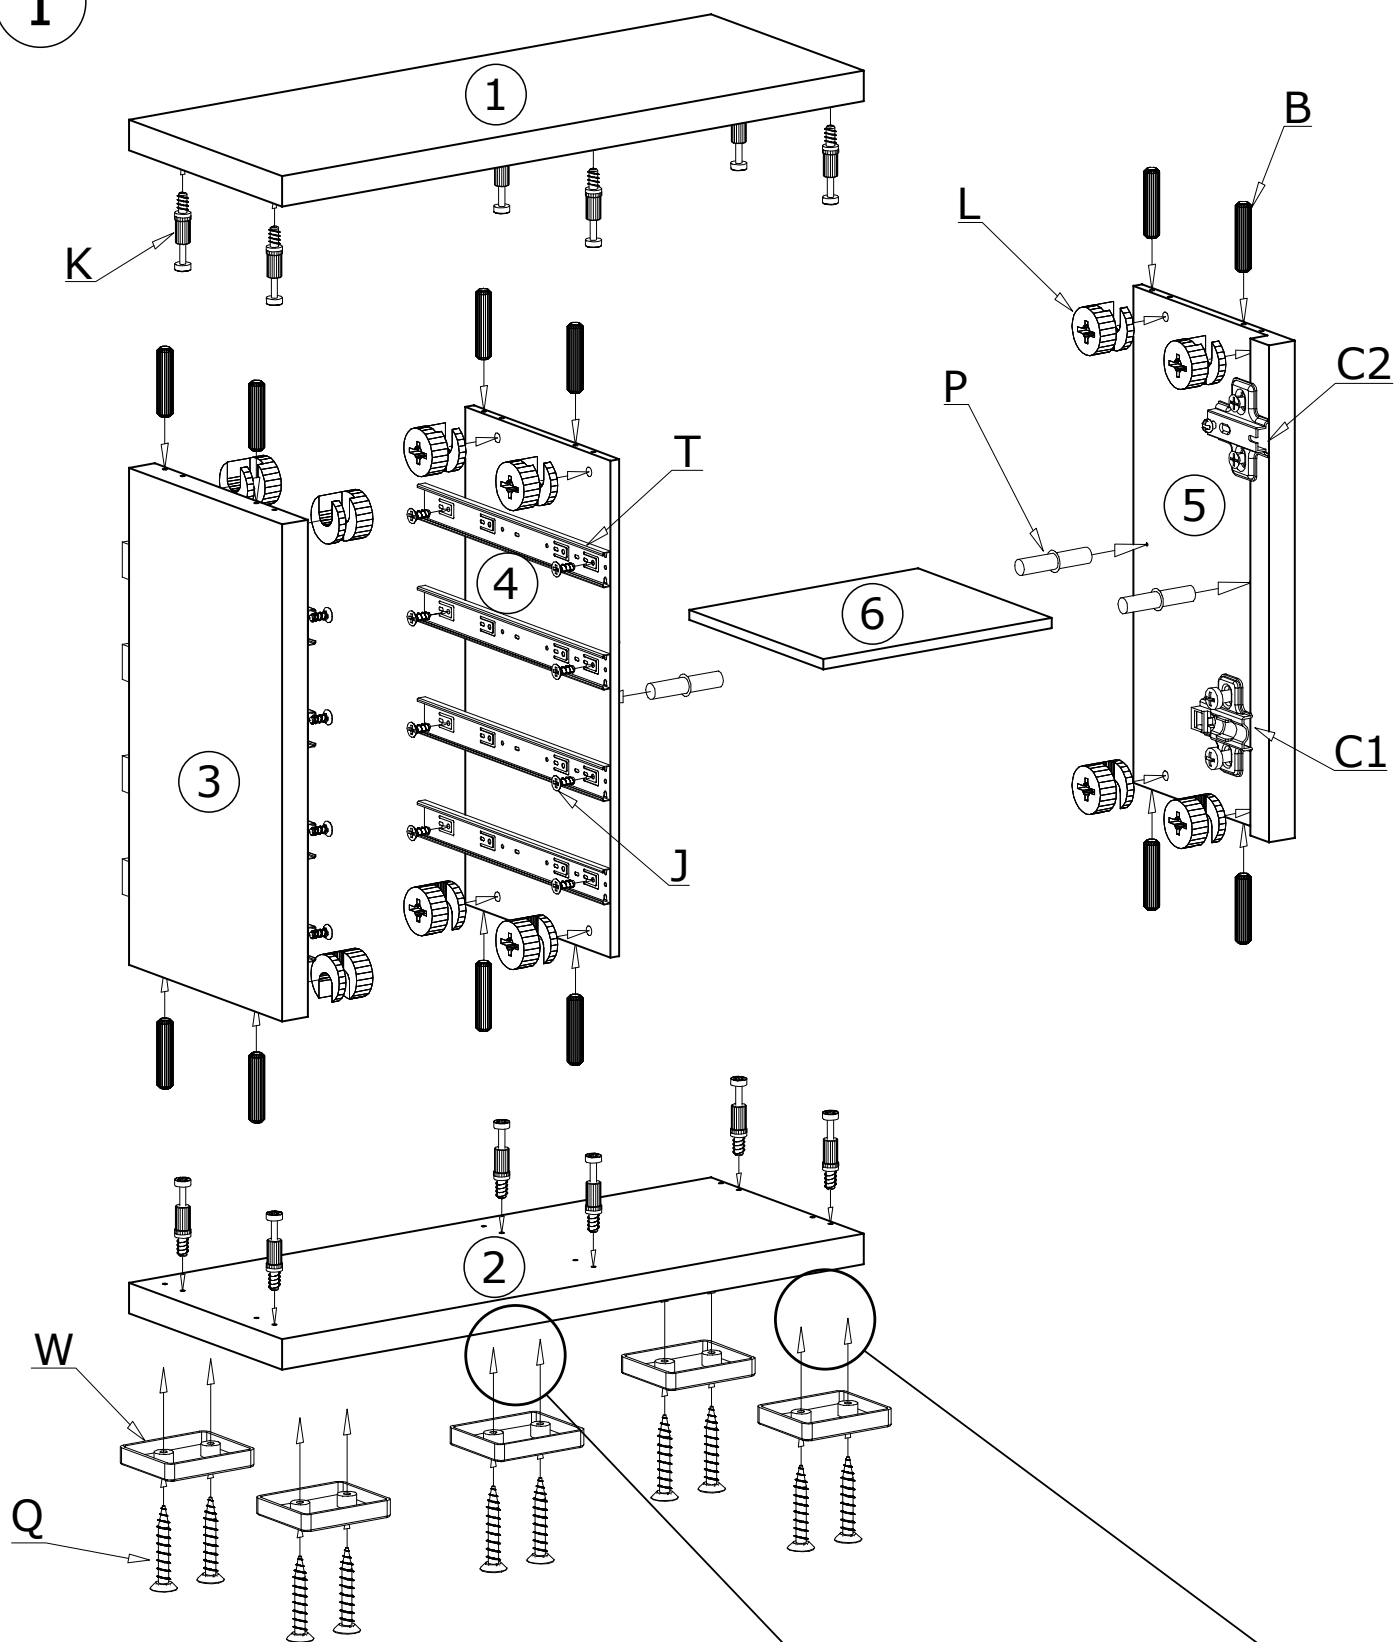


II


60X 

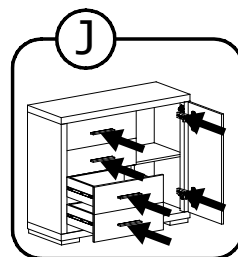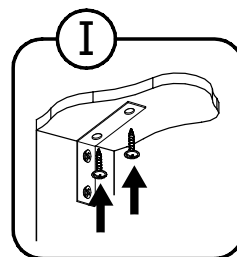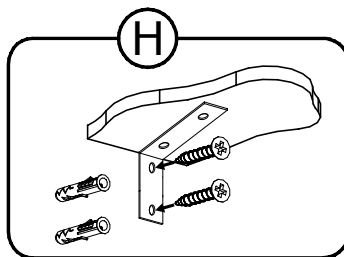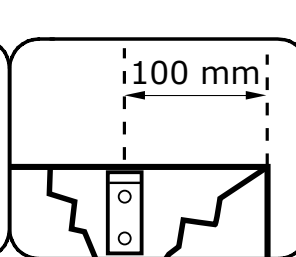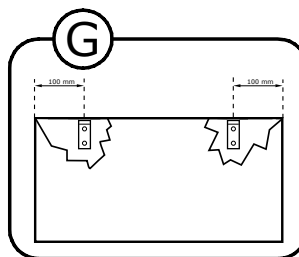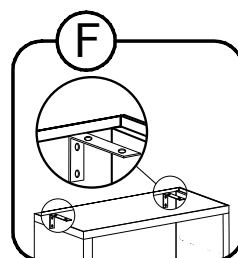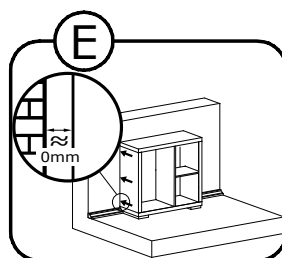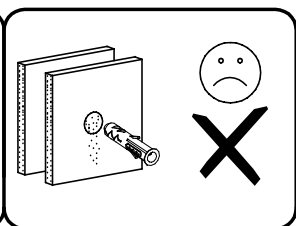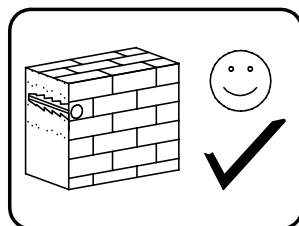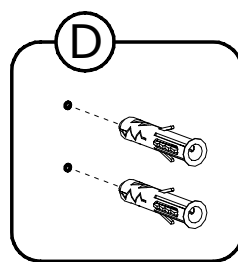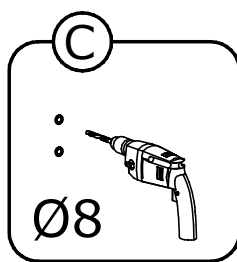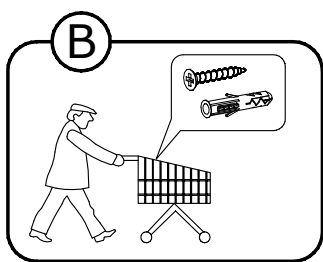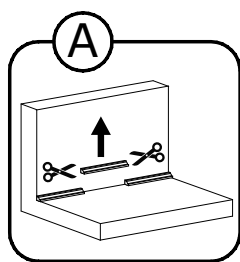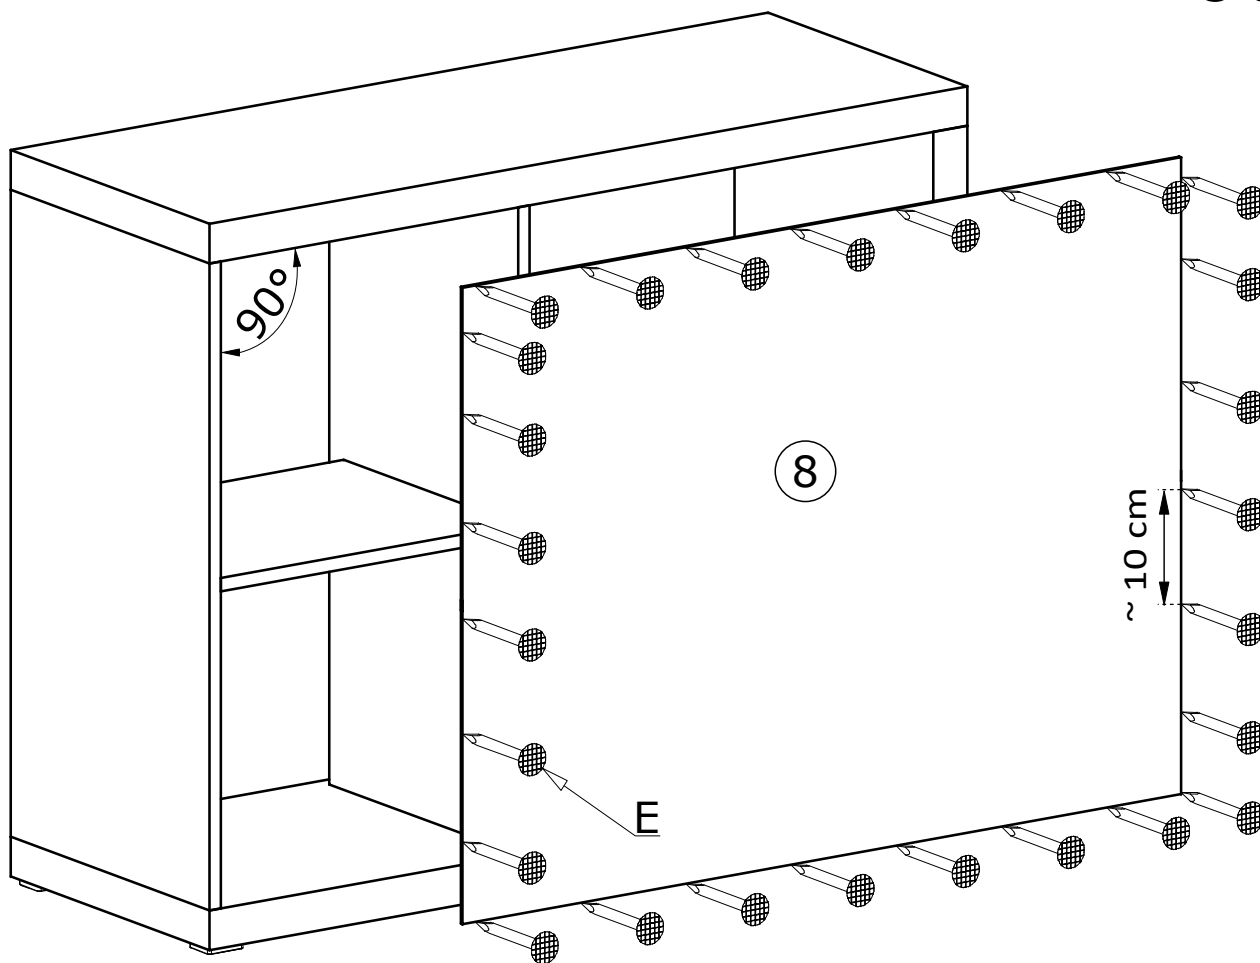

III

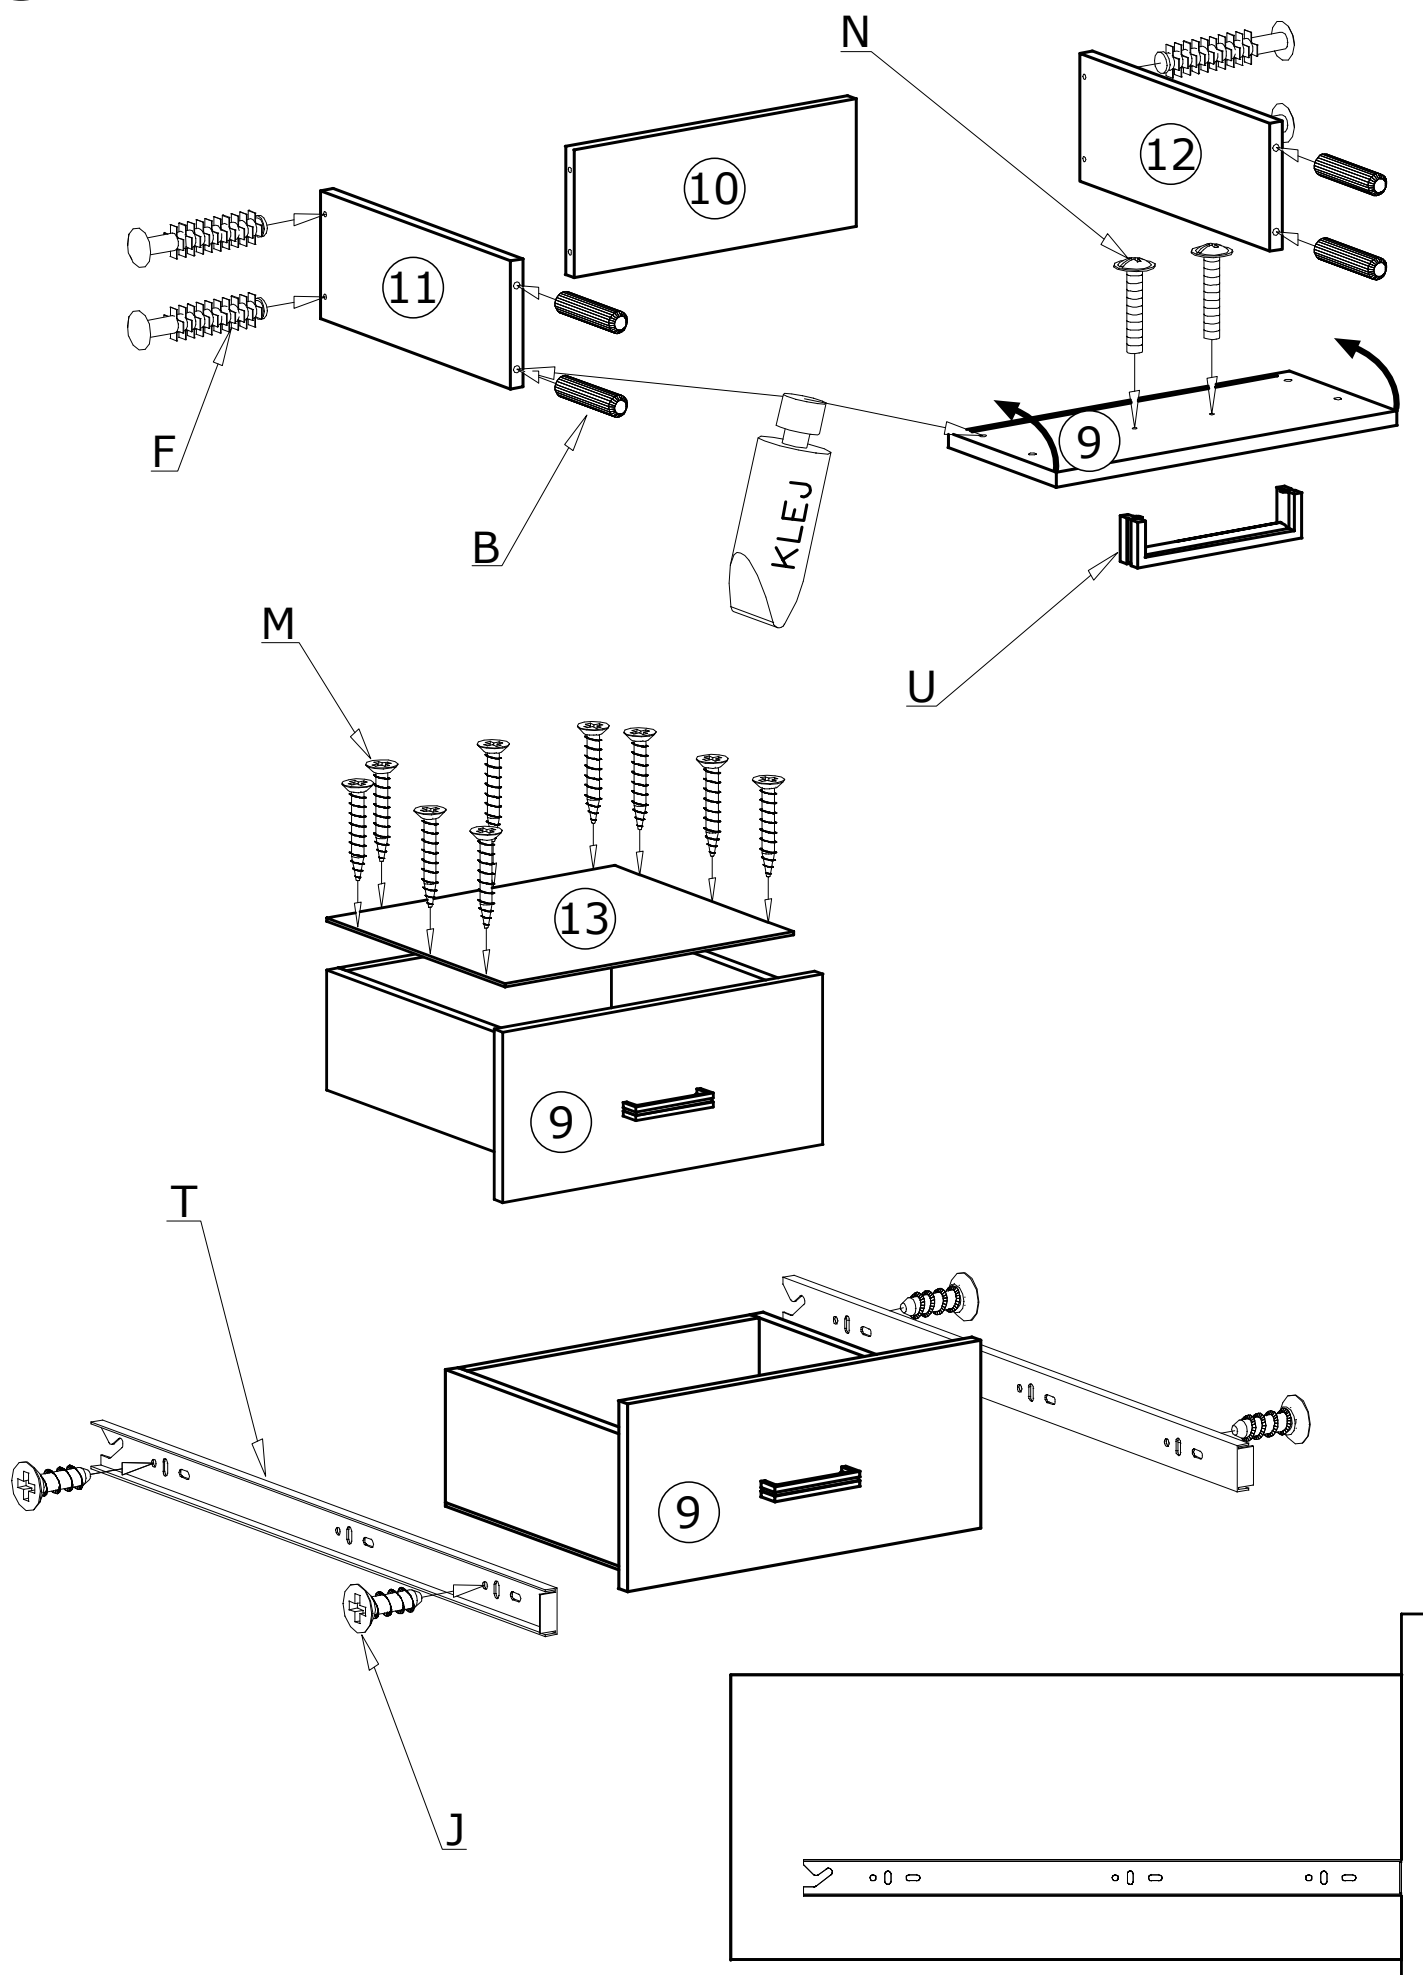

IV

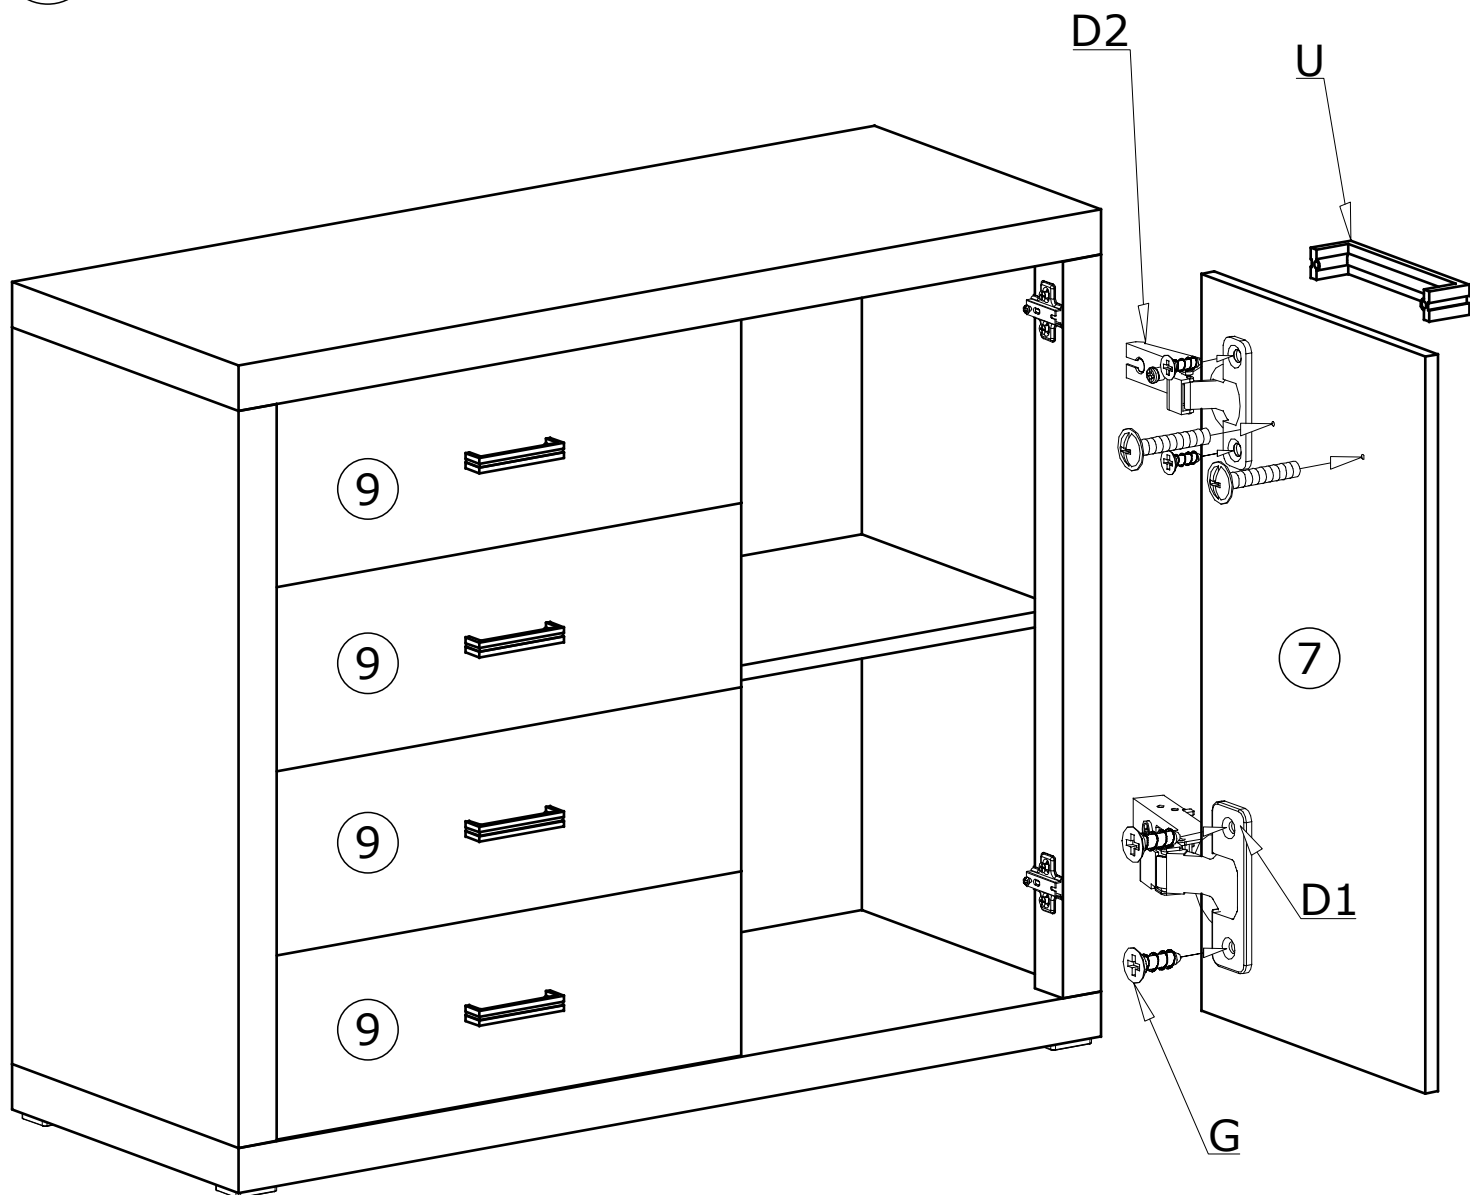

MONTAŻ/DEMONTAŻ PROWADNIC

